HYAGRO

SPARE PARTS

FOR GARDEN AND FARM MACHINES

ACCEPT OEM

Professional garden tools manufacturer

Factory price / High quality / Professional quick services

















Susan Li
Sale Manager

+86 15356426639

Mobile/Whatsapp/Wechat: +86-15356426639

susan426639@gmail.com

Factory Address: 1046 mold base, No 8, gaodengbao Road, Taizhou, Zhejiang, China.

Whatsapp scan here

Wechat scan here

SPARE PARTS LIST

CONTENTS

ENGINE SERIES

1E34F SPARE PARTS LIST 01–02

1E36F SPARE PARTS LIST 03–04

1E36F–2A SPARE PARTS LIST 05–06

1E40F–5A SPARE PARTS LIST 07–08

1E44F–2A SPARE PARTS LIST 09–10

TB 33 SPARE PARTS LIST 11–12

TB 43 SPARE PARTS LIST 13–14

TB 52 SPARE PARTS LIST 15–16

TU 26 SPARE PARTS LIST 17–18

TU 33 SPARE PARTS LIST 19–20

TU 43 SPARE PARTS LIST 21–22

1E40F–6 SPARE PARTS LIST 23–24

1E40F–6M SPARE PARTS LIST 27–28

1E40F–8A SPARE PARTS LIST 29–30

1E40F–8 SPARE PARTS LIST 31–32

1E40F–5A SPARE PARTS LIST 33–34

140FA SPARE PARTS LIST 35–36

139F SPARE PARTS LIST 37–38

139F–2 SPARE PARTS LIST 39–40

BRUSH CUTTER SERIES

CG431/CG411 SPARE PARTS LIST 41–42

ROTARY SHAFT SPARE PARTS LIST 43–44

BG328 SPARE PARTS LIST 45–46

EARTH AUGER/WHEELED BRUSH CUTTER SERIES

EARTH AUGER/WHEELED BRUSH CUTTER SPARE PARTS 47–48

BLOWER & VACUUM SERIES

1E34FB SPARE PARTS LIST 49–50

EB260 BLOWER SPARE PARTS LIST 51–52

1E48F GASOLING ENGINE SPARE PARTS LIST 53–54

EB650BLOWER SPARE PARTS LIST 55–56

HEDGE TRIMMER SERIES

1E32FL SPARE PARTS LIST 57–58

SLP600&SLP750B SPARE PARTS LIST 59–60

SPRAYER SERIES

3WF–3/3A MIST DUSTER SPARE PARTS LIST 61–62

CHAIN SAW SERIES

CS2500 SPARE PARTS LIST 63–64


CS5200/4600/4500 CHAIN SAW SPARE PARTS LIST 65–67

WATER PUMP/FLOATING PUMP SERIES

142F GASOLINE ENGINE SPARE PARTS LIST 68–70

168F–170F GASOLINE ENGINE SPARE PARTS LIST 71–72

THE PARTS LIST OF MODEL 1E34F

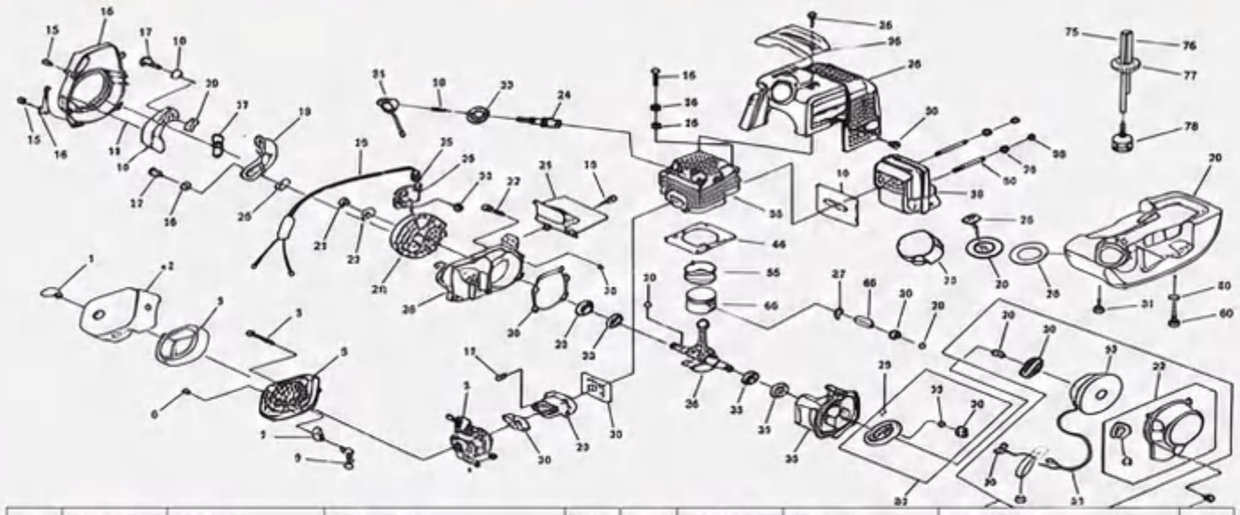

NO.	ERP NO.	PART NO.	PART NAME	QTY.	NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01020705	1E34F.1.2	SCREW	1	43	01022066	1E34F.11.1-1	ROPE GUIDE	1
2	01020649	1E34F.1.4	CLEANER OUTSIDE COVER	1	44	01022044	1E34F.11-3	ROPE	1
3	01020061	1E34F.1.1	CLEANER ELEMENT	1	45	01020055	1E36F.1-1	STARTER HANDLE	1
4	01014071	GB9074.4	SCREW M5X55	2	46	01022054	1E36F.1-5	GASKET	1
5	01020050	1E34F.1.1	CLEANER INSIDE COVER	1	47	01104013	GB9074.4	SCREW M5X14	1
6	01109012	GB845	SCREW ST4.2X12-F-H	1	48	01016067	1E34F.6	COVER	1
7	01020076	1E34F.1.3	CHOKE	1	49	01016023	1E34F.3	COVER	1
8	01020074	1E34F.1.2	CHOKE HANDLE	1	50	01104039	GB9074.4	SCREW M4X12	1
9	01105045	1E34F	CARBURETOR	1	51	01008064	1E34F.5-2	PLUG CAP	1
10	01020432	1E34F.	GASKET	1	52	01008049	1E40F-3A.6-2	CLICK SPRING	1
11	01103008	GB/T70.1	SCREW MSX30	6	53	01008066	1E34F.5-3	PLUG COVER	1
12	01020504	1E34F.4	INLET MANIFOLD	1	54	01016017	RCJ6Y	SPARK PLUG	1
13	01020431	1E34F.2	CYLINDER WASHER	1	55		GB/T70.1	SCREW MSX10	4
14	01100006	GB119	ANNUL B3X10	4	56		GB93	WASHER 5	4
15	01104002	GB9074.4	SCREW M4X16	10	57		GB848	WASHER 5	4
16	01020028	1E34F.5	FAN COVER	1	58		1E34F.3	GASKET	1
17	01114003	1E34F.12	CLUTCH STEP SCREW	2	59		1E34F.2	RUFFLER COMP	1
18	01114007	1E34F.13	WASHER	2	60		1E34F.14	BOLT	2
19	01103310	1E34F.10.1	CLUTCH SHOE COMP	6	61		GB96	WASHER 5	3
20	01114006	1E34F.11	WASHER	2	62		GB6187	NUT M6	2
21	01030318	1E34F.10-1	CLUTCH SPRING	1	63		1E34F.8	CYLINDER	1
22	01106001	GB/T6171	NUT M8X1	1	64	01024029	1E34F.9	CYLINDER WASHER	1
23	01106004	GB97.1	WASHER 8	1	65	01021008	1E34F.6-5	PISTON RING	2
24	01106068	QG-1	STOP CORD COMP	1	65	01011009	1E34F.6-6	PISTON	1
25	01106069	1E34F.5-1	PRIMARY CORD GROMMET	1	67	01013007	1E34F.6-3	PISTON PIN	1
26	01006015	UK-0882/2(1E34F)	MAGNETO STATOR	1	68	01010016	1E34F.6-4	NEEDLE BEARING	1
26A	01006016	UK-0882/2(1E34F)	MAGNETO ROTOR	1	69	01014000	1E34F.6-2	PISTON PIN CIRCLET	2
27	01103004	GB/T70.1	SCREW MSX25	4	70	01021060	EB-41S.4.1-1	FUEL TANK LID	1
28	01001009	1E34F.7.1	FRONT HALF CRANK CASE	1	71	01021056	EB-41S.4.1.1-1	AIRINLET MOUTH	1
29	01027003	1E34F.4	GUIDE PLATE	1	72	01021057	EB-41S.4.1.1-3	FRAME	1
30	01024228	1E34F.7.2	CRANK CASE GASKET	1	73	01021058	EB-41S.4.1.1-2	GASKET	1
31	01017001	1E36F.2	OIL SEAL	2	74	01021039	1E34F.9.2-2	OUTLET FUEL PIPE	1
32	01113008	GB/T276	BALL BEARING 6001/PS	2	75	01021040	1E34F.9.2-1	INLET FUEL PIPE	1
33	01101003	GB109	KEY	1	76	01021032	1E36FF.8.1.1	PRIMARY CORD GROMMET	1
34	01007031	1E34F.6.1	CRANK SHAFT COMP	1	77	01021033	1E34F.9.2-3	CLEANER	1
35	01001011	1E34F.7.3	REAR HALF CRANK CASE	1	78	01021061	GB9074.3	FUEL TANK	1
36	01009024	1E34F.8.1	STARTER PULLEY ASS'Y	1	79	01104007	GB9074.4	SCREW MSX16	1
37	01009025	1E34F.8-2	STARTER PAWL SPRING	1	80	01104007	GB9074.4	SCREW MSX16	2
38	01009026	1E34F.8-1	STARTER PAWL	1	81	01009021	1E34F.8	STARTER PULLEY ASS'S	1
39		GB9074.6	SCREW MSX10	1	82	01009027	1E34F.8	STARTER PAWL	1
40	01022041	1E34F.11-1	RECOIL SPRING	1	83	01022007	1E34F.11	STARTER	1
41	01022056	1E34F.11-2	STARTER ROPE REEL	1					
42	01022065	1E34F.11.1	RECOIL STARTER BODY	1					

1E34F





49 CYLINDER COVER



65 CYLINDER



66 PISTON



65 PISTON RING



68 PISTON PIN



70 PISTON PIN CIRCLET



34 CRANK SHAFT COMP



35 REAR HALF CRANK CASE



28 FRONT HALF CRANK CASE



19 CLUTCH SHOE COMP



26 MAGNETO STATOR



26A MAGNETO ROTOR



16 FAN COVER



29 GUIDE PLATE



59 MUFFLER COMP



12 INLET MANIFOLD



83 STARTER



30 STARTER PULLEY ASS'Y



54 SPARK PLUG



2 CLEANER OUTSIDE COVER




3 CLEANER ELEMENT



5 CLEANER INSIDE COVER



9 CARBURETOR

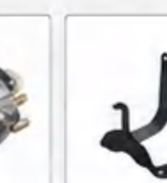

FUEL TANK STAND




10/13/30/58/94 GASKET



48 COVER

THE PARTS LIST OF MODEL 1E36F

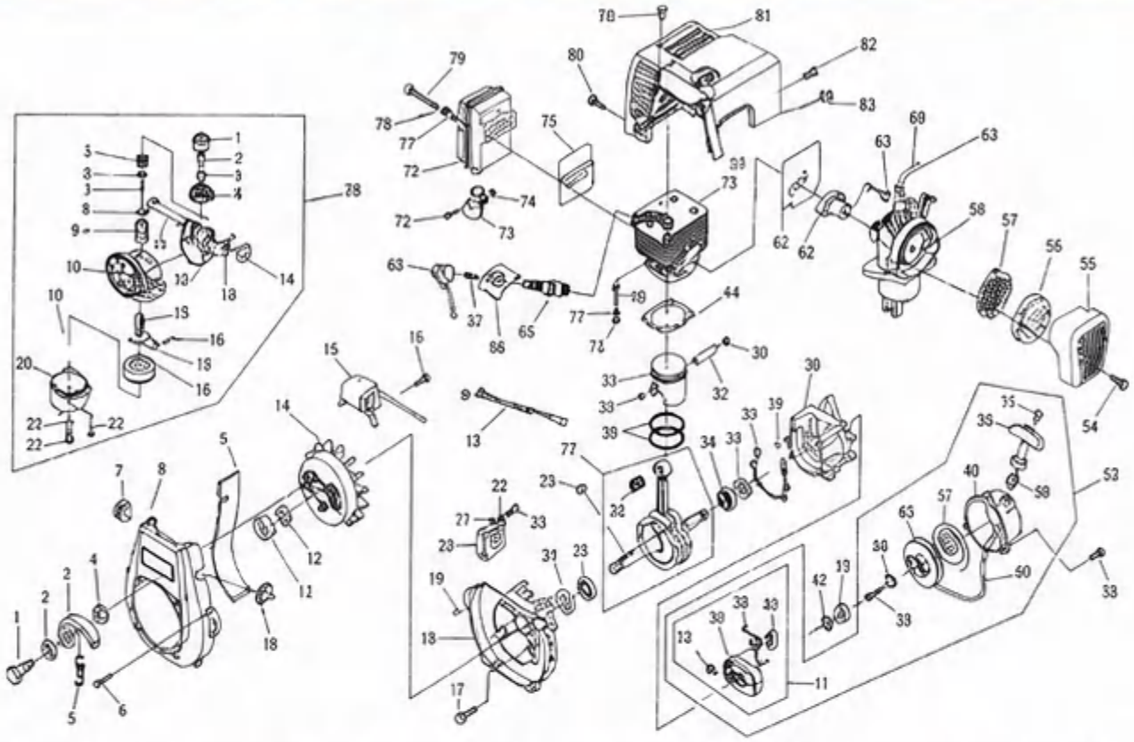

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01106004	1E36F-1	CLUTCH STEP SCREW	2
2	01104004	1E36F-2	CLUTCH WASHER A	2
3	01053001	1E36F-6.1	CLUTCH SHOE COMP	2
4	01031006	1E36F-3	ENGINE BASE COMP	2
5	01010022	1E36F-6.1	CLUTCH SPRING	4
6	01020010	GB/T70-1	SCREW MSX20	4
7	01006057	1E36F-7	PRIMARY COORD GRAMET	1
8	01022006	1E36F-4	FAN COVER	1
9	01027001	1E36F-10	GUIDE PLATE	1
10	01106005	1E36F-12	GROMMET	1
11	01106006	GB/T109	NUT M8	1
12	01106001	1E36F-9	WASHER	4
13	01006061	1E36F B.1-1	RIGHT STOP CORD COMP	1
14	01106002	1E36F B.1-2	FLY WHEEL	1
15	01018002	1E36F B.1-2	COIL	1
16	01104003	GB8074.4	SCREW M4X20	4
17	01104004	GB8074.4	SCREW MSX30	4
18	01001005	1E36F-3.3	FRONT HALF CRANK CASE	1
19	01011006	GB119	MAN[illegible]-B4X10	1
20	01106002	1E36F-3.6	HELMET	1
21		GB97.1	WASHER 6	1
22		GB97.1	WASHER 5	1
23	01007003	1E36F-8	SCREW MSX10	1
24	01017003	GB7011	BIG OIL SEAL	1
25	01136004	GB/T276	BALL BEARING 6202/P5	1
26	01101000	GB1099	WOOD-RUFF KEY	1
27	01007001	1E36F B.	CRANK SHAFT COMP	1
28	01006001	1E36F B.2	NEEDLE BEARING	1
29	01011040	1E36F-10.3	PISTON RING	2
30	01104001	1E36F-10.2	STOP RING	2
31	01012001	1E36F-10.1	PISTON	1
32	01013001	1E36F-10.1	PISTON PIN CIRCLET	2
33		GB/T276	BALL BEARING 6002/P5	1
34	01017001	1E36F-2	OIL SEAL	1
35	01024001	1E36F-3.1	CRANK CASE GASKET	1
36	01001004	1E36F-3.2	REAR HALF CRANK CASE	1

NO.	ERP NO.	PART NO.	PART NAME	QTY.
37		5B-17	STARTER PAWL SPRING	1
38		5B-18	FLOATER	1
39		5B-19	SEALING GASKET	1
40		5B-20	FLOATER CAVITY	1
41		5B-21	SWASHER	1
42		5B-21	STARTER ROPE	1
43	01961001	1E36F B.14	STARTER ARM	1
44	01042002	GB8074.4	SCREW MSX20	2
45	01022006	1E36F-1.3	STARTER ROPE REEL	1
46	01022006	1E36F-6.4	INLET MANIFOLD	1
47	01022045	1E36F-1.2	RECOL SPRING	1
48	01024006	1E36F-5.3	RECOL STARTER BODY	1
49	01068001	1E36F-1.1	ROPE GUIDE	1
50	01022055	1E36F-1.1	STARTER HANDLE	1
51	01023002	1E36F-1.5	RING	1
52	01022045	1E36F-1.4	STARTER	1
53	01104021	GB8074.4	SCREW MAx16	4
54	01104006	GB8074.4	SCREW MAx25	2
55	01022002	1E36F-16-6.1	CLEANER BODY	1
56	01021002	1E36F-12	CLEANER ELEMENT	1
57	01022006	1E36F-16-3.6	CLEANER FIXING BASE	1
58	01015036	1E36F	CARBURETOR	1
59	01008003	1E36F-16-2.2	PRIMARY CORD GRAMMET	1
60	01023004	1E36F-5	PROBE NUT	1
61	01017006	GB97.1	NUT	2
72	01107001	GB97.1	PLUNGER PISTON LID	1
78	01101000	GB1099	PLUNGER PISTON SPRING	1
80	01107001	1E36F B.	PLUNSER NEEDLE STOP RING	1
81	01018001	1E36F B.2	MAIN NEEDLE	1
82	01011040	1E36F-10.3	STOP RING	1
83	01018002	1E36F B-2	CYLINDER COVER	1

1E36F





83 CYLINDER COVER



63 CYLINDER




29/30/31/32 PISTON ASSY




31 PISTON



32 PISTON PIN



30 STOP RING



29 PISTON RING



36 REAR HALF CRANK CASE



18 FRONT HALF CRANK CASE



27 CRANK SHAFT COMP



28 NEEDLE BEARING



20 HELMET



15 COIL



14 FLY WHEEL



8 FAN COVER



3 CLUTCH SHOE COMP



52 STARTER



41 STARTER PULLEY ASSY



61 INLET MANIFOLD



58 CARBURETOR



57 CLEANER FIXING BASE



56 CLEANER ELEMENT



55 CLEANER BODY



9 GUIDE PLATE



76 MUFFLER COMP



66 PLUG COVER



GASKET ASSY



26 WOOD-RUFF KEY



34 BIG OIL SEAL



25 BALL BEARING 6203/P5




1 CLUTCH STEP SCREW



59 THROTTLE ROPE

THE PARTS LIST OF MODEL 1E36F-2A

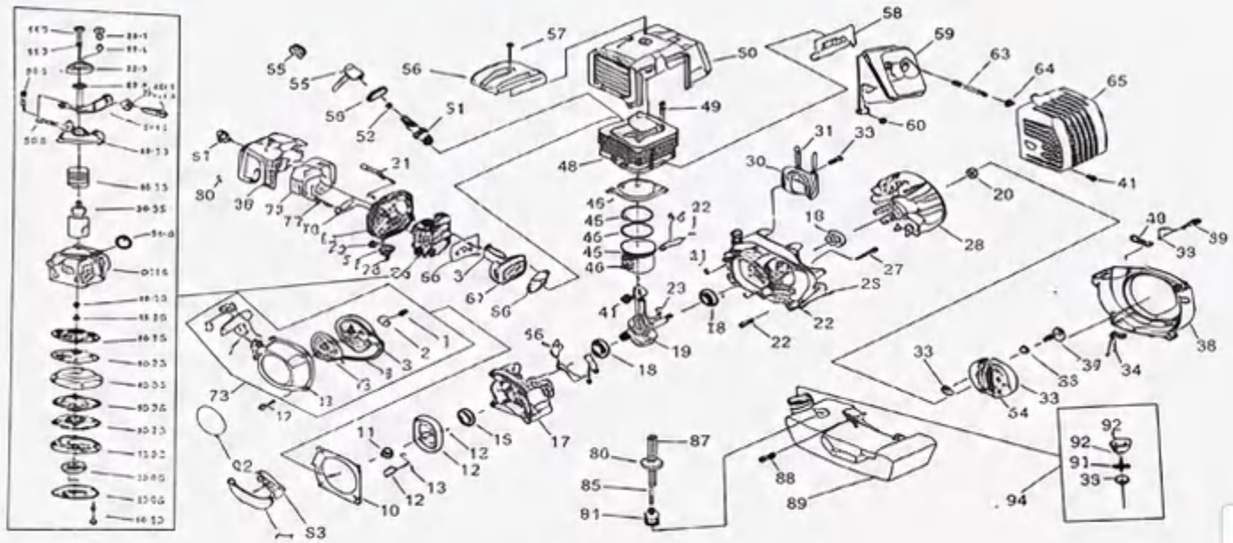

1E36F-2A



NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01106004	GB677	SCREW MSX12	1
2	01106004	GB/T97.1	WASHER	1
3	01022058	1E40F-5.11-1	START ROPE REEL	1
4	01022059		ROPE	1
5	01022038	1E40FP-32.4-7	RECOIL SPRING	1
6	01022060	1E40F-5.11.1	STAR COVER ASS'Y	1
7	01022061	1E40FP-32.4-2	START HANDLE	1
8	01022062	1E40FP-32.4-10	RING	1
9	01104009	GB9074.4	SCREW MSX20	5
10	01999036	1E40F-5-10	GASKET	1
11	01106005	GB6170	NUT M8	1
12	01022063	1E40FP-4.2	START CLAW	1
13	01022064	1E36F 1.2-2	START SPRING	1
14	01008003	1E40F-5.7-1	START REEL	1
15	01098013	GB896	STOP RING 4	1
16	01017001	1E36F 2	OIL-SEAL	2
17	01001006	1E36F-2.6-2	CRANK CASE	1
18	01113002	GB/TZ76	BEARING 6201/PS	1
19	01007005	1E36F-2.4.3	CRANK SHAFT	1
20	01101001	GB1099	KEY 3×3×13	1
21	01100002	GB119	BIN B5×12	4
22	01104006	GB9074.4	SCREW MSX12	2
23	01001005	1E36F-2.6-1	CRANK CASE	1
24	01027002	1E36F-2.11	FLASH PAN	1
25	01110002		PIN B4×10	2
26	01103039	GB/T70.1	SCREW M5×30	4
27	01106003	1E36F-2	MAGNETO ROTOR COMP	1
28	01106005	GB6177	NUT M8	1
29	01106004	1E36F-2-2-1	IGNITION COIL COMP	1
30	01106005	1E36F-2.3.1	CORD COMP	1
31	01105002	GB9074.13	BOLT MSX20	2
33	01114005	1E36F-3	WASHER	2
34	01033017	1E40F-5.6-1	SPRING	1
34	01033014	1E40F-5.6.1	EXPANDER	1
35	01114008	1E40F-5.11	WASHER	2
36	01114001	1E40F-5-12	SCREW PIN	1
37	01002017	1E36F-2-8	FAN COVER	1
38	01105002	GB9074.13	BOLT MSX20	4
39	01010004	1E36F-2.4.1	BEARING	2
40	01014001	1E36F-10-2	RING	2
41	01012003	1E36F-2.4.2	PISTON	1
43	01024005	1E36F-2.6-3	PISTON PIN	1
44	01014005	1E36F-2.10-1	PISTON RING	2
45	01024009	1E36F-2-6	GASKET	1
46	01012005	1E36F-2.4-1	PISTON RING	1
47	01024009	1E36F-2-6	GASKET	1


NO.	ERP NO.	PART NO.	PART NAME	QTY.
48	01006004	1E36F-2-4	CYLINDER	1
49	01103338	GB/T70.1	SCREW MSX20	4
50	01106006	1E36F-2.5	GUIDE COVER ASS'Y	1
51	01106001	L6	SPARK PLUG	1
52	01006049	1E40F-3A.B-2	SPRING	1
53	01006066	1E34F-5.3	PLUG CAP	1
54	01006064	1E34F-5.2	CAP	1
55	01106057	1E40F-5.3.1	PLUG	1
56	01106010	1E36F-2.7	COVER	1
57	01103008	GB/T70.1	SCREW M5×20	4
58	01024010	1E36F-2.6	GASKET	1
59	01032002	1E36F-2.2	MUFFLER	1
60	01104006	GB9074.4	SCREW MSX12	1
61	01104006	GB9074.4	BOLT	1
63	01106016	1E36F-2.9	NUT M6	2
64	01106016	GB6177	MUFFLER COVER	1
65	01016001	1E36F-2.7.7	GASKET	1
66	01024012	1E36F-2.2	ADMITTING PIPE	1
67	01025002	1E36F-2A.2	GASKET	1
68	01024011	1E36F-2A.1	CARBURETOR	1
69	01015050	1E36F-2A	CHOKER HANDLE	1
70	01106002	1E34F-1.2	STOP RING	1
71	01106030	GB/T6172	NUT	4
72	01025006	1E34F-1.1	CLEANER INSIDE COVER	1
73	01104020	GB/T9074.4	SCREW M5X30	2
74	01022063	1E40F-5.11	STARTER	1
75	01023076	1E34F-1.3	CHOKER	1
76	01109012	GB/T845	SCREW ST4.2X12	1
77	01102049	1E34A-1.1	FILTER NET	1
78	01102036	1E34F-1-1-1	CLEANER OUTSIDE COVER	1
79	01102006	1E34F-1.2	SCREW	1
80	01106003	1E40F-5A-4	STAND	1
81	01109026	1E40F-5A-2	RUBBER COVER	1
82	01022103	1E34F-9.29	CLEANER COVER	1
83	01102103	1E36F-2A.3.1-2	FUEL PIPE	1
84	01021032	1E36FF-8.1-1	PLUG	1
85	01021040	1E36F-2A.3.1-1	FUEL TANK	1
86	01104009	GB9074.4	SCREW M5×16	5
87	01021056	1E36F-2A.3.4	FUEL TANK	1
88	01021057	EB-415.4.1.1-3	STAND	1
89	01021058	EB-415.4.1.1-3	GASKET	1
90	01021059	EB-415.4.1.1-2	AIRSCOOP	1
91	01021060	EB-415.4.1.1	FUEL TANK LD	1
92	01021061	EB-415.4.1	LID ASS'Y	1
94	01099062	EB-415.4.1	LID ASS'Y	1



50 GUIDE COVER ASS'Y



48 CYLINDER

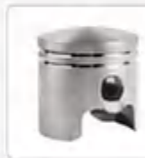

43 PISTON



46 PISTON RING



44 PISTON PIN



42 RING



19 CRANK SHAFT



17 CRANK CASE



23 CRANK CASE



38 FAN COVER



28 MAGNETO ROTOR COMP



35 EXPANDER



67 ADMITTING PIPE



56 COVER



73 CLEANER INSIDE COVER



78 FILTER NET



79 CLEANER OUTSIDE COVER



69 CARBURETOR



59 MUFFLER



65 MUFFLER COVER



89 FUEL TANK



94 LID ASS'Y



75 STARTER



14 START REEL



30 IGNITION COIL COMP




FUEL TANK STAND



GASKET ASSY

THE PARTS LIST OF MODEL 1E40F-5A

1E40F-5A
GASOLINE ENGINE

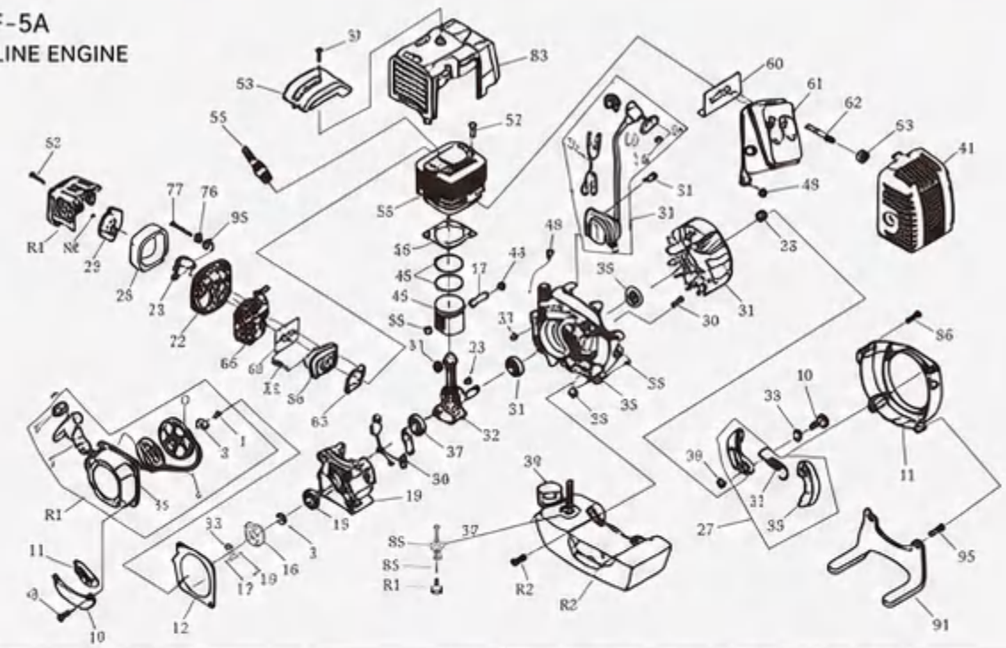

NO.	ERP NO.	PART NUMBER	PART NAME	QYT.
1	0111013	GB67	SCREW MSX12-9.8-DZ	1
2	0114012	1E40F-5.11-2	WASHER	1
3	0102058	1E40F-5.11-1	START ROPE REEL	1
4	0102059		ROPE	1
5	0102038	1E40FP-3Z.4-7	RECOL SPRING	1
6	0102060	1E40F-5.11.1	START COVAR ASS'Y	1
7	0102061	1E40FP-3Z.4-2	START HANDLE	1
8	0102062	1E40FP-3Z.4.10	RING	1
9	0110504	GB/T70.1	SCREW MSX25	6
10	0108051	1E40F-5.4	STAND	1
11	0105026	1E40F-5A-2	RUBBER COVER	1
12	0108036	1E40F-5.10	GASKET	1
13	0110605	GB/T6170	NUT M8	1
14	0102063	1E40FP-4.2	START CLAW	1
15	0102064	1E36F-1.2.2	START SPERING	1
16	0108003	1E40F-5.7.1	START REEL	1
17	0108013	GB896	STOP RING	4
18	0107011	1E36F 2	OIL-SEAL	2
19	0101006	1E36F-2.6-2	CRANK CASE	1
20	0113002	GB/T276	BEARING 6202/P4	1
21	0107005	1E36F-2.4.3	CRANK SHAFT	1
22	0111001	GB109	KEY 3X5X13	2
24	0104002	GB6074.4	SCREW MSX20	1
25	0110605	1E40F-5	PRIMARY CORD GROMMET	1
26	0108015	UK-0B82/7 (1E34F)	MAGNETO STATOR	1
26A	0106016	UK-0B82/7 (1E34F)	MAGNETO ROTOR	1
27	0110504	GB/T70.1	SCREW MSX25	4
28	0101009	1E34F-7.1	FRONT HALF CRANK CASE	1
29	0102703	1E34F-4	GUIDE PLATE	1
30	0102608	1E34F-7.2	CRANK CASE GASKET	1
31	01017001	1E36F.2	OIL SEAL	2
32	01113008	GB/T276	BALL BEARING 6001/P5	2
33	0101003	GB1099	KEY	1
34	01007031	1E34F-6.1	CRANK SHAFT COMP	1
35	0106101	1E34F-7.3	REAR HALF CRANK CASE	1
36	0109024	1E34F-8.1	STARTER PULLEY ASS'Y	1
37	0109025	1E34F-8.2	STARTER PAWL SPRING	1
38	0109026	1E34F-8.1	STARTER PAWL	1
39		GB6074.6	SCREW M5X10	1
40	01022041	1E34F-11.1	RECOIL SPRING	1
41	01022056	1E34F-11.2	STARTER ROPE REEL	1
42	01022065	1E34F-11.1	RECOIL STARTER BODY	1
43	01023041	1E36F-1.11-1	GUIDE	1
44	01022044	1E34F-11.3	ROPE	1
45	01020055	1E36F.1.11	STARTER HANDLE	1
46	0107015	1E36F-1.5	GASKET	1
47	01016001	GB9074.4	SCREW MSX14	1
48	01018067	1E34F-6	COVER	1
49	01018023	1E34F-3	COVER	1
50	01001023	1E36F-3.4-8.2	PLUG CAP	1
51	01008046	GB97.1	SPARK PLUG	1
52	01008049		SPRING	1
53	01018019	1E40F-5.8	COVER	1
54	01008067	1E40F-5.3-1	PLUG	1
55	01024002	1E40F-5.5	GASKET	1
56	01032003	1E40F-5	MUFFLER	1
57	01110008	GB6177	BOLT	2
58		GB6770.1	NUT M6	2
59	01108041	1E40F-5.7	MUFFLER COVER	1
60	01024022	1E40F-5.2	GASKET	1
61	01025002	1E36F-2A.2	ADMITTING PIPE	1
62	01024021	1E40F-5A-1	GASKET	1
63	01015048	1E34F-2A.1	CARBURETOR	1
64	01108013	GB845	SCREW ST2.9X6.5	1
65		GB97.1	WASHER 3	1
66	01020077	1E40F-5A.11-1	CHOKE HANDLE	1
67	01020046	1E40F-5A.11.1	INSIDE COVER	1
68	01020078	1E40F-5A.11-2	CHOKE	1
69	01020037	1E40F-5A.12	BAFFLE	1
70	01103049	GB93	WASHER 5	2
71		GB970.1	WASHER 5	2
72	01020036	1E34F-1.1	FILTER NET	1
73	01020035	1E40F-5A.1-2	INSIDE COVER	1
74	01020035	1E40F-5A.1-1	OUT SIDE COVER	1
81	0104007	GB6074.4	BOLT M5X16	1
82	01020003	1E40F-5.11	STARTER	1
83	01021033	1E34F-9.2-3	CLEANER COVER	1
84	01021039	1E36F-5A.2-2	FUEL PIPE	1
85	01021032	1E36F-8.1-1	PLUG	1
86	01021040	1E40F-5A.2-1	FUEL PIPE	1
87	01021062	1E40F-5A.4.1	FUEL TANK	1
88	01021060	EB-415.4.1-1	FUEL TANK LID	1
90	01021069	EB-415.4.1.1	AIRSCOOP	1
91	01021068	EB-415.4.1.2	GASKET	1
92	01021097	EB-415.4.1.3	STAND	1
93	01021058	EB-415.4.1.1	LID ASS'Y	1
94	01990652	EB-415.4.1	OUTLET	1
95		1E40F-5.10-1	STOP RING	1

1E40F-5A





53	GUIDE COVER ASS'Y	58	COVER	51	CYLINDER	46	PISTON	47	PISTON PIN	49	PISTON RING	45	CIRCLIP



22	CRANK SHAFT	26	CRANK CASE	19	CRANK CASE	33	IGNITION COIL COMP.	31	MAGNETO ROTOR COMP.	38	EXPANDER	41	FAN COVER




83	STARTER	16	START REEL	12	GASKET	66	ADMITTING PIPE	81	OUT SIDE COVER	79	INSIDE COVER	72	INSIDE COVER



61	MUFFLER	64	MUFFLER COVER	88	FUEL TANK	FUEL TANK STAND	94	LID ASS'Y	GASKET ASS'Y

THE PARTS LIST OF MODEL 1E44F-2A

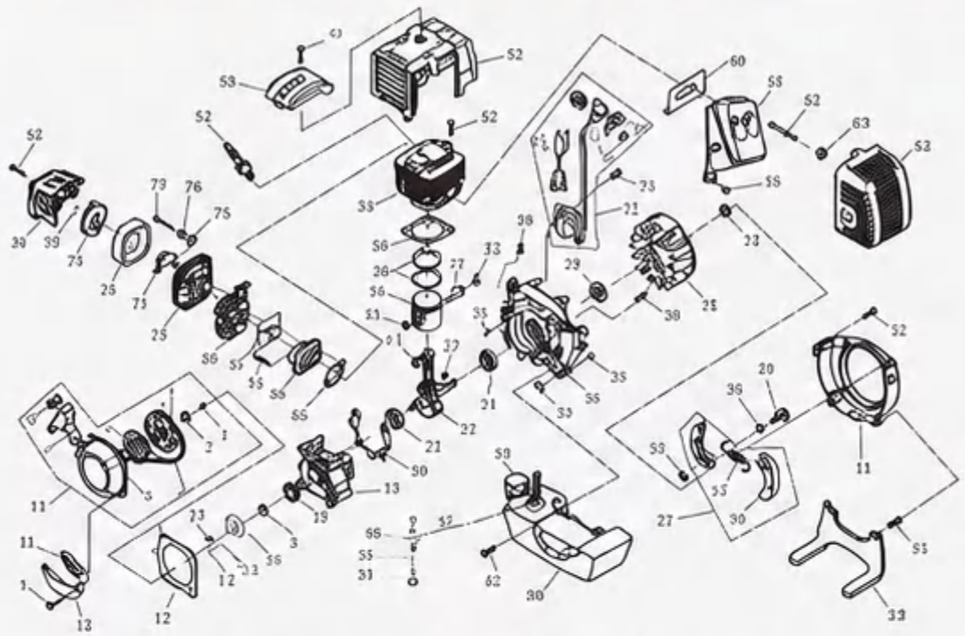

NO.	ERP NO.	PART MODEL	PART NAME	QTY.	NO.	ERP NO.	PART MODEL	PART NAME	QTY.
1	01111013	GB67	SCREW MSX12-9.8-DZ	1	26	01107006	1E40F-5.9	OIL-SEAL	1
2	01114012	1E40F-5.11-2	WASHER	1	27	01104014	GB879.1	SCREW M5X25	4
3	01022058	1E40F-5.11-1	START ROPE REEL	1	28	01108008	GB/T6170	NUT M8	1
4	01025059	GB9707	RECOIL SPRING	1	29	01108009	GB6177	NUT M10	1
5	01022036	1E40FP-32.4-2-7	START COVAR ASSY	1	30	01105002	GB9074.13	CORD COMP	2
6	01022060	1E40F-5.11-1	START HANDLE	1	31	01114005	1E36F-3	WASHER B	2
7	01022061	1E40FP-32.4-2-10	RING	1	32	01103017	1E40F-5.6-1	SPRING	2
8	01103004	GB/T70.1	SCREW M5X25	6	33	01033014	1E40F-5.6.1	EXPANDER	1
9	01990061	1E40F-5A-4	STAND	1	34	01114008	1E40F-5-11	WASHER	2
10	01990026	1E40F-5A-2	RUBBER COVER	1	35	01114010	1E40F-5.12	SCREW PIN	1
11	01999036	1E40F-5.10	GASKET	1	36	01102023	1E40F-5.9	FAN COVER	1
12	01108005	GB/T6170	NUT M8	2	37	01105004	GB9074.13	BOLT M5X25	1
13	01022063	1E40FP-4.2	START CLAW	1	38	01010006	1E44F-2A.2-3	BEARING	1
16	01022064	1E36F-1.2-2	START SPRING	1	39	01104003	1E40F-03.02.01	PING	2
16	01009003	1E40F-5.7-1	START REEL	1	40	01102008	1E44F-2A.2-1	PISTON	1
16	01098013	GB896	STOP RING	1	41	01103006	1E44F-2A.2-2	PISTON PIN	1
17	01107001	1E36F-2	OIL-SEAL	1	42	01104006	GB9074.4	BOLT M5X12	2
18	01010008	1E40F-5.8-2	CRANK CASE	1	43	01011007	1E44F 2A.2-4	PISTON RING	2
19	01124014	1E40F-5.8-4	GASKET	1	44	01012058	GB-415.4.1.1-2	GASKET	1
20	01113004	GB/T276	BEARING 6202/P4	2	45	01012057	GB-415.4.1.1-3	STAND	1
21	01007011	1E44F-2A.2.1-1	CRANK SHAFT	1	46	01999062	BB-415.4.1.1-3	LID ASSY	1
22	01101010	GB1099	KEY	1	47	01103006	1E44F-2A.2-2	OUTLET	1
23	01100004	GB119	PIN B5X12	2	48	01101007	1E44F-5.10-2	STOP RING	1
24	01010007	1E40F-5.8-1	CRANK CASE	1	49	01101007	1E44F-5.10-2	STOP RING	1
25	01100002	GB119	PIN B4X10	2					

1E44F-2A





53 GUIDE COVER ASSY



58 COVER



51 CYLINDER



46 PISTON



47 PISTON PIN



49 PISTON RING



45 RING



22 CRANK SHAFT



26 CRANK CASE



19 CRANK CASE



33 IGNITION COIL COMP



31 MAGNETO ROTOR COMP



38 EXPANDER



41 FAN COVER



83 STARTER



16 START REEL



12 GASKET



66 ADMITTING PIPE



81 OUT SIDE COVER



79 INSIDE COVER



72 INSIDE COVER



61 MUFFLER



64 MUFFLER COVER



88 FUEL TANK



87 FUEL TANK STAND




94 LID ASSY



93 GASKET ASSY

THE PARTS LIST OF MODEL TB33

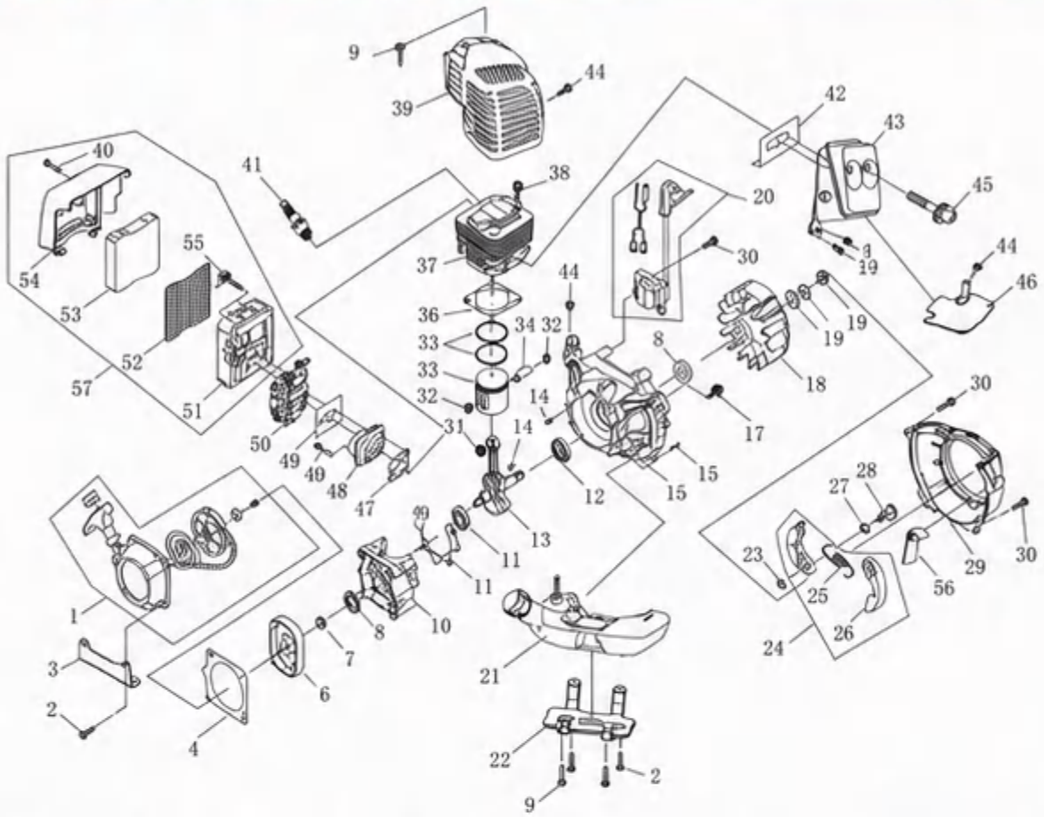

NO.	ERP NO.	PART NO.	PART NAME	QTY	NO.	ERP NO.	PART NO.	PART NAME	QTY
1	01022051	1E36F-2C	STARTER	1	29	01022021	TB33	FAN CASE	1
2	01104009	GB/T9074.4	SCREW M5X20	6	30	01103008	GB/T70.1	SCREW M5X20	8
3	01999034	TB43	OIL TANK SUPPORT	1	31	01101004	1E36F-2.4.1	NEEDLE BEARING	1
4	01999036	1E40F-5-10	STARTER GASKET	1	32	01014001	1E36F-10-2	RING	2
5	01108005	GB/T6170	NUTS	2	33	01012003	1E36F-2.4.2	PISTON	1
6	01008023	1E36F-2C	START PULLY	1	34	01013001	1E36F-10-1	PISTON PIN	1
7	01108004	GB/T97.1	WASHER	2	35	01011005	1E36F-2.10-1	PISTON RING	2
8	01107001	1E36F-2	OIL SEAL 12X22X7	1	36	01204009	1E36F-2-6	CYLINDER GASKET	1
9	01104007	GB/T9074.4	SCREW M6X16	4	37	01024012	1E36F-2-A	CYLINDER	1
10	01001006	1E36F-2.6-2	CRANK CASE	1	38	01103038	GB/T70.1	SCREW M5X20	4
11	01204008	1E36F-2.6-3	CRANK CASE GASKET	1	39	01014010	TB33	CYLINDER COVER	1
12	01113002	GB/T276	BEARING 6201/P5	2	40	01104030	GB/T9074.4	SCREW M5X14	1
13	01007005	1E36F-2.4.3	CRANK SHAFT	1	41	01106001	GB/T267.2	SPARK PLUG	1
14	01101002	GB/T1099	KEY 3XSX13	1	42	01006004	1E36F-2.5	MUFFLER GASKET	1
15	01100002	GB/T119	PIN 4X10	1	43	01032002	1E36F-2.2	MUFFLER	1
16	01101005	1E36F-2.6-1	CRANK CASE	1	44	01104006	GB/T9074.4	SCREW M5X12	2
17	01103039	GB/T70.1	SCREW M6X30	4	45	01103049	GB/T70.1	SCREW M5X55	2
18	01008003	1E36F-2	FLY WHEEL	1	46	01026009	1E36F-2C	CLAPBOARD	1
19	01107005	GB/T93	WASHER	1	47	01027002	1E36F-2-2	ADMITTING PIPE GASKET	1
20	01008007	TB33	COIL	1	48	01025002	1E36F-2A-2	ADMITTING PIPE	1
21	01021004	TB33	FUEL TANK	1	49	01024011	1E36F-2A-1	CARBURETOR GASKET	1
22	01028004	TB33	FUEL TANK STAND	1	50	01015550	1E36F-2A-1	CARBURETOR	1
23	01114005	1E36F-3	WASHER	2	51	01020079	TU43	AIR FILTER INNER COVER	1
24		1E40F-5.6A	EXPANDER COMP.	1	52	01020080	TU43	AIR FILTER BAFFLE	1
25		1E40F-5.6.1	SPRING	1	53	01020081	TU43	AIR FILTER ELEMENT	1
26	01033014	1E40F-5.6.1	EXPENDER	2	54	01020082	TU43	AIR FILTER OUT COVER	1
27	01104006	1E40F-5.11	WASHER	2	55	01103049	GB/T70.1	SCREW M5X55	2
28	01114001	1E40F-5.12	SCREW NUT	2	57	01025059	TU43	AIR FILTER COMP.	1

TB33





39	CYLINDER COVER	37	CYLINDER	33	PISTON	35	PISTON RING	34	PISTON PIN	32	RING	13	CRANK SHAFT



10	CRANK CASE	16	CRANK CASE	20	COIL	18	FLY WHEEL	24	EXPANDER COMP.	29	FAN CASE	43	MUFFLER



48	ADMITTING PIPE	50	CARBURETOR	21	FUEL TANK	22	FUEL TANK STAND	42	MUFFLER GASKET	11	CRANK CASE GASKET	49	CARBURETOR GASKET




54	AIR FILTER OUT COVER	53	AIR FILTER ELEMENT	51	AIR FILTER INNER COVER	47	ADMITTING PIPE GASKET	36	CYLINDER GASKET	1	STARTER	6	START PULLY



14	KEY 3XSX13	57	AIR FILTER COMP

THE PARTS LIST OF MODEL TB52

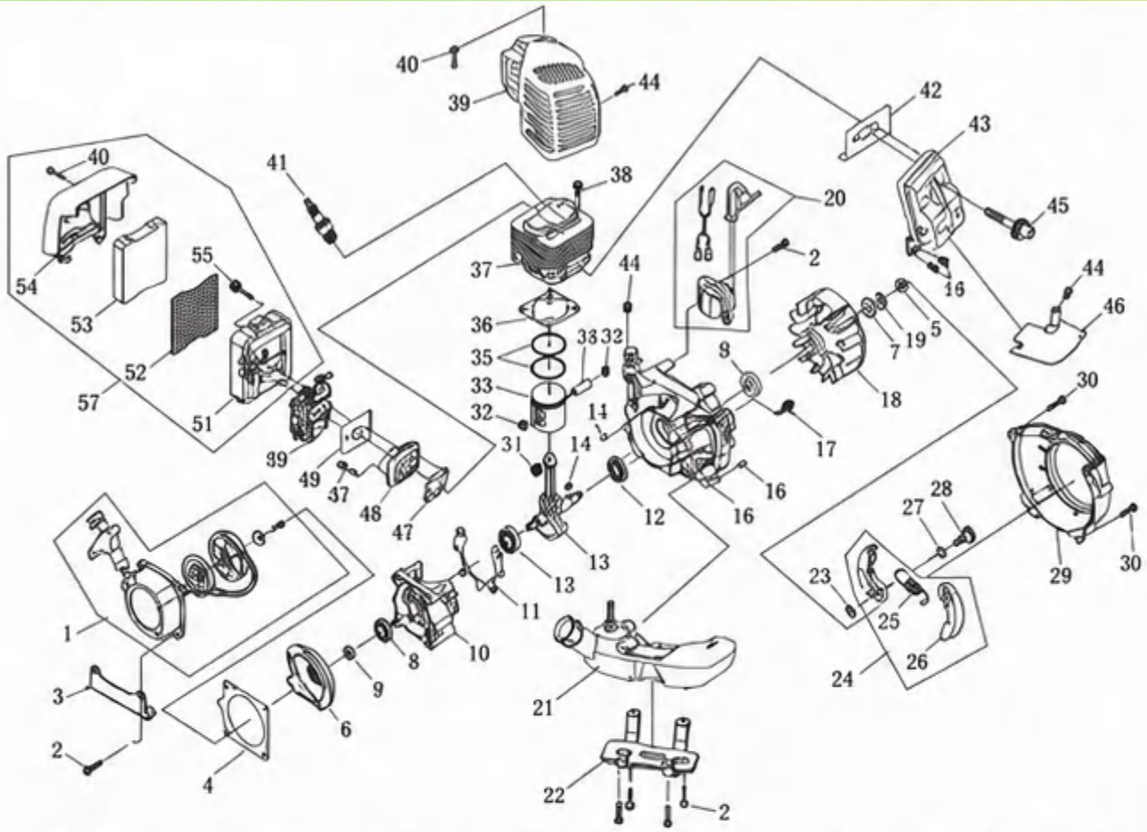

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01022003	1E40F-5.11	STARTER	1
2	01103008	GB/T70.1-MSX20	SCREW	6
3	01990034	TB43	OIL TANK SUPPORT	1
4	01999036	1E40F-5.10	STARTER GASKET	1
5	01106005	GB/T6170-M8	NUTS	2
6	01009003	1E40F-5-7	START PULLY	1
7	01106004	GB/T97.1	WASHER	2
8	01017001	1E36F-2	OIL SEAL 12X22X7	1
9	01017006	1E40F-5-9	OIL SEAL 15X30X7	1
10	01001008	1E40F-5-8-2	CRANK CASE	1
11	01024018	1E40F-5-8-4	CRANK CASE GASKET	1
12	01113004	GB/6201/P5	BEARING 6201/P5	2
13	01007011	1E44F-2A.2.1	CRANK SHAFT	1
14	01101001	GB/T1099	KEY 3X6X13	1
15	01100002	GB/T119	PIN 8X10	2
16	01001052	TB43	CRANK CASE	1
17	01103048	GB/T70.1-M5X35	SCREW MSX30	1
18	01008006	1E40F-5.3.2	FLY WHEEL	1
19	01107005	GB/T93	WASHER	1
20	01002026	TB43	COIL	1
21	01021046	TB43	OIL TANK	1
22	01028007	TB43	OIL TANK STAND	1
23	01114005	1E36F-3	WASHER	2
24	01033014	1E40F-5.6A	EXPENDER COMP.	1
25		1E40F-5.6-1	SPRING	1
26		1E40F-5.6-1	EXPENDER	1
27	01114008	1E40F-5-11	WASHER	2
28	01114001	1E40F-5-12	SCREW NUT	2
29	01002026	TB43	FAN CASE	1

NO.	ERP NO.	PART NO.	PART NAME	QTY.
30	01103004	GB/T70.1-M5X25	SCREW	6
31	01100008	1E44F-2A.2-3	NEEDLE BEARING	1
32	01014003	1E40F-03.02.01	RING	2
33	01012008	1E44F-2A.2-1	PISTON	1
34	01103006	1E44F-2A.2-2	PISTON PIN	1
35	01014003	1E44F-2A.2-4	PISTON RING	2
36	01034019	1E40F-5-6	CYLINDER GASKET	1
37	01006008	1E44F-2A-1	CYLINDER	1
38	01103038	GB/T70.1-M5X20	SCREW	4
39	01016021	TB43	CYLINDER COVER	1
40	01104010	GB/T9074.4-M5X14	SCREW MSX14	2
41	01016001	L6 (LD)	SPARK PLUG	1
42	01024020	1E40F-5-5	MUFFLER GASKET	1
43	01032027	1E40F-5C	MUFFLER	1
44	01104006	GB/T9074.4-M5X12	SCREW	5
45	01103012	GB/T70.1-M5X55	SCREW	2
46	01026008	1E40F-5C-4	CLAPBOARD	1
47	01024222	1E40F-5-2	ADMITTING PIPE GASKET	1
48	01025003	1E40F-5A.2	ADMITTING PIPE	1
49	01024021	1E40F-5A-1	CARBURETOR GASKET	1
50	01105549	1E40F-5A.B	CARBURETOR	1
51	01020079	TU43	AIR FILTER INNER COVER	1
52	01020080	TU43	AIR FILTER BAFFLE	1
53	01020081	TU43	AIR FILTER ELEMENT	1
54	01020082	TU43	AIR FILTER OUT COVER	1
55	01103049	GB/T70.1-M5X55	SCREW MSX55	2
56	01100001	GB/T119	PIN 5X10	1
57	01020059	TU43	AIR FILTER COMP.	1

TB52





39	CYLINDER COVER



32	PISTON ASSY



10	CRANK CASE



16	CRANK CASE



13	CRANK SHAFT



14	KEY 3X6X13



12	BEARING 6201/PS



8	OIL SEAL 12X22X7
9	OIL SEAL 15X30X7



20	COIL



18	FLY WHEEL



24	EXPENDER COMP



29	FAN CASE



1	STARTER



6	START PULLY



4	STARTER GASKET



43	MUFFLER



42	MUFFLER GASKET



37	CYLINDER



48	ADMITTING PIPE



47	GASKET ASSY



50	CARBURETOR



54	AIR FILTER OUT COVER



53	AIR FILTER ELEMENT



51	AIR FILTER INNER COVER



21	OIL TANK




22	OIL TANK STAND



15	PIN 8X10



57	AIR FILTER COMP.

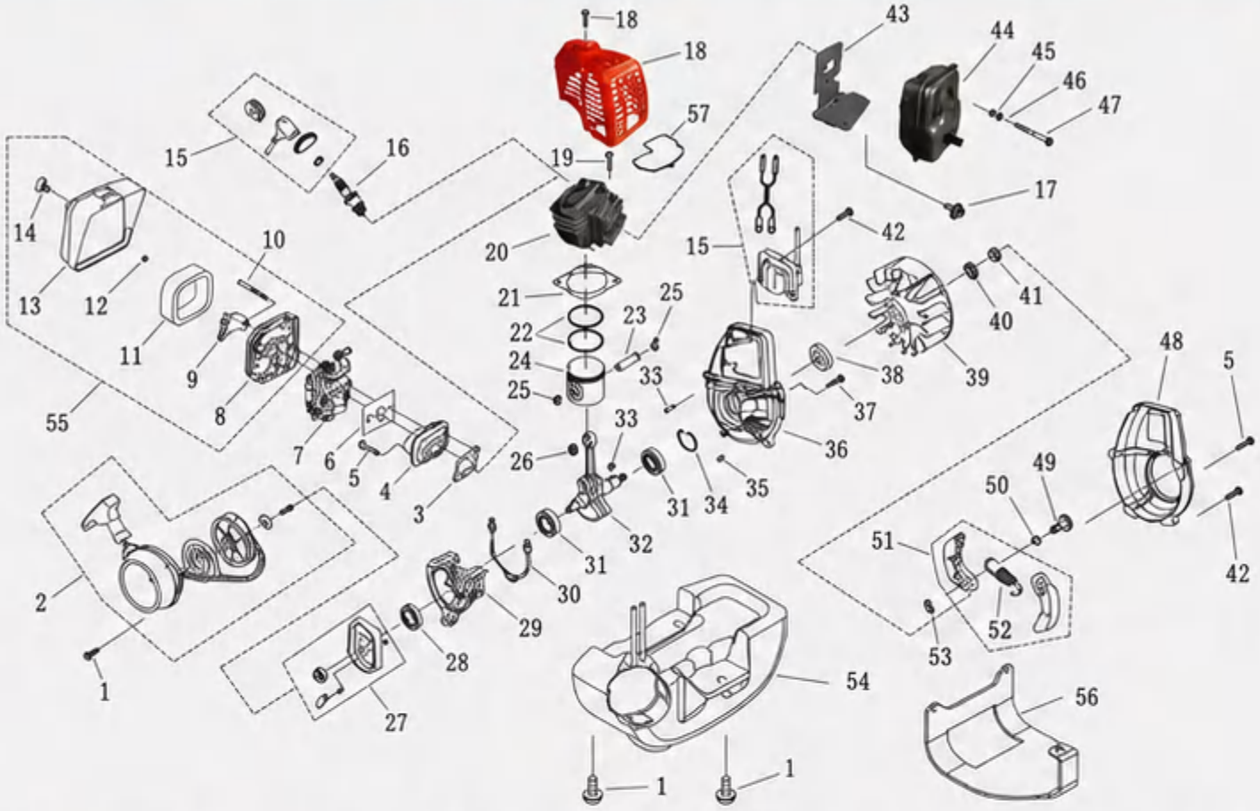

NO.	ERP NO.	PART NO.	PART NAME	QTY.	NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01040007	GB/T9074.4	SCREW M5X16	6	30	01024045	TU26-6	CRANK CASE GASKET	1
2	01022003	TU26-1	STARTER	1	31	01113001	GB12726	BEARING 6001/P5	2
3	01024012	1E34F-2-2	ADMITING PIPE GASKET	1	32	01007023	TU26.6.3	CRANK CASE COMP.	1
4	01025002	1E36F-2A-2	ADMITING PIPE	1	33	01101001	GB/T1099	HALF-MOON KEY	1
5	01103008	GB/T70.1	SCREW M5X20	4	34	01008005	GB/T893.2	RING 28	1
6	01024011	1E36F-2A-1	CARBURETOR GASKET	1	35	01100002	GB/T119	PIN B4X10	2
7	01015025	TU26-2	CARBURETOR	1	36	01001030	TU26-5	CRANK CASE	1
8	01020050	1E34F-1.1	AIR FILTER INNER COVER	1	37	01103004	GB/T70.1	SCREW M5X30	3
9	01020038	1E36F-2A	OIL BAFFLE	1	38	01017008		OIL SEAL 12X30X7	1
10	01103036	GB/T70.1	SCREW M5X65	2	39	01008031	TU26 4.2	FLY WHEEL	1
11		GB/T3452.1	FILTER NET	1	40	01107010	GB/T793	WASHER 8	1
12		GB/T3452.1	O TYPE RING	1	41	01108001	GB/T6170	SCREW M10 IS M8	1
13	01020049	1E34F-1-4	AIR FILTER OUTTER COVER	1	42	01103004	GB/T70.1	SCREW M5X25	4
14	01020075	1E34F-1-2	SCREW	1	43	01024047	TU26.7	MUFFLER GASKET	1
15	01008030	TU26-4.1	COIL	1	44	01032013	TU26.8	MUFFLER	1
16	011061001	LD L6	SPARE PLUG	1	45	01106002	GB/T848	WASHER 5	2
17	01104006	GB/T9074.4	SCREW M5X12	1	46	01107002	GB/T793	WASHER 5	2
18	01018042	TU26-5	CYLINDER COVER	1	47	01103047	GB/T70.1	SCREW M5X45	2
19	01103042	GB/T70.1	SCREW M5X16	4	48	01002041	TU26-3	FAN CASE COVER	1
20	01006027	TU26-1	CYLINDER	1	49	01114003	1E34F-12	SCREW	2
21	01024046	TU26-2	CYLINDER GASKET	1	50	01114007	1E34F-13	WASHER	2
22	01011018	1E33F-4-1	PISTON RING	2	51	01033010	1E34F-10	EXPENDER	1
23	01013012	1E33F-4-2	PISTON PIN	1	52	01035018	1E34F-10-1	SPRING	1
24	01012014	1E33F-4-2	PISTON	1	53	01114006	1E34F-11	WASHER	2
25	01014008	1E33F-4-3	PISTON CLIP CIRCLET	2	54	01021017	TU26.9	OIL TANK COMP.	1
26	01010103	TU26-6.2	NEEDLE BEARING	1	55	01020016	1E34F-1	AIR FILTER COMP.	1
27	01008015	TU26.1.1	STARTER PUSSY	1	56	01028024	TU26	OIL TANK SUPPORT	1
28	01017001		OIL SEAL 12X22X7	1	57	01018044	TU26	GUARD	1
29	01001031	TU26-4	CRANK CASE	1					

TU26




36 CRANK CASE


29 CRANK CASE


32 CRANK SHAFT COMP.


18 CYLINDER COVER


20 CYLINDER


48 FAN CASE COVER


GASKET ASSY


43 MUFFLER GASKET


44 MUFFLER


2 STARTER


57 GUARD


24 PISTON



22 PISTON RING


23 PISTON PIN


25 PISTON CLIP CIRCLET


15 COIL

THE PARTS LIST OF MODEL TU33

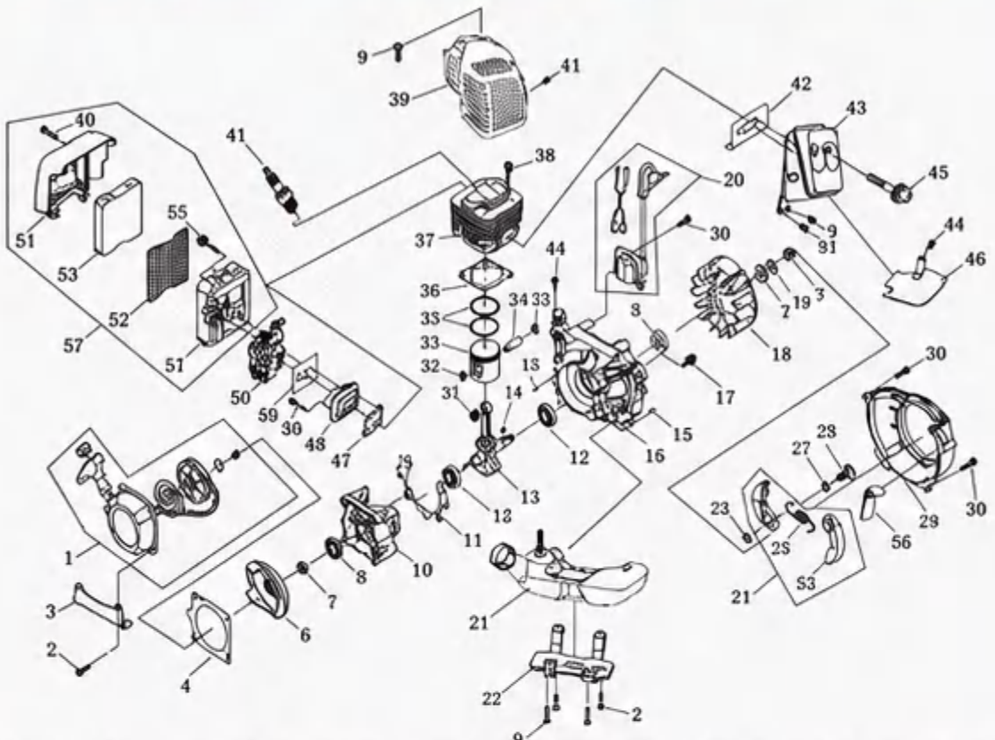

NO.	ERP NO.	PART NO.	PART NAME	QTY
1	01022051	1E36F-2C	STARTER	1
2	01104009	GB/T9074.4	SCREW MSX20	6
3	01199034	TB43	OIL TANK SUPPORT	1
4	01199036	1E40F-5-10	STARTER GASKET	1
5	01108005	GB/T6170	NUTS	2
6	01109023	1E36F-2C	START PULLY	1
7	01106004	GB/T97.1	WASHER	2
8	011017001	1E36F-2	OIL SEAL 12X22X7	2
9	01104007	GB/T9074.4	SCREW M6X16	4
10	01101006	1E36F-2.6-2	CRANK CASE	1
11	01124002	1E36F-2.6-3	CRANK CASE GASKET	1
12	01113002	GB/T276	BEARING 6201/PS	2
13	01007005	1E36F-2.4-3	CRANK SHAFT	1
14	01101001	GB/T1099	KEY 3X3X13	1
15	01100002	GB/T119	PIN 6X10	4
16	01101005	1E36F-2.6-1	CRANK CASE	1
17	01103039	GB/T70.1	SCREW MSX30	4
18	01108003	1E36F-2	FLY WHEEL	1
19	01107005	GB/T93	WASHER	1
20	01108007	TB33	COIL	1
21	01102104	TB33	OIL TANK	1
22	011028804	TB33	OIL TANK STAND	1
23	01114005	1E36F-3	WASHER	2
24	01033014	1E40F-5.6A	EXPANDER COMP.	1
25	01104008	1E40F-5.6-1	SPRING	1
26	01033014	1E40F-5.6.1	EXPENDER	2
27	01114008	1E40F-5-11	WASHER	2
28	01114001	1E40F-5-12	SCREW NUT	2

NO.	ERP NO.	PART NO.	PART NAME	QTY
29	01002021	TB33	FAN CASE	1
30	01103008	GB/T70.1	SCREW MSX20	8
31	01100004	1E36F-2.4.1	NEEDLE BEARING	1
32	01014001	1E36F-10-2	RING	2
33	01102003	1E36F-2.4.2	PISTON	1
34	01103001	1E36F-10-1	PISTON PIN	1
35	01010005	1E36F-2.10-1	PISTON RING	2
36	01024009	1E36F-2.6.2	CYLINDER GASKET	1
37	01024012	1E36F-2.4	CYLINDER	1
38	01103038	GB/T70.1	SCREW MSX20	4
39	01104034	GB/T9074.4	SCREW MSX14	1
40	01106004	1E36F-2.6	SPARK PLUG COVER	1
41	01106004	1E36F-2.5	MUFFLER GASKET	1
42	01032002	1E36F-2.2	MUFFLER	1
43	01104006	GB/T9074.4	SCREW MSX12	1
44	01103049	GB/T70.1	SCREW MSX65	2
45	01026009	1E36F-2C	CLAPBOARD	1
46	01027002	1E36F-2.2	ADMITTING PIPE GASKET	1
47	01025002	1E36F-2A-2	ADMITTING PIPE	1
48	01024011	1E36F-2A-1	CARBURETOR GASKET	1
49	01105050	1E36F-2A-1	CARBURETOR	1
50	01105050	TU43	AIR FILTER INNER COVER	1
51	01105050	TU43	AIR FILTER BAFFLE	1
52	01105050	TU43	AIR FILTER ELEMENT	1
53	01105050	TU43	AIR FILTER OUT COVER	1
55	01103049	GB/T70.1	SCREW MSX65	2
57	01020059	TU43	AIR FILTER COMP.	1

TU33




39 CYLINDER COVER


37 CYLINDER


33 PISTON


35 PISTON RING


34 PISTON PIN


32 RING


13 CRANK SHAFT


10 CRANK CASE


16 CRANK CASE


20 COIL


18 FLY WHEEL


24 EXPANDER COMP.


29 FAN CASE


43 MUFFLER


48 ADMITTING PIPE


50 CARBURETOR


57 AIR FILTER COMP.


21 OIL TANK


22 OIL TANK STAND


42 MUFFLER GASKET


11 CRANK CASE GASKET


49 CARBURETOR GASKET


47 ADMITTING PIPE GASKET


36 CYLINDER GASKET


1 STARTER


6 START PULLY


14 KEY 3X3X13



54 AIR FILTER OUT COVER


53 AIR FILTER ELEMENT


51 AIR FILTER INNER COVER


57 AIR FILTER COMP.

THE PARTS LIST OF MODEL TU43

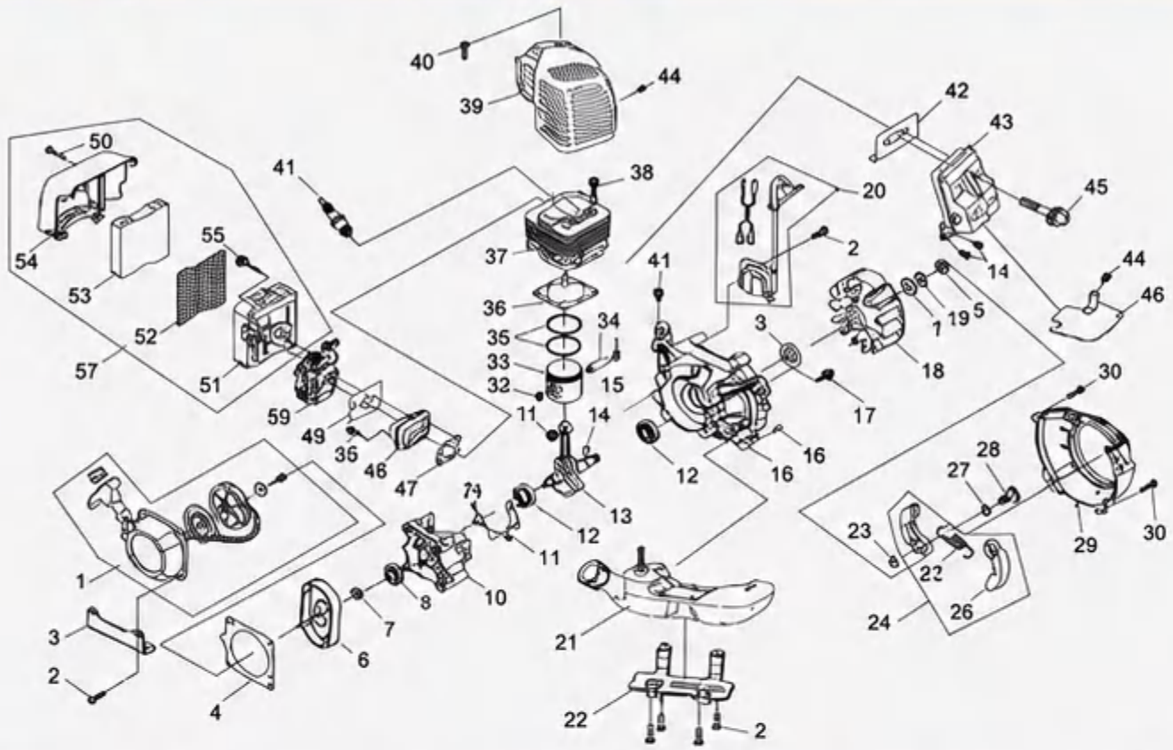

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01032003	1E40F-5.11	STARTER	1
2	01103008	GB/T70.1-M5X20	SCREW	6
3	01989034	TB43	STAND	1
4	01988036	1E40F-5-10	STARTER GASKET	1
5	01108005	GB/T6170-M8	NUTS	2
6	01080003	1E40F-5.7	STARTER PULLY	1
7	01105004	GB/T97.1	WASHER	1
8	01017001	1E40F-2	OIL SEAL 12X22X7	2
9	01017006	1E40F-2.9	OIL SEAL 15X30X7	1
10	01010008	1E40F-5-8-2	CRANK CASE	1
11	01034018	1E40F-5-8-4	CRANK CASE GASKET	1
12	01130004	GB/T276	BEARING 6202/PS	2
13	01101001	1E40F-5-4.1	CRANK SHAFT COMP.	1
14	01101001	GB/T1099	HALF-MOON KEY	1
15	01100002	GB/T119	PIN 8X410	2
16	01103012	TB43	CRANK CASE	1
17	01103048	GB/T70.1-M5X35	SCREW M5X35	4
18	01008008	1E40F-5-3.2	FLY WHEEL	1
19	01107005	GB/T793	WASHER	1
20	01002026	TB43	COIL	1
21	011021046	TB43	OIL TANK COMP.	1
22	01029007	TB43	OIL TANK STAND	1
23	01114005	1E-35F-3	WASHER	2
24	01033014	1E40F-5-6.4	EXPANDER COMP.	1
25	01103317	1E40F-5-6-1	SPRING	1
26	01103314	1E40F-5-6.1	EXPANDER	1
27	01114006	1E40F-5-11	WASHER	2
28	01114001	1E40F-5-12	SCREW PIN	2
29	01002026	TB43	FAN CASE COVER	1

NO.	ERP NO.	PART NO.	PART NAME	QTY.
30	01103004	GB/T70.1-M5X25	SCREW M5X25	6
31	01108005	1E40F-5-4.2	NEEDLE BEARING	1
32	01104003	1E40F-05.02.01	RING	2
33	01012005	1E40F-5-4.1	PISTON	1
34	01103004	1E40F-P6.3.3	PISTON PIN	1
35	01101009	1E40F-P2.5-3.5	PISTON RING	1
36	01024019	1E40F-5-6	CYLINDER GASKET	1
37	01036025	TU43	CYLINDER	1
38	01103038	GB/T70.1-M5X20	SCREW M5X20	4
39	01108007	1E40F-5-7	CYLINDER COVER	1
40	01104013	GB/T9074.4-M5X14	SCREW M5X14	1
41	01106001	L6 (LD)	SPARK PLUG	1
42	01106002	1E40F-5-5	MUFFLER GASKET	1
43	01032027	1E40F-5C-A	SCREW M5X12	5
44	01108008	GB/T9074.4-M5X12	SCREW M5X55	5
45	01103012	GB/T70.1-M6X55	SCREW M6X55	1
46	01026008	1E40F-5C-4	GASKET	1
47	01034022	1E40F-5-2	ADMITTING PIPE GASKET	1
48	011025003	1E40F-5-A.2	ADMITTING PIPE	1
49	01034021	1E40F-5A-1	CARBURETOR GASKET	1
50	011051049	1E40F-5A-8	CARBURETOR	1
51	01020079	TU43	AIR FILTER INNER COVER	1
52	011020080	TU43	AIR FILTER BAFFLE	1
53	01020081	TU43	AIR FILTER ELEMENT	1
54	01020082	TU43	AIR FILTER OUTER COVER	1
55	01103049	GB/T70.1-M5X55	SCREW M5X55	2
56	01100001	GB/T119	PIN 8SX10	2
57	01020059	TU43	AIR FILTER	1

TU43




39 CYLINDER COVER


7 PISTON ASS'Y


10 CRANK CASE


16 CRANK CASE


13 CRANK SHAFT


14 HALF-MOON KEY


12 BEARING 6202/PS


8 OIL SEAL 12X22X7
9 OIL SEAL 15X30X7


20 COIL


18 FLY WHEEL


24 EXPANDER COMP.


29 FAN CASE


1 STARTER


6 STARTER PULLY


4 STARTER GASKET


43 MUFFLER


42 MUFFLER GASKET


37 CYLINDER


48 ADMITTING PIPE



GASKET ASS'Y


50 CARBURETOR


54 AIR FILTER OUTER COVER



53 AIR FILTER ELEMENT


51 AIR FILTER INNER COVER

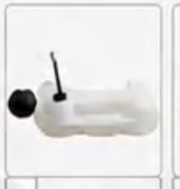

21 OIL TANK COMP.


22 OIL TANK STAND


15 PIN 8X410

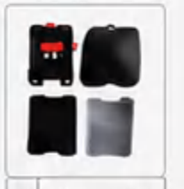
57 AIR FILTER COMP.

THE PARTS LIST OF MODEL 1E40F-6

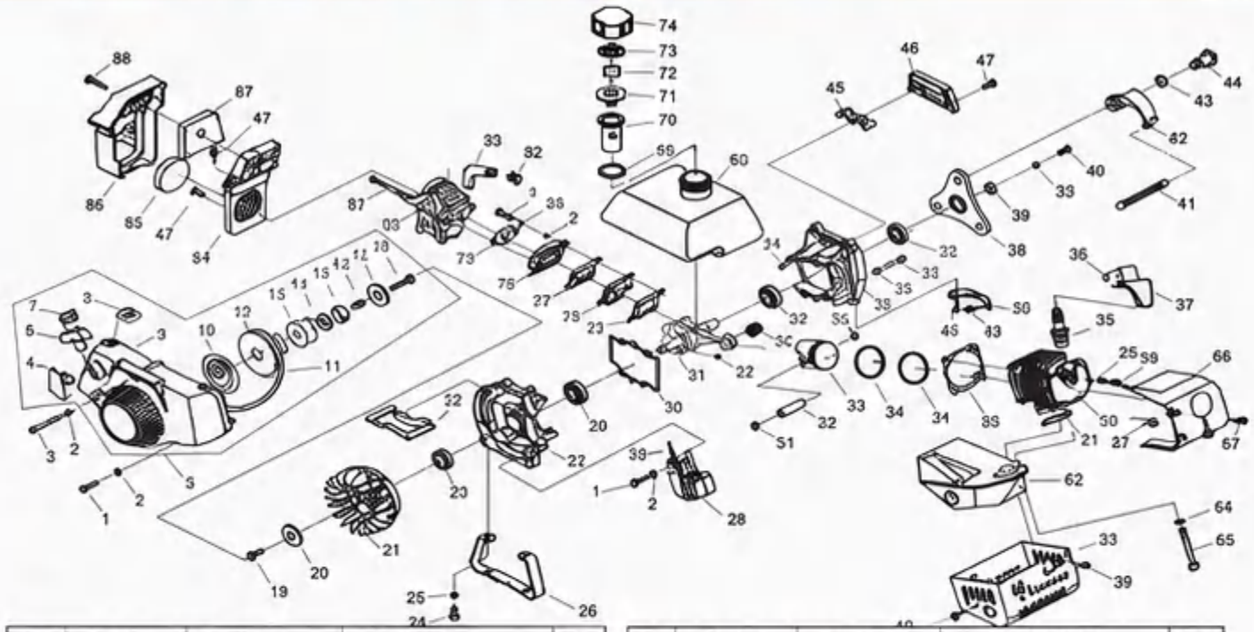

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01030060	GB/T70.1	SCREW M6x20	8
2		GB8.7.1	WASHER 5	9
3		GB/T70.1	SCREW M5x50	1
4		1E40F-6-6-1	CORD GROMMET	1
5	01022012	1E40F-6-6-1	STARTER	1
6		1E40F-P32.4-2	STARTER HANDLE	1
7		1E40F-P32.4-10	PIPE	1
8		GB39	NUT M5	1
9		1E40F-6-6.1-1	STARTER COVER ASS'Y	1
10		1E40F-P32.4-7	RECOIL SPRING	1
11		1E40F-6-6.1-1-1	ROPE	1
12		1E40F-6-6.1-2	STARTER ROPE REEL	1
13		1E40F-6-6.1-7	STARTER REEL	1
14		1E40F-6-6.1-5	WASHER	1
15		1E40F-6-6.1-6	ROPE GUIDE	1
16		1E40F-6-6.1-4	PRESS SPRING	1
17		[illegible]	WASHER	1
18		GB67	SCREW M6x12	1
19	01102011	GB8074.15	SCREW M6x16*10.9	1
20		1E40F-6-1	WASHER	1
21		ROTOR	ROTOR	1
22		1E40F-6-1-1	RUBBER WASHER	1
23	01017003	1E40F-P32.1-1	OIL SEAL	1
24		GB/T70.1	SCREW M6x14	2
25		GB/T 93	WASHER 6	6
26	01990208	GB/T70.1	SUPPORT	1
27	01001051	1E40F-6.4.1-1	REAR HALF CRANKCASE	1
28			STATOR	1
29	01003004	GB/T276	BALL BEARING 6202/ P4	2
30	01990029	1E40F-6.4.1-2	TANK CAP ASSET	1
31	01007015	1E40F-6.3.1	CRANK SHAFT COMP.	1
32	01010015	1E40F-32.3-1	KEY	1
33	01001001	1E40F-P-6-2	NEEDLE BEARING	1
34		GB119	PIN 5x12	2
35	01001050	1E40F-6.4.1-3	FRONT HALF CRANKCASE	1
36		GB9	WASHER 5	8
37		GB/T70.1	SCREW M6x30	4
39	01022001	GB96	WASHER 6	1
40		1E40F-6.4	BOLT	1
41		1E40F-6.11-1	CLUTCH SPRING	3
42	01033006	1E40F-6.11-1	CLUTCH SHOE	3
43		1E54F-13	WASHER	3
44		1E40F-6.11-3	CLUTCH STEP SCREW	3
45		1E40F-6-7.1	RUBBER WASHER	1

NO.	ERP NO.	PART NO.	PART NAME	QTY
46	01999030	1E40F-6-7.1	SUPPORT	1
47		GB8074.4	SCREW M5x14	6
48		GB8074.13	BOLT M6x12	1
49		GB8074.13	BOLT M6x10	3
50	01034033	1E40F-6-11	SUPPORT	1
51	01014003	1E40F-03.02.01	PISTON RING CIRCLIP	2
52	01013004	1E46F-6-3	PISTON PIN	1
53	01012010	1E40F-6-3.1	PISTON	1
54	01011009	1E40FP-32.3-5	PISTON RING	1
55	01024034	1E40F-6-2	CYLINDER WASHER	1
56		CLICK SPRING	CLICK SPRING	1
57		PLUG CAP	PLUG CAP	1
58	01016008	L7T(LD)	PLUG	1
59	01103010	GB/T70.1	SCREW M6x20	1
60	01006010	1E40F-6-3	CYLINDER	1
61	01024035	1E40F-6-9	SEALING WASHER	1
62	01032006	1E40F-6.12	MUFFLER COMP.	1
63	01032007	1E40F-6-10	MUFFLER COVER	1
64		GB877.1	WASHER 6	2
65		GB/T70.1	SCREW M6x60+12.9	2
66	01018027	1E40F-6.2	CYLINDER SHROUD	1
67	01014009	GB8074.4	SCREW M5x20	2
68	01021011	1E40F-6.5-1	FUEL TANK	1
69		BQ30S.10-2	SEALING WASHER	1
70		BQ30S.10-1	FELT NET	1
71		BQ30S.10.2.2	INNER LID	1
72		BQ-328.7-4	CLEANER ELEMENT	1
73		BQ30S.10.2-3	INNER LID	1
74		BQ30S.10.2-1	FUEL TANK CAP	1
75		1E40F-6.4-1	INNER WASHER	11
76		1E40F-6.4.3	AIR INLET VALVE	1
77		1E40F-6.4-2	OUTER WASHER	1
78		1E40F-6.4.2	INLET MANIFOLD	1
79		1E40F-6-8	SEALING WASHER	1
80		1E40F-6.10	CARBURETOR ASS'Y	1
81		GB8074.4	SCREW M5x5x8	2
82		3WF-3.19-1	CLICK RING	1
83		1E40F-6.7	FUEL PIPE	1
84	01020018	1E40F-6.8.1	CLEANER SHROUD	1
85		1E40F-6.8-2	CLEANER ELEMENT (L)	1
86		1E40F-6.8-1	CLEANER COVER	1
87		1E40F-6.8-3	CLEANER ELEMENT (L)	1
88		GB8074.4	SCREW M5x25	1
			STOP WIRE	1

1E40F-6






60 CYLINDER




53 PISTON

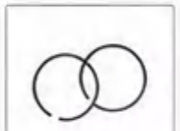

54 PISTON RING



52 PISTON PIN



51 PISTON RING CIRCLIP



37 REAB HALF CRANKCASE



35 FRONT HALF CRANKCASE



31 CRANK SHAFT COMP.



42 CLUTCH SHOE



28 STATOR



21 ROTOR



80 AIR FILTER COMP.



84 CLEANER SHROUD

86 CLEANER COVER



87 CLEANER ELEMENT 2



58 PLUG



62 MUFFLER COMP.



68 FUEL TANK



80 CARBURETOR ASS'Y



78 INLET MANIFOLD



5 STARTER



66 CYLINDER SHROUD



63 MUFFLER COVER



26 SUPPORT




76 AIR INLET VALVE



74 FUEL TANK CAP

THE PARTS LIST OF MODEL 1E40F-6M

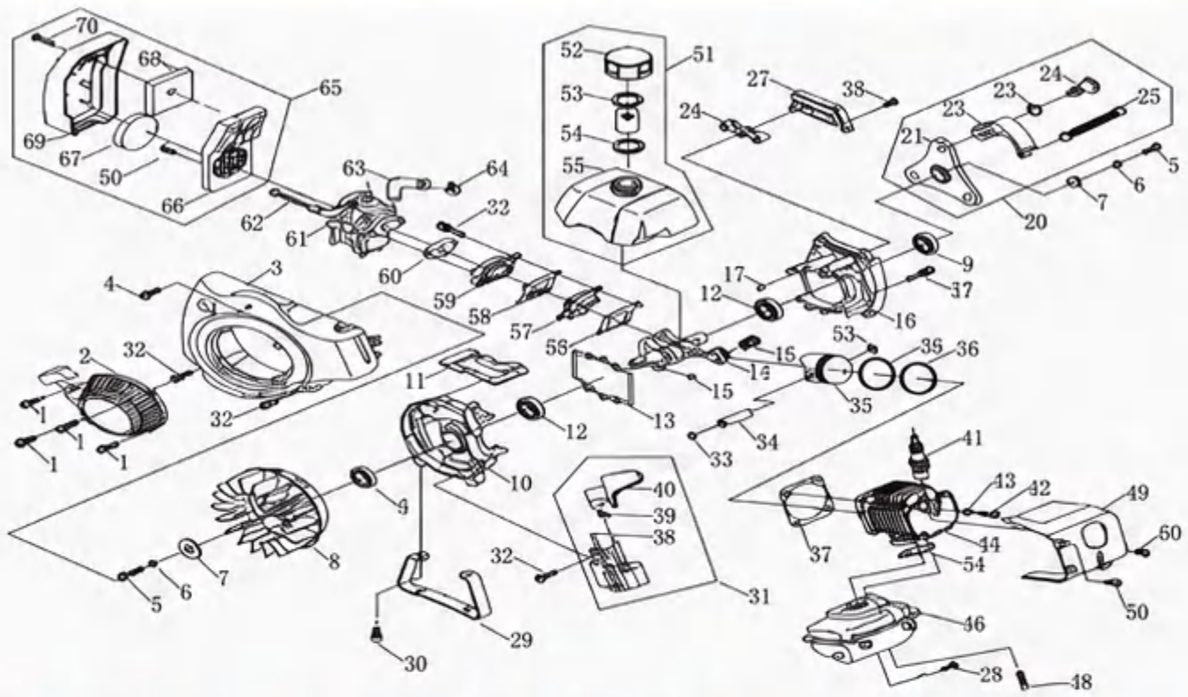

NO.	ERP NO.	PART NO.	PART NAME	QTY	NO.	ERP NO.	PART NO.	PART NAME	QTY
1	01103005	GB/T70.1	SCREW M5x20	4	36	01011009	1E40FP-32.3-5	PISTON RING	2
2	01022067	1E40F-6M.6	STARTER	1	37	01024054	1E40F-6-2	PISTON RING	1
3	01002064	1E40F-6M.1	MAGNETOR COVER	1	38	01008071	1E40F-6	STOP WIRE	1
4	01103006	GB/T70.1	SCREW M5x50	1	39	01008069		SPARK PLUG CIRCLIP	1
5	01102011	GB/T6173.1	SCREW M6x16-8.8	2	40	01008072	1E40F-6	SPARK PLUG CAP	1
6	01107003	GB/T93	WASHER 6	2	41	01106008	GB/T70.1	SPARK PLUG	1
7	01104006	1E40F-6.1	WASHER	2	42	01102058	GB/T70.1	SCREW M6x20	4
8	01006017	1E40F-6	MAGNETO ROTOR	1	43	01107033	GB/T 93	WASHER 6	4
9	01017003	1E40F-6F-32.11	OIL SEAL 15x25x7	2	44	01006010	1E40F-6-3	CYLINDER	1
10	01001015	1E40F-6.4.1-1	REAR HALF CRANKCASE	1	45	01024035	1E40F-6-9	SEALING WASHER	1
11	01990209	1E40F-6F-6	RUBBER WASHER	1	46	01023024	1E40F-6M.7	MUFFLER COMP.	1
12	01103004	GB/T276	BALL BEARING 6202/P5	2	47	01108011	1E40F-6M.5	MUFFLER COVER	1
13	01024033	1E40F-6.4.1-2	TANK CAP GASKET	1	48	01103056	GB/T70.1	BOLT M6x60	2
14	01007015	1E40F-6.3-1-1	CRANK SHAFT COMP	1	49	01106000	1E40F-6M.11	CYLINDER SHROUD	2
15	01101001	1E40F-32.3-1	KEY	1	50	01104007	GB8074.4	SCREW M5x16	2
16	01001001	1E40F-6-2	NEEDLE BEARING	1	51	01021072	1E40F-6M.3	OIL TANK COMP	1
17	01000010	GB119	PIN B5x10	2	52	1021075	1E40F-6M.3.1	OIL TANK CAP	1
18	01001050	1E40F-6.4.1-3	FRONT HALF CRANKCASE	1	53		BQ30S.10.1	FILTER NET	1
19	01103048	GB/T70.1	SCREW M5x35	4	54		BQ30S.10.2	SEALING WASHER	1
20	01035006	1E40F-6	CLUTCH SHOE COMP.	1	55	01021074	1E40F-6M.3-1	OIL TANK	1
21	01035039	1E40F-6.11.2	CHASSIS	1	56	01024037	1E40F-6.4-1	INNER WASHER	1
22	01035020	1E40F-6.11.1	CLUTCH SHOE	1	57	01S99032	1E40F-6.4-3	AIR INLET VALVE	1
23	01114007	1E34F-13	WASHER	3	58	01024036	1E40F-6.4-2	OUTER WASHER	1
24	01114013	1E40F-6.11-3	CLUTCH STEP SCREW	59	59	01025005	1E40F-6.4-2	INLET MANIFOLD	1
25	01035021	1E40F-6.11.1	CLUTCH SPRING	3	60	01024038	1E40F-6.8	SEALING WASHER	1
26	01990208	1E40F-6.7-1	RUBBER	2	61	01105051	1E40F-6.10	CARBURETOR ASS'Y	1
27	01998030	1E40F-6.7-1	SUPPORT	2	62	01104011	GB8074.4	SCREW M5x55	2
28	01040006	GB8074.4	SCREW M5x12	5	58	01999027	1E40F-6-7	FUEL PIPE	1
29	01999031	1E40F-6-5	SUPPORT	1	64	01999052		CLICK RING	1
30	01040016	GB8074.4	SCREW M6x14	2	65	01020093	1E40F-6M.2	AIR FILTER COMP.	1
31	01006050	1E40F-6	STATOR	1	66	01020094	1E40F-6M.2-1	CLEANER INNER COVER	1
32	01103008	GB/T70.1	SCREW M5x20	8	67	01020095	1E40F-M2.2-2	CLEANER ELEMENT (1)	1
33	01014003	1E40F-03.2-01	PISTEW RING CIRCLIP	2	68	01020095	1E40F-6M.2-3	CLEANER ELEMENT (2)	1
34	01013004	1E40F P-6.3-1	PISTON PIN	1	69	01020094	1E40F-6M.2-4	CLEANER OUTER COVER	1
35	01012010	1E40F-6.3-1	PISTON	1	70	01104009	GB8074.4	SCREW M5x20	1

1E40F-6M





44 CYLINDER


35 PISTON


36 PISTON RING


34 PISTON PIN


33 PISTON RING CIRCLIP


16 NEEDLE BEARING


18 REAR HALF CRANKCASE


10 REAR HALF CRANKCASE


14 CRANK SHAFT COMP.


20 CLUTCH DRUM COMP.


31 STATOR


8 MAGNETO ROTOR


61 CARBURETOR ASS'Y


59 INLET MANIFOLD


52 OIL TANK CAP


41 SPARK PLUG


47 MUFFLER COVER


29 SUPPORT


57 AIR INLET VALVE


2 STARTER


3 MAGNETOR COVER


69 CLEANER OUTER COVER


49 CYLINDER SHROUD


67 CLEANER ELEMENT-1


68 CLEANER ELEMENT-2



66 CLEANER INNER COVER


31 STATOR


55 OIL TANK


27 SUPPORT


63 FUEL PIPE

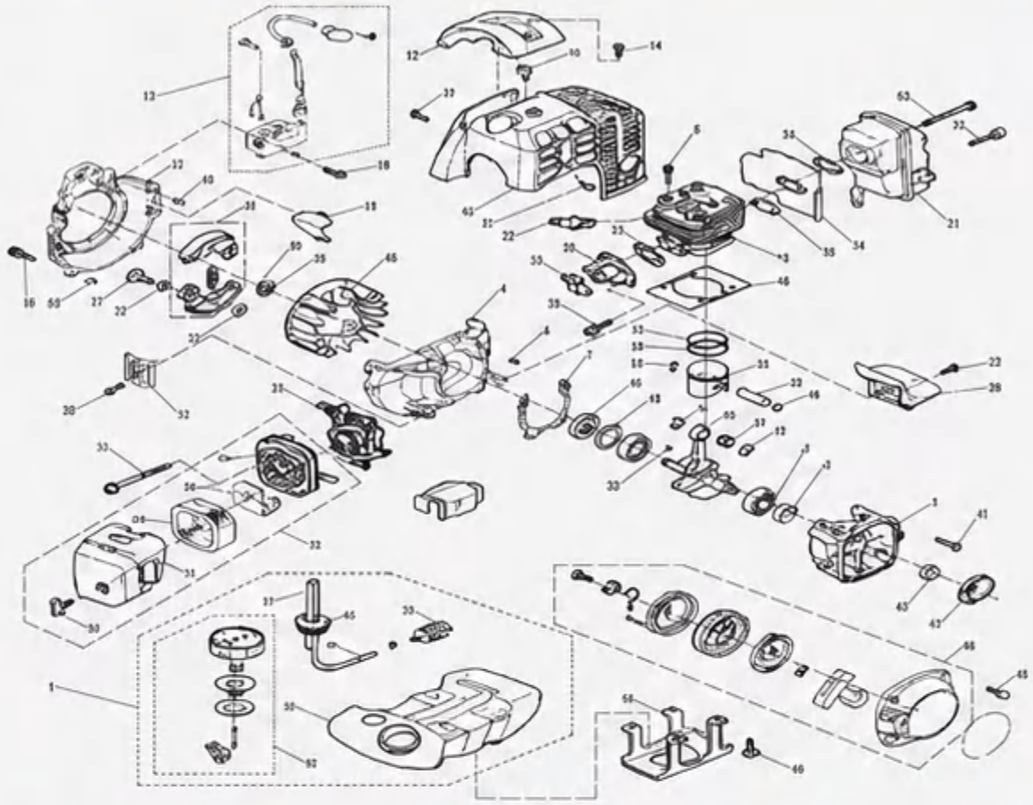

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01002606	1E40F-8A-1	CYLINDER	1
2	01103051	GB/T70.1	SCREW M5X20	4
3	01024072	1E40F-8-2	CYLINDER GASKET	1
4	01001065	1E40F-8-3	CRANK CASE	1
5	01001066	1E40F-8-4	CRANK CASE	1
6	01100606	GB119	PIN B5X10	1
7	01024073	1E40F-8-5	CRANK CASE GASKET	1
8	01113002	GB/T276	BEARING 6201/P5	2
9	01017001	1E40F-2	OIL SEAL 12X22X7	1
10	01017020	1E40F-8.1	OIL SEAL 12X22X7	1
11	01103052	GB/T70.1	SCREW M5X30	4
12	01008002	GB/T863.2	RETAINING RING	1
13	01013032	1E40F-8-2	PISTON	1
14	01011009	1E40F-P-32-3.5	PISTON RING	2
15	01104103	1E40F-8-6	RING	1
16	01013016	1E40F-8-7	PISTON PIN	1
17	01001019	1E40F-8.3	SMALL NEEDLE BEARING	1
18	01008074	1E40F-8-8	THRUST WASHER	1
19	01007054	1E40F-8.4	CRANK SHAFT COMP.	1
20	01103015	1E40F-8.5	SCREW PIN	1
21	01114011	1E40F-8.9	SCREW PIN	2
22	01114005	1E40F-3	WASHER B	2
23	01114008	1E40F-5-11	WASHER	2
24	01008006	1E40F-8.6	FLY WHEEL	1
25	01008050	1E40F-8A.7	COIL	1
26	01103053	GB/T70.1	SCREW M4X25	2
27	01108008	LD LTT	SPARE PLUG	1
28	01108025	GB/T93	SCREW M8X1	1
29	01107010	GB/T93	WASHER	1
30	01101003	1E40F-P-32-3.1	HALF-MOON KEY	1
31	01032026	1E40F-8A.8	MUFFLER	1
32	01102040	GB/T70.1	SCREW M5X5	2
33	01104027	GB9074.4	SCREW M5X12	2
34	01027012	1E40F-8A-10	GASKET	2
35	01024074	1E40F-8-11	MUFFLER GASKET	2

NO.	ERP NO.	PART NO.	PART NAME	QTY.
36	01027014	1E40F-8A-12	MUFFLER BAFFLE	1
37	01104028	GB9074.4	SCREW M5X16	1
38	01002058	1E40F-8-13	FAN CASE	1
39	01103025	GB/T70.1	SCREW M5X20	6
40	01100007	GB119	PIN B4.5X10	2
41	01027010	1E40F-8-14	FAN CASE GASKET	1
42	01027011	1E40F-8-15	SAFETY GUARD	1
43	01018017	1E40F-8A-16	CYLINDER COVER	1
44	01104044	GB9074.4	SCREW M5X12	4
45	01018078	1E40F-8A-17	COVER	1
46	01022048	1E40F-8-9	STARTER	1
47	01008022	1E40F-8-18	STARTER PULLY	1
48	01104015		SCREW M5X14	4
49	01106016	GB/T95	WASHER	1
50	01025014	1E40F-8A-10	ADMITTING PIPE	1
51	01024075	1E40F-8-19	ADMITTING PIPE GASKET	1
52	01025015	1E40F-8A-20	CARBURETOR GASKET	1
53	01105004	1E40F-8A-11	CARBURETOR	1
54	01103023	GB/T70.1	SCREW M5X20	1
55	01020061	1E40F-8A-12	AIR FILTER COMP.	1
56	01020068	1E40F-8A.12.1	AIR FILTER INNER COVER	1
57	01020069	1E40F-8A.12.2	AIR FILTER OUTER COVER	1
58	01020090	1E40F-8A.12-1	CLEANER ELEMENT	1
59	01020091	1E40F-8A.12-2	AIR FILTER BAFFLE	1
60	01020092	1E40F-8A.12-3	SCREW	1
61	01021048	1E40F-8A.13	OIL TANK COMP.	1
62	01021063	1E40F-8.13.1	OIL TANK CAP	1
63	01021068	1E40F-8A.13-1	OIL TANK	1
64	01021073	1E34F-9.2-3	FUEL FILTER	1
65	01021069	1E40F-8A-21	FUEL PIPE PIPE	1
66	01021070	1E40F-8A-22	PLUG	1
67	01021071	1E40F-8A-23	FUEL PIPE	1
68	01026020	1E40F-8A-24	FUEL TANK SUPPORT	1
69	01103021	GB/T70.1	SCREW M5X25	4
70	01008061	1E40F-8A-25	PLUG	1

1E40F-8A ENGINE




43 CYLINDER COVER


45 COVER



57 AIR FILTER OUTER COVER


WASHER


58 CLEANER ELEMENT



56 AIR FILTER INNER COVER


68 FUEL TANK SUPPORT

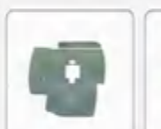

34 GASKET


31 MUFFLER


61 OIL TANK COMP.

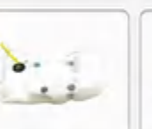
63 OIL TANK


36 MUFFLER BAFFLE

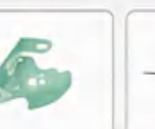
59 AIR FILTER BAFFLE


25 COIL


1 CYLINDER


53 CARBURETOR


21 SCREW PIN
22 WASHER B
23 WASHER


4 CRANK CASE


5 CRANK CASE


19 CRANK SHAFT COMP.


46 STARTER


20 EXPANDER


38 FAN CASE


7 CRANK CASE GASKET


35 MUFFLER GASKET


3 CYLINDER GASKET



51 ADMITTING PIPE GASKET


52 CARBURETOR GASKET


16 PISTON PIN CLIP


15 PISTON PIN


13 PISTON

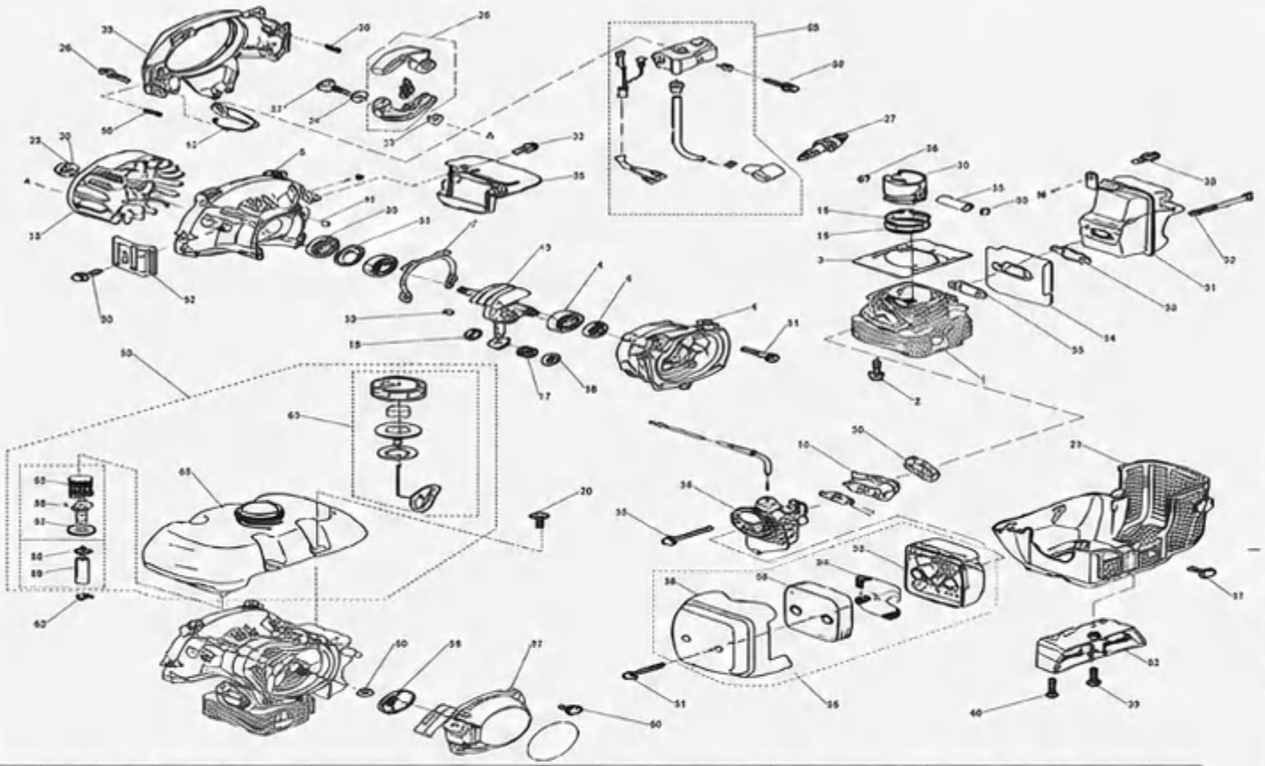

NO.	ERP NO.	PART NO.	PART NAME	QTY.	NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01006026	1E40F-8-1	CYLINDER	1	36	01026026	1E40F-8-12	MUFFLER BAFFLE	1
2	01103051	GB/T70.1	SCREW M5X20	4	37	01104026	GB9074.4	SCREW M5X16	1
3	01034072	1E40F-8-2	CYLINDER GASKET	1	38	01002058	1E40F-8-13	FAN CASE	1
4	01001055	1E40F-8-3	CRANK CASE	1	39	01103025	GB/T70.1	SCREW M5X20	2
5	01001056	1E40F-8-4	CRANK CASE	1	40	01100007	GB119	PIN 8.4X10	2
6	01017001	GB119	PIN 8.3X10	1	41	01027010	1E40F-8-14	FAN CASE GUARD	1
7	01034073	1E40F-8-5	CRANK CASE GASKET	1	42	01027011	1E40F-8-15	SAFETY GUARD	1
8	01113002	GB/T276	BEARING 6201/P5	2	43	01018076	1E40F-8-16	CYLINDER COVER	1
9	01017001	1E36F-2	OIL SEAL 12X22X7	1	44	01104044		SCREW M5X12	3
10	01017020	1E40F-8-1	OIL SEAL 12X22X7	1	45			SUPPORT	1
11	01103052	GB/T70.1	SCREW M5X30	4	46	01019014	1E40F-8-17	SCREW ST5X20	2
12	01008002	GB/T893.2	RETAINING RING	1	46	01022048	1E40F-8-9	STARTER	1
13	01012032	1E40F-8-2	PISTON	1	48	01009022	1E40F-8-18	STARTER PULLY	1
14	01011009	1E40F-PS.2-3.5	PISTON RING	2	49	01106049		SCREW M6X14	1
15	01103018	1E40F-8-7	PISTON PIN	2	50	01102013	GB/T95	WASHER	1
16	01100010	1E40F-8-6	RING	1	51	01034075	1E40F-8-10	ADMITTING PIPE	1
17	01012019	1E40F-8-3	SMALL NEEDLE BEARING	1	52	01034038	1E40F-8-8	ADMITTING PIPE GASKET	1
18	01990074	1E40F-8-8	THRUST WASHER	2	53	01015053	1E40F-8-11	CARBURETOR GASKET	1
19	01007034	1E40F-8-4	CRANK SHAFT COMP.	1	54	01024040	GB/T70	CARBURETOR	1
20	01033015	1E40F-8-5	EXPENDER	1	55	01102006	GB/T70	SCREW M5X50	1
21	01114011	1E40F-8-9	SCREW PIN	2	56	01026006	1E40F-8-12	AIR FILTER COMP.	1
22	01114005	1E36F-3	WASHER	2	57	01020084	1E40F-8-12-1	AIR FILTER INNER COVER	1
23	01114008	1E40F-5-11	WASHER	1	58	01020085	1E40F-8-12-2	AIR FILTER OUTER COVER	1
24	01008058	1E40F-8-6	FLY WHEEL	1	59	01020006	1E40F-8-12-1	CLEANER ELEMENT	1
25	01008059	1E40F-8-7	COIL	1	60	01020087	1E40F-8-12-2	AIR FILTER BAFFLE	1
26	01103053	GB/T70.1	SCREW M4X25	2	61	01104037	GB9074.4	SCREW M4X7	2
27	01106001	LD L7T	SPARE PLUG	1	62	01102347	1E40F-8-13	OIL TANK COMP.	1
28	01106025	GB/T93	SCREW M8X1	2	64	01102166	1E40F-8-13-1	OIL TANK CAP	1
29	01107010	GB/T93	WASHER	2	63	01102166	1E40F-8-13-1	OIL TANK	1
30	01101003	1E40F-PS.2-7.3	HALF-MOON KEY	1	65	01102165	1E40F-8-13-2	FUEL FILTER	1
31	01032025	1E40F-8-8	MUFFLER	1	66	01102168	1E40F-8-13-2	FILTER COVER	1
32	01102002	GB/T70.1	SCREW M5X5	2	67	01102167	1E40F-8-13-3	PLUG	1
33	01104027	GB9074.4	SCREW M5X12	2	68	01990076	1E40F-8-21	FUEL PIPE	1
34	01027008	1E40F-8-10	GASKET	1	69	01990071	BG415-8	CLIP	2
35	01024074	1E40F-8-11	MUFFLER GASKET	2	70	01104030	GB9074.4	SCREW M5X20	4


1E40F-8 ENGINE




43 CYLINDER COVER


24 FLY WHEEL


51 ADMITTING PIPE

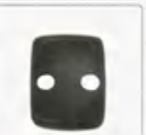
59 CLEANER ELEMENT


56 AIR FILTER INNER COVER


60 AIRFILTER BAFFLE


57 AIR FILTER INNER COVER


1 CYLINDER


54 CARBURETOR


41 FAN CASE GUARD



5 CRANK CASE


4 CRANK CASE


19 CRANK SHAFT COMP.


42 SAFETY GUARD


45 SUPPORT

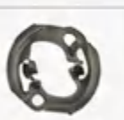
20 EXPENDER


38 FAN CASE


7 CRANK CASE GASKET


35 MUFFLER GASKET


3 CYLINDER GASKET


52 ADMITTING PIPE GASKET


36 MUFFLER BAFFLE


53 CARBURETOR GASKET


53 CARBURETOR GASKET



34 GASKET



31 MUFFLER



63 OIL TANK CAP


64 OIL TANK


9 OIL SEAL 12X22X7


10 OIL SEAL 12X22X7


6 PIN 8X10


16 RING



15 PISTON PIN


13 PISTON


21 SCREW PIN
22 WASHER 8
23 WASHER


47 STARTER

THE PARTS LIST OF MODEL 1E40F-5F

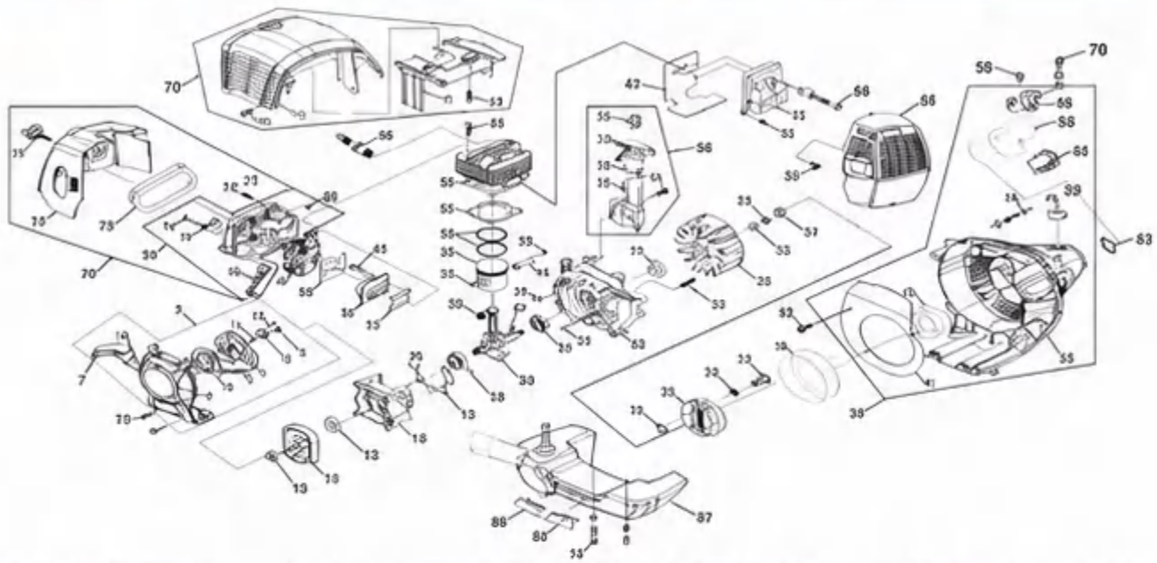

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01022023	1E40F-5F	Starter	1
2	01022021	1E36FE-8.3	Screw	1
3	01022071	1E36FE-9.4	Rachet	1
4	01022070	1E36FE-8.1	Start Rope Reel	1
5	01022069	1E36FE-8.5	Rope	1
6	01022072	1E36FE-8.7	Recoil Spring	1
7	01022073	HA36-6.1	Start Cover Assy	1
8	01104013	GB8074.4	Screw MSX14	4
9	01022074	CG520-KH-5-1	Start Handle	1
10	10222075	1E40F-5F	Ring	1
11		1E36FE-8.6	Spring	1
12	01022075	1E36FE-8.2	Start Pole	2
13	01108005	GB6170	Nut M8	1
14	01009017	1E40F-5F	Start Reel	1
15	01107016	1E36F-2	Oil Seal	1
16	10010043	1E40F-5F	Crank Case	1
17	01024018	1E40F-5.8-4	Gasket	1
18	01113004	GB/T276	Bearing 6202/P5	1
19	01007036	1E40F-5F	Crank Shaft	1
20	01101001	GB1096	Key 3XSX13	1
21	01101002	GB119	Pin	2
22	01010042	1E40F-5F	Crank Case	1
23	01103002	GB/T770.1	Screw MSX30	4
24		1E40F-5.9	Oil Seal	1
25	01108008	1E40F-5.3-2	Magneto Rotor Comp.	1
26	01107005	GB/T97.1	Washer 8	1
27	01106004	GB/T859	Washer 8	1
28	01108043	1E40F-5F	Ignition Coil Comp.	1
30	01103003	GB/T70.1	Cord Comp.	1
30	01008049	1E40F-3-A.8-2	Spring	1
31	01008075	HA46-2.1-1	cap	1
32	01100016	1E40F-5.3-1	plug	1
33	01114005	1E36F-3	Washer8	1
34	01033014	1E40-5.6	Expander Comp.	2
35	01114006	1E40F-5.11	Washer	2
36	01114001	1E40F-5.12	Screw Pin	2
36	01055004	CJ431S0.1.1	Clutch Drum Comp.	1
38	01051002	1E40F-6F	Clutch Case Assy	1
39	01109008	GB845	Screw ST4.2X9.5	3
40		1E40F-5F	Shutterer	1
41	01131019	GB/T276	Bearing 6202-2RS/P5	1
42		1E40F-5F	Clutch Case	1
43	01051023	1E40F-5F	Stopper	1
44	01103005	GB/T70.1	Screw MSX16	4
45	01055013	GB/T70.1	Screw M5X12	2

NO.	ERP NO.	PART NO.	PART NAME	QTY.
46	01105006	1E40F-5F	Clamp B	1
47	01071005	1E40F-5F	Rubber Cover	1
48	01052015	1E40F-5F	Clamp A	1
49	01103040	GB/T70.1	Screw MSX25	2
50	01104007	GB/T70.1	Screw MSX16	1
51	01080011	GB854.1	Stop Ring 15	1
52	01010005		Bearing 10X13X13.5	1
52	01104030	1E40F-03.02.01	Ring	1
53	01104030	1E40F-5.4-1	Piston Pin	1
54	01012006	1E40F-P.4-1	Piston	1
56	01101009	1E40F-P.32.3-5	Piston Ring	1
57	01024001	1E40F-5.6	Gasket	1
57	01034001	1E40F-5F	Cylinder	1
59	01103008	GB/T70.1	Screw MSX20	4
60	01016010	LBRTC	Spark Plug	1
61	01024022	1E40F-5.2	Gasket	1
62	01025010	1E40F-5F	Admitting Pipe	1
63	01103004	GB/T70.1	Screw MSX25	2
64	01024021	1E40F-5.4.1	Gasket	1
65	01015049	1E40F-5.8	Carburetor	1
66	01020028	1E40F-5F	Cleaner Cover Assy	1
67	01020097	1E40F-5F	Cleaner Inside Cover Assy	1
68			Choker Handle	1
69	01108003	GB/T809	Nut M4	1
70	01108003	1E40F-5F	Choker	1
71	01108003	GB/T846	Screw ST 4.2X13	1
72	01103044	GB/T70.1	Screw MSX10	1
73		1E40F-5F	Filter Net	1
74		1E40F-5F	Cleaner Outside Cover	1
75		1E40F-5F	Screw	1
76		GB04F-5F	Guide Cover Assy	1
77		1E40F-5F	Guide Clap Board	1
78		GB845	Screw ST 2.9X9.5	1
79		1E40F-5F	Gasket	1
80		1E40F-5.2	Muffler	1
81		GB8074.4	Screw MSX12	2
82		GB/T70.1	Screw M6XS0-8.8	2
83		1E40F-5F	Muffler Cover	1
84		GB/T845	Screw ST 4.2X13	3
85		1E02102F	Fuel Tank Assy	1
86		1E40F-5F	Rubber Cover	1
87		GB/T70.1	Screw M5X12	2
88		1E40F-5F	Fuel Tank Assy	1
89		GB/T70.1	Screw MSX12	2

1E40F-5F





58 CYLINDER



55 PISTON



56 PISTON RING



54 PISTON PIN



53 RING



52 BEARING 10X13X13.5



22 CRANK CASE



19 CRANK SHAFT



16 CRANK CASE



35 EXPANDER COMP.



28 IGNITION COIL COMP.



25 MAGNETO ROTOR COMP.



74 CLEANER OUTSIDE COVER



73 FILTER NET



67 CLEANER INSIDE COVER ASSY



82 MUFFLER



87 FUEL TANK ASS'Y



65 CARBURETOR



62 ADMITTING PIPE



1 STARTER



41 SHUTTERER



14 START REEL



60 SPARK PLUG



79 GUIDE COVER



78 GUIDE CLAP BOARD



43 CLUTCH CASE




75 SCREW



17/75/76/16/41 GASKET

THE PARTS LIST OF MODEL 140FA

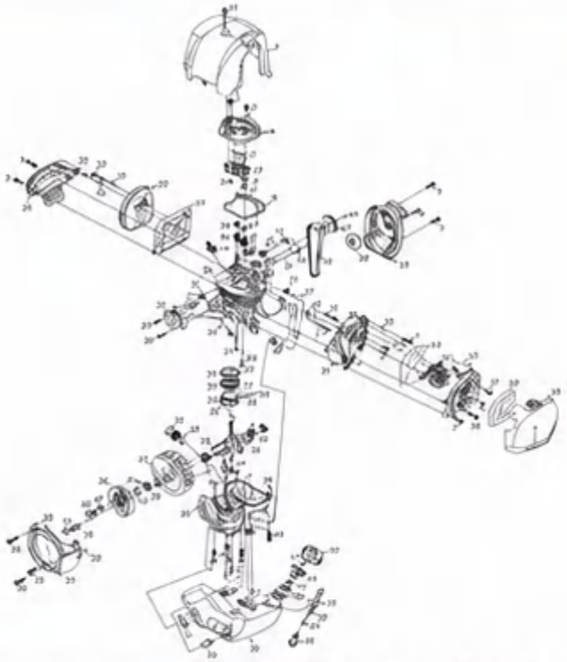

NO.	ERPNO.	PART NO.	PART NAME	QTY.
1	01112003	140FA	SCREW M5X15	9
2	01018030	140FA	CYLINDER COVER	1
3	01102004	140FA	SCREW M5X12	2
4	01004030	140FA	CYLINDER VALUE COVER	1
5	01054023	140FA	OIL GAS SEPARATOR	1
6	01032004	140FA	INSIDE COVER	1
7	01034015	140FA	RUBBER CUSHION	1
8	01034022	140FA	RUBBER CUSHION	1
9	01054002	140FA	VALVE SPRING SEAT	2
10	01054001	140FA	VALVE SPRING	2
11	01034008	140FA	EXHAUST VALVE ROCKER	1
12	01034050	140FA	INLET VALVE ROCKER	1
13	01034005	140FA	ROCKER PIN	2
14	01034006	140FA	EXHAUST ROCKER	1
15	01034007	140FA	INLET ROCKER	1
16	01034011	140FA	SYNCHRONOUS BELT	1
17	01034012	140FA	CAM WHEEL	1
18	01034013	140FA	CAMSHAFT	1
19	01006010	140FA	START REL	1
20	01022014	140FA	STARTER	1
21	01034017	140FA	ADMITTING GASKET	1
22	01006006	B5	HOLDING-DOWN CLIP	1
23	01034026	140FA	MUFFLER BAFFLE-II	1
24	01108014	GB/T6177.1	MUT M6	2
25	01108014	GB/T6177.1	MUT M6	2
26	01108024	140FA	DOUBLE-EDGED BOLT	1
27	01032009	140FA	MUFFLER	1
28	01034005	140FA	MUFFLER BAFFLE	1
29	01018009	CMR5H	SPARK PLUG	1
30	01010118	140FA	CYLINDER	1
31	01034014	140FA	FASTENER	72
32	01006022	140FA	IGNITION STATOR	1
33			BOLT,M4X14	1
34	01082006	BG-328	STOPPING WARE	75
35	01034003	140FA	EXHAUST VALVE	76
36	01034004	140FA	INLET VALVE	77
37	01034016	140FA	BALANCING PRESSURE PIPE	78
38	01088067	10	HOLDING DOWN PIPE	79
39	01054018	140FA	O-SEAL RING	71
40	01110010	GB/T5783	SCREW M6X55	81
41	01025006	140FA	ADMITTING PIPE	82
42	01034019	140FA	BLAST PIPE	1

NO.	ERPNO.	PART NO.	PART NAME	QTY.
43	01024039	140FA	GASKET	1
44	01015020	140FA	CARBURETOR	1
45		140FA	CLEANER INSIDE COVER	1
46	01112002	140FA	SCREW M5X22	6
47		140FA	FILTER NET	1
48		140FA	AIR FILTER COVER	1
49	01011012	140FA	NO.1 PISTON RING	1
69	01011012	140FA	NO.2 PISTON RING	1
51	01011013	140FA	OIL SCRAPER RING	2
52	01011011	140FA	LINER RING	1
52	01012011	140FA	PISTON	1
54	01007017	140FA	CRANKSHAFT	1
55	01013009	140FA	PISTON PIN	1
56	01017010	140FA	OIL SEAL	1
57	01035016	14F2-9	OIL SCALE	1
58		14F2-9	O-SEAL RING14*2.65	1
59			KEY 5X5X13	1
60	01017009	140FA	OIL SEAL	1
61	01034010	140FA	REED VALUE	1
62	01008021	140FA	MAGNETO ROTER COMP	1
63	01108017	GB/T6177.1	MUT M8	1
64	01114005	IE40F-3	WASHER B	2
65	01033014	IE40F-5.6.1	CLUTCH	1
66	01114008	IE40F-5.11	WASHER	2
67	01114001	IE40F-5.12	SCREW PIN	2
68	01100005	GB119	PIN D4n8	2
68	04002049	140FA	PIACNETO COVER	1
70	01001017	140FA	CRANKCASE	1
71	01122011	140FA	SCREW M6X22	4
72			FUEL TANK LID	1
73			AIR ADMISSION VALUE	1
74			INSIDE COVER	1
75			SHELL COVER	1
76			AIRPROOF GASKET	1
77	01034021	140FA	RUBBER CUSHION	1
78			FUEL TANK	1
79			PLUG	1
80			FUEL RETURN PIPE	1
81			FUEL SUCTION PIPE	1
82			FILTER	1
83	01014006	140FA	RING	2

140FA




2 CYLINDER COVER


4 CYLINDER VALUE COVER


5 OIL GASSEPRATOR


6 INSIDE COVER


9 RUBBER CUSHION


12 EXHAUST VALVE ROCKER


13 INLVE VALVE ROCKER


14 ROCKER PIN


15 ROKAUST ROCKER


16 INLET ROCKER


17 SYNCHRONOUS BELT


18 CAM WHEEL


19 ROCKER PIN


20 START REL


21 STARTER


37 BALANCING PRESSURE PIPE


41 ADMITTING PIPE



42 BLAST PIPE


24 AIR FILTER COMP.


44 MUFFLER BAFFLE-II


32 IGNITION STATOR


53 PISTON

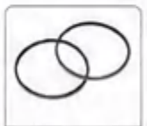
49 NO.1 PIA TON RING


50 NO.2 PIA TON RING


52 OIL SCRAPER RING


52 LINER RING


55 PISTON PIN


83 RING


54 CRANK SHAFT


62 MAGNETO ROTER COMP.


65 CLUTCH


69 MAGNETO COVER



78 FUEL TAK


57 OIL SCALE


77 RUBBER CUSHION


FUEL TANK SUPPOR

THE PARTS LIST OF MODEL 139F

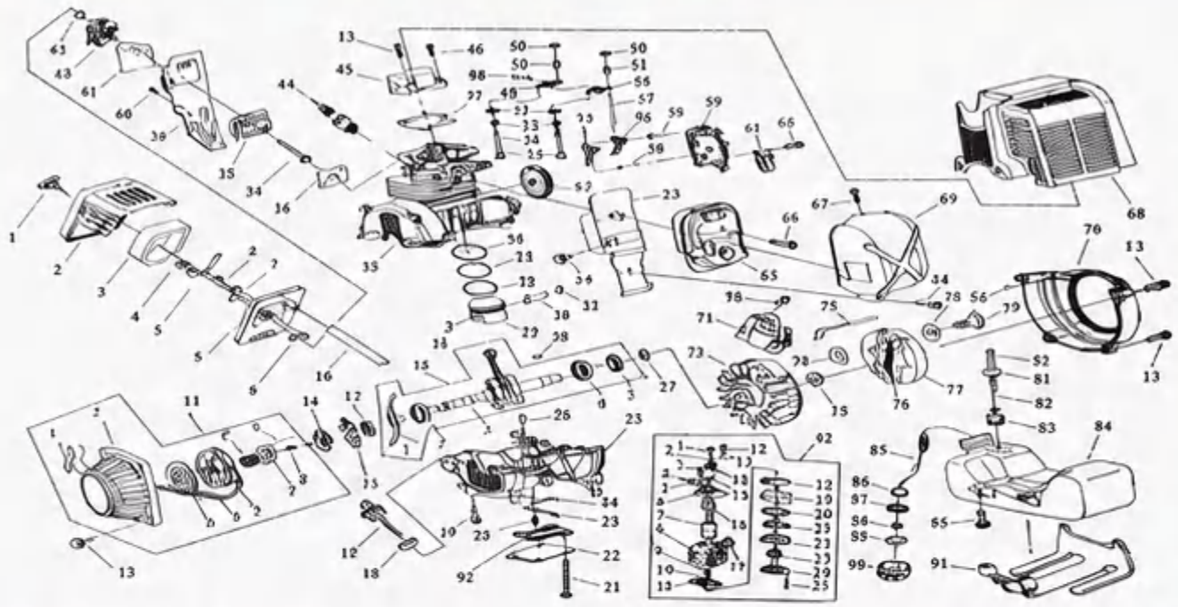

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01305001	1E34F-1.2	OUTSIDE COVER	1
2	01305002	139F-2.1-2	OUTSIDER COVER	1
3	01305003	139F-2.1-1	FILTER NET	1
4	01108004	GB/T6177.1	NUT M5	1
5	01305005	139F-2.7.1-13	BAFFLER	1
6	01305006	GB/T845	SCREW ST4.2X12-F-H	1
7	01305007	139F-2.1.1-2	CHOKE	1
8	01305008	139F-2.1.1-1	INSIDE COVER	1
9	01305018	139F-2.1.1-1	CHOKE HANDLE	1
10	01303018	139F-2-4	WIARIIRE	1
11	01107012	139F-6G	SEAL	1
13	01308011	139F-9-2A	START REEL	1
13	01305021	139F-9-1	FAN	1
14	01307020	139F-9.1	CRANK SHAFT COMBINE	1
16	01307021	142F-9	DIPSTICK	1
17		142F-10	SEAL	1
18		GB/T9074.13	SCREW MSX20	1
19	01104043	GB/T9074.13	SCREW M3.8	1
20	013050149	GB/T9074.13	SCREW MSX65	1
21	01305001	139F-3	CYLINDER COVER	1
22	01305013	139F-7.18	BOARD	1
23	01305013	139F-7.19	REED	1
24	01105019	139F-7.16	GRANK CASE	1
25	01109010	GB119.2	PIN	2
26	01107011	139F-6	SEAL	1
27	01101011	GB1099	KEY 3XSX13	1
28	01102012	139F-9.2	PISTON	1
29	01103010	139F-9.3	PISTON PIN	1
30	01103007	139F-6.3	RE ING	1
31	01104016	139F-6.1	OIL RING	2
32	01101015	139F-4.5	SECOND PISTON RING	1
33	01104017	139F-4.4	FIRST PISTON RING	1
34	01102010	139F-7.1	CYLINDER	1
35	01204042	139F-2.3	ADMITTING GASKET	1
36	01110009	GB/TS766	SCREW MSX75	1
37	01050007	139F-2.2	ADMITTING PIPE	1
38	01305020	139F-6	BOARD	1
39	01104019	GB/T9074.5	SCREW MSX8	1
40	01102044	139F-2.1	GASKET	1
41	01105024	139F-2.2	CARBURETOR	1
42		GB3452.1	O RING SX2.65	1
43		ASRTC	SPARK PLUG	1
44	01305015	139F-3	CYLINDER COVER	1
45	01305017	GB/T9074.13	SCREW MSX16	1
46	01204041	139F-5	CYLINDER COVER GASKET	1
47				

NO.	ERP NO.	PART NO.	PART NAME	QTY.
48	01305019	139F-7.8	ROCKER PIN	2
49	01305010	139F-7.7	ROCKER	2
50		139F-7.5	ADJUST NUT	2
51		139F-7.6	JIB SEAT	1
52	01305015	139F-9.6	SPRING SEAT	2
53	01305024	139F-7.10	SPRING	2
54	01305020	139F-7.12	INPUT VALUE	1
55	01305021	139F-7.11	OUTPUT VALUE	1
56	01305006	139F-7.3	BELOW ROCKER	2
57	01305007	139F-7.2	JIB	2
58	01305006	139F-7.1	NUT	1
59		GB1096-8	COVER	1
60		GB/T9074.4	SCREW M4X16	1
61		139F-7.15	BOARD	1
62	01305017	139F-7.2	CAM WHEEL	1
63	01104019	GB/T9074.5	BOARD	1
64	01305018	139F-4	SCREW MSX8	1
65		GB/T9074.13	MUFFLE	1
67		GB/T9074.8	SCREW M5XS0	1
68		GB/T9074.6	SCREW M6X16	1
69	01305012	139F-3	CYLINDER COVER	1
69	01305001	139F-1	MUFFLE COVER	1
70	01002035	139F-3	FLY WHEEL COVER	1
71	01080022	139F-5	COIL	1
72	01080023	139F-6	FLY WHEEL	1
73	01108034	GB/T6177.2	NUT M10X1.25	1
74	01104010	1E34F-3	WASHER B	1
75		139F-5.1	PARKING	1
76		1E40F-5.6-1	SPRING	1
77		1E34F-5.6-1	EXPANDER	1
78		1E40F-5.6-1	WASHER	2
79		1E40F-5.12	SCREW PIN	2
80		139F-1-2	FUEL PIPE	1
81		1E36FF-8.1.1	PLUG	1
82		1E32FL-6.2-4	FUEL PIPE	1
83		1E32FL-6.2-4	CLEANER	1
84		1E32FL-6.2-2	FUEL TANK	1
85		1E36F-4.1.1	CHAIN	1
86		EB-41S.4.1.2	END COVER	1
87		EB-41S.4.1.2	INSIDE COVER	1
88		EB-41S.4.1.1	INLET	1
99		C640-09.1.2	GASKET	1
90	01021011	139F-11.1	FUEL TANK LID	1
91	01021045	139F-10	FUEL TANK NOG	1
92	01024043	139F-8	SEAL	1

139F





68 CYLINDER COVER



35 CYLINDER



45 CYLINDER COVER



44 SPARK PLUG



38 ADMITTING PIPE



39 BOARD



42 CARBURETOR



62 CAM WHEEL



59 COVER



48 ROCKER PIN
49 ROCKER



56 BELOW ROCKER



57 JIB



55 OUTPUT VALUE



63 BOARD




65 MUFFLE



69 MUFFLE COVER




29 PISTON

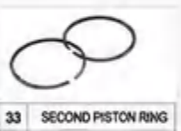

33 SECOND PISTON RING
34 FIRST PISTON RING



30 PISTON PIN

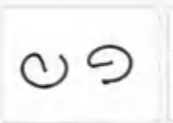

31 RING



16 CRANK SHAFT COMBINE



25 GRANK CASE



22 BOARD



72 FLY WHEEL



71 COIL



70 FLY WHEEL COVER



2




3



84



91

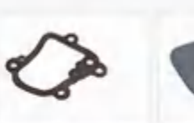

47 CYLINDER COVER GASKET



36 ADMITTING GASKET



41 GASKET




2 SEAL



15 FAN



14 START REET

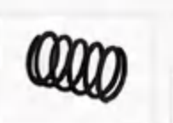

53 SPRING




17 DIPSTICK

52 SPRING SEAT

32 OIL RING

THE PARTS LIST OF MODEL 139F-2

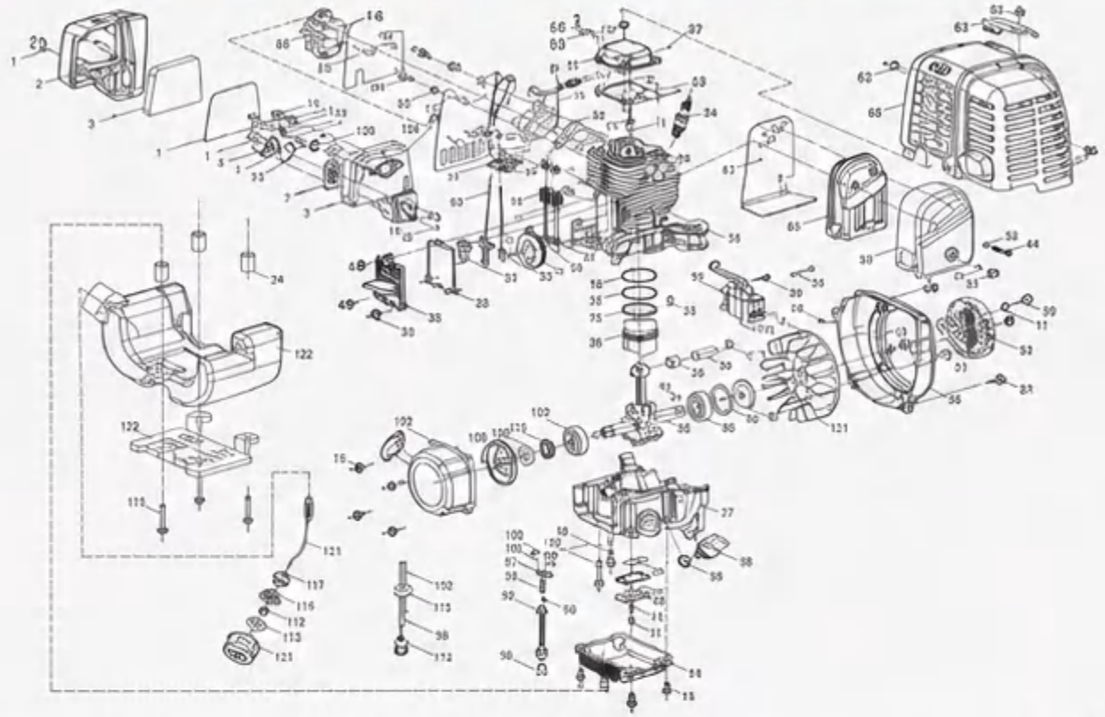

NO.	ERP	PART NO.	PART NAME	QTY.
1	01104007	GB/T68744-4	SCREW M5*16	5
2	01035027	139F-2-1-1	AIR FILTER COVER	1
3	01035028	139F-2-11-2	FILTER 1	1
4	01035029	139F-2-11-3	FILTER 2	1
5	01035031	139F-2-1-5	UNIDIRECTIONAL VALVE	4
6	01035031	139F-2-5-6	UNIDIRECTIONAL VALVE	4
7	01035033	139F-2-1-10	UNIDIRECTIONAL VALVE SUPPORT	1
8	01035033	139F-5-3	DISTRIBUTION TUBE	1
9	01035034	139F-2-11-1	AIR FILTER INNER COVER	1
10	01035035	139F-5-6	OIL RETURN PIPE	1
11	01035036	139F-6-6	BALANCING PRESSURE PIPE	1
12	01035037	139F-12-11	CHOKE	1
13	01035038	139F-12-2	CHOKE HANDLE	1
14	01035039	139F-12-7	OIL BAFFLE PLATE	1
15	01104047	GB/T80764	SCREW M5*8	2
16	01035037	139F-6-7	CARBURETOR GASKET	1
17	01034036	139F-7-6	CARBURETOR GASKET	1
18	01102035	GB/T5010	SCREW M5*16	10
19	01035037	139F-12-3	AIR FILTER WASHER	1
20		WASHER		1
21	01035038	139F-5-11	AIR DEFLECTOR	1
22	01035030	139F-2-10-5	ROCKER ARMS	2
23	01035020	139F-2-10-6	TAPPETS	2
24	01035026	139F-1-6	ADJUSTING NUTS	2
25	01035041	139F-11-1-1	TAPPETS SEAT	2
26	01035041	139F-11-1-5	UNIDIRECTIONAL VALVE	2
27	01035043	139F-2-10-9	VALVE SPRING SEAT	2
27	01035043	139F-2-10-4	VALVE SPRING	2
28	01035044	139F-10-3	BALL VALVE	1
29	01035046	139F-6-1-1	INCREW M5*16	1
31	01104037	GB/T80764	SCREW M5*8	1
32	01035048	139F-2-10-1	SIDE COVER GASKET	1
33	01034036	139F-11-6	UNDER ROCKER GASKET	1
34	01035039	139F-11-4	TAPPET GASKET	2
35	01035031	139F-11-9	CAM WHEEL	1
36	01035052	139F-2-10-5	ROCKER SHAFT	1
37	01035053	139F-6-6	EXHAUST VALVE	1
38	01035054	139F-2-6	CONNECTOR	1
39	01035055	139F-2-10-2	ROCKER PIN	2
40	01035056	139F-2-11-2	COPPER PIPE	1
41	01035057	139F-2-11-1	CYLINDER HEAD COVER	1
42	01105007	GB/T6172	NUT M6	1

NO.	ERP	PART NO.	PART NAME	QTY.
43	01035058	139F-16-1	THROTTLE ROPE SUPPORT PIPE	1
44	01035059	139F-16-2	INLET VALVE	1
45	01035060	139F-16-1	INLET VALVE GASKET	1
46	01035061	139F-2-10-7	SEAL COVER	1
47	01035062	139F-2-10-8	SEALWASHER	1
48	01035063	139F-5-2	CYLINDER HEAD COVER WASHER	1
49	01035064	139F-2-9	SPARK PLUG	1
50	01035065	QJT6A	SPARK PLUG COVER	1
51	01104005	GB/T 6053-2000 M/T4	SPARK PLUG COVER	1
52	01101007	139F-2-1	SCREW M5*10	1
53	01035066	139F-15-3	CYLINDER COVER	1
54	01035067	139F-15-1	MUFFLER SEAL WASHER	1
54	01035068	139F-15-11	MUFFLER	1
56	01035069	139F-15	MUFFLER COVER	1
57	01104072	GB/T6176	WASHER 5	1
58	01104070	GB/T818	OIL PIPE CLIP	1
59	01035070	139F-2-12	OIL PIPE CLIP	1
60	01104072	GB/T71	SCREW M5*40	1
61	01140061	139F-5-12	SCREW PIN	2
62	01104008	139F-11-1	WASHER	2
63	01035071	139F-6-6	CLUTCH	1
64	01104005	139F-3	WASHER B	1
65	01035066	139F-05-12	MAGNETO COVER	1
66	01035065	BOLT	BOLT M4*16	1
67	01101000	GB/T895	WASHER	1
68	01035072	GB/T 65-2	STOPPING WIRE	1
69	01035072	GB/T6176-13	BOLT M6*16	1
70	01035070	139F-29	MAGNETO ROTOR COMP.	2
71	01035070	139F-4-4	HEAT INSULATION PAD	1
72	01101014	139F-23-2	NO.1 PISTON RING	1
73	01101002	139F-23-3	NO.2 PISTON RING	1
74	01011049	139F-23-1	OIL SCRAPER RING	1
75	01012034	139F-22-1	PISTON	1
76	01011073	P40B-4	RING	2
77	01013020	139F-23-4	PISTON PIN	1
78	01014012	HK1012	SMALL NEEDLE BEARING	1
79	01011006	GB/T1096-86	FLAT KEY 3*23	1
80	01012022	139F-27	OIL SEAL	1
81	01035014	139F-24	RING	1
82	01012063	GB/T276	BEARING 6201*P5	1
83	01011000	139F-23-3.1.1	CRANKSHAFT COMP.	1
84	01035075	139F-2-10-1	CYLINDER	1
85	01035069	139F-11	OIL SCALE	1

139F-2




85 CYLINDER


84 CRANK SHAFT COMP


56 MUFFLER COVER


94 OIL SUMP


42 CYLINDER HEAD COVER


51 SPARK PLUG COVER


9 AIR FILTER INNER COVER


32 SIDE COVER




3 FILTER 1


4 FILTER 2



66 MAGNETO COVER


71 MAGNETO ROTOR COMP


123 OIL TANK FRAME


54 MUFFLER SEAL WASHER


21 AIR FILTER COVER


GASKET ASSY


36 CAM WHEEL


708 IGNITION COIL


22 AIR FILTER COVER



55 MUFFLER


86 OIL SCALE


119 OIL CAP


38 EXHAUST VALVE


45 INLET VALVE


737475 PISTON RING OIL RING


76 PISTON



113 OIL CAP


50 SPARK PLUG

NO.	ERP	PART NO.	PART NAME	QTY.
86	01035070	GB/T3452.1-1	WASHER 14*13	1
87	01035071	139F-2-4-5	REED VALVE	1
88	01035072	GB/T3452	REED BALL Φ4	1
89	01035073	139F-1-30	REED VALVE COVER WASHER	1
90	01102010	139F-5-3	REED VALVE COVER	1
91	01102010	GB6188	WASHER 4	1
92	01035076	GB/T70.1	SCREW M4*10	1
93	01035076	139F-2-10	OIL SUMP	1
94	01035077	139F-12-6	OIL SEAL RING	1
95	01035078	139F-5-9	OIL PIPE BALL	1
96	01035079	139F-6-7	OIL PIPE	1
97	01035080	139F-5-2	CONNECTOR	1
98	01035081	139F-2-4-4	BALL BAFFLE	1
99	01035082	GB/T 308	STEEL BALL Φ6.5	1
100	01035083	O RING	O RING	1
101	01035084	GB/T6A	SCREW M5*5	2
102	01035085	139F-2-8	CLIP	1
103	01035084	139F-2-6	BEARING 6301-2RS/P5	1
104	01104085	139F-7-6	TIMING GEAR	1
105	01035086	139F-4-2-1	GASKET	1

NO.	ERP	PART NO.	PART NAME	QTY.
106	01017003	139F-2	OIL SEAL	1
107	01009010	139F-2-3	START REEL	1
108	01012087	139F-2-2	STARTER	1
109	01035089	139F-8	RUBBER PLUG	1
110	01012076	EB-415-2-4-2	PLASTIC TUBE	1
111	01012076	EB-415-6-2-2	OIL PIPE PLUG	1
112	01021060	PA81Z2.5-2	FILTER	1
113	01021061	139F-11-1	OIL CAP	1
114	01021062	CG42S 13.1-2	SEAL WASHER	1
115	01021066	EB-415-4.11-1	AIR ADMISSION VALVE	1
116	01021063	139F-E.2-2	INSIDE COVER	1
117	01021064	139F-E.2-3	END CAP	1
118	01021065	EB-LZT2.6-3	ANTI OFF CHAIN	1
119	01021066	139F-2-6-1	OIL CAP	1
120	01035081	139F-2-6	FUEL TANK BUSHING	3
121	01035071	139F-2-7	OIL TANK FRAME	1
124	01104014	GB/T80274.4	SCREW M6*30	3
125	01035082	CG420.13.2-2	PLASTIC TUBE	1


THE PARTS LIST OF MODEL CG431

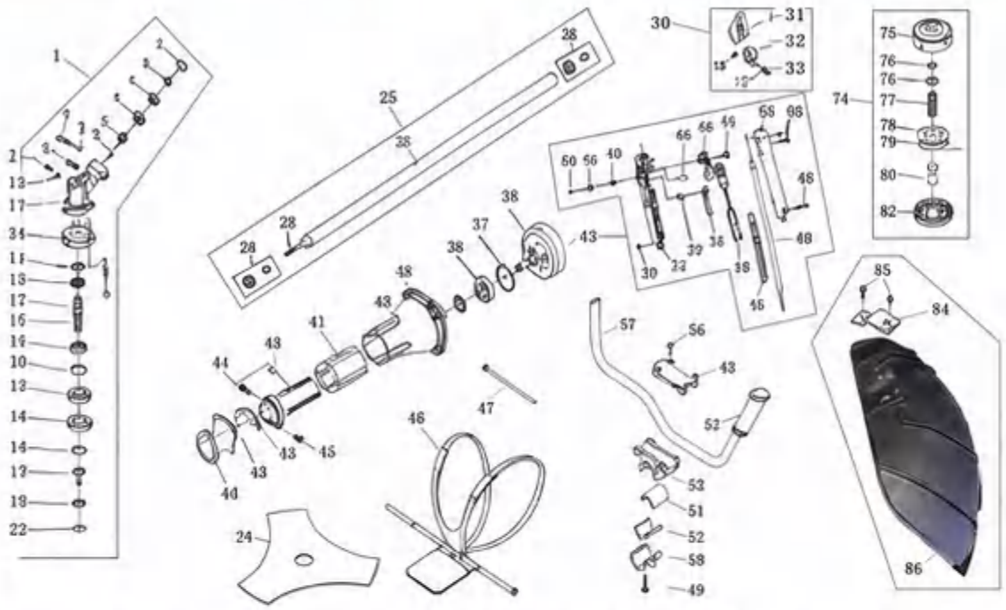

NO.	ERP NO.	PART NO.	PART NAME	QTY.
0	03049011	CG415.3	GEAR CASE ASS'Y	1
1	01088001	GB/T893.2	STOP RING 26	1
2	01088010	GB/T894.1	STOP RING 10	1
3	01113017	GB/T276	BEARING 6000-2RS/P5	2
4	01065005	CG415D.6-4	PINION	1
5	01103010	GB/T70.1	SCREW M6X20	6
6	01106003	GB/T93	WASHER 6	5
7	01104006	GB/T6074.14	SCREW M6X12	4
8	01108047	GB/T29.2	BOLT M6X12	4
9	01107003	GB/T97.1	WASHER 6	5
10	01108016	BG-305.12.4-4	GEAR CASE	1
11	01113009	GB/T276	BEARING 6000/P5	1
12	01064003	BG-328.9-5.2	GEAR	1
13	01063001	CG306E.11-1	GEAR SHAFT	1
14	01113009	GB/T276	BEARING 6002-2RS/P5	1
15	01113012	GB/T893.2	STOP RING 32	1
16	01088002	CG306E.11-1	GEAR RING 32	1
17	01113012	GB/T276	BEARING 6002-2RS/P5	1
18	01088004	GB/T893.2	STOP RING 20	1
19	01056002	BG-305.12-4	HOLDER A	1
20	01057001	CG306F.1-3	HOLDER B	1
21	01088002	GB/T852.1	WASHER 10	1
22	01108013	CG306F.1-3	LEFT NUT	1
23	01088016	GB/T91	PIN 2.5X16	1
24	01088010	CG420-2	BLADE 2SSX25.4X1.6	1
25	01106002	CG330B.1	PIPE COMP.	1
26	01074007	BG-328.9.4-4.5	RUBBER COVER ASS'Y	1
27	01087004	CG328	DRIVE SHAFT	1
28	01082006		PIPE φ28XLS SX1437	1
29	01088003		PINION	1
30	01065002	CG260.3	HOLDER ASS'Y	1
31		CG260.3.1	HARNESS CLAMP	1
32		CG260.3-1	CLAMP	1
33	01102001	GB/T70.1	SCREW M5X20	2
34	01108002	GB/T889.1	NUT M5	2
35		CG415.2	CLUTCH COMP.	1
36	01055004	CG415D.1.1	CLUTCH DRUM COMP.	1
37	01088003	GB/T893.1	STOP RING 35	1
38	01113019	GB/T276	BEARING 6202-2RS/P5	1
39	01088011	GB/T894.1	STOP RING 15	1
40	01056022	CG420.2A-1	LINKER	1

NO.	ERP NO.	PART NO.	PART NAME	QTY.
45	01103004	GB/T70.1	SCREW M6X25	1
47	01064002	BG415-1	WIRE CLAMP BAND	1
48	01082004	CG260A-CE.1	HARNESS ASS'Y	1
49	01104017	GB/T6074.13	SCREW M6X25	2
50	01053028	CG415D-2	CAP LOWER	1
51	01053051	CG330B-3	RUBBER WASHER	2
52	01053030	CG415D-3	BRACKET	1
54	01072001		HANDLE RUBBER	1
55	01053029	CG415D-1	CAP UPPER	1
56	01105004	GB/T6074.13	BOLT M5X25	4
57	01060001		HANDLE ASS'Y	1
58	01075040		LEVER ASS'Y	1
59		GB/T846	SCREW ST2.9X13	1
60		BL750.3-9	BUTTON	1
61		BL750.3-7	SPRING	1
62		BL750.3-8	CLOCK PIN	1
63		BL750.3-4	HANDGRIP	1
64		BL750.3-1	SPRING	1
65		BL750.3-5	BOX RIGHT	1
66		GB/T845	SCREW ST2.9X18	2
67	01103002	GB/T70.1	SCREW M5X30	1
68		CG260B-CE.1.1	CABLE COMP.	1
69		BG-328A.2	TUBE	1
70		CG328.2.1.1	STOP BUTTON COMP.	1
71		BL750.3-3	HANDGRIP	1
72		BL750.3-2	SPRING	1
73		BL750.3-6	BOX LEFT	1
74	01091010	CG306F.8	NYLON CUTTER HEAD	1
75		CG306F.8.1	CASE	1
76		CG306F.8.4	LEFT NUT A	1
77		CG306F.8.4	WASHER	1
78		CG306F.8.3	SPRING	1
79			CORD φ2.5MM	2
80			CORD HOLDER	1
81			COVER	1
82			COVER	1
83			PROTECTOR	1
84			SAFETY GUARD BARCKET	1
85	01103004	GB/T70.1	SCREW M6X25	2
86	01088027	CG330B-CE.2.1-2	BLADE	1

THE PARTS LIST OF MODEL CG411

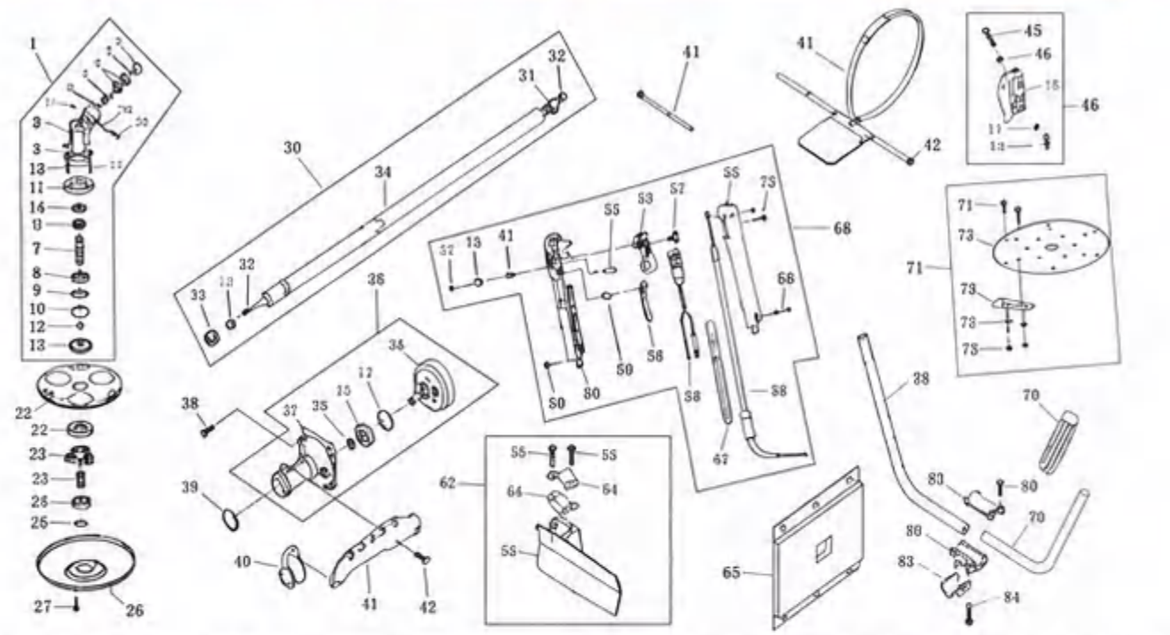


NO.	ERP NO.	PART NO.	PART NAME	QTY.
0		CG411.5	GEAR CASE ASS'Y	1
1		GB893.2	STOP RING 28	1
2		GB894.1	STOP RING 12	1
3		GB/T276	BEARING 6001-2RS/P6	2
4		CG415D.6-4	PINION	1
5		CG415.3-1	STEEL PLATE CAP	1
6		GB/T6074.11	BOLT M8X12	2
7		GB/T6074.11	BOLT M8X12	1
8		BG305.12.4-4	GEAR CASE	1
9	01103001	GB/T70.1	SCREW M5X12	1
10	01106001	GB/T70.2	BLADE COVER	1
11	01158001	BG305.12.4-9	BEARING 6000/P6	1
12	01130009	GB/T276	GEAR	1
14	01064003	BG328.9-5.2	GEAR	1
14	01058002	GG416	GEAR SHAFT	1
15	01113019	GB/T276	BEARING 6202-2RS/P6	1
16		CG420.61	OIL SEAL	1
17	01088003	GB / T893.2	STOP RING 35	1
18		BG-305.12-4	BUSHING	1
19	01056002	BG305.12.4-5	CUTTER HOLDER	1
20	01057004	BG-328.9.5-8	MASHER	1
21		CG415D.6-13	CUTTER HOLDER CAP	1
21		CG415D.6-1.3	BEARING SEATING	1
23		CG61SD.6-1.2	SHAFT	1
24		GB/T276	BEARING 6202-2RS	1
25		GB / T894.1	STOP RING 15	1
26		CG417.1	SHIELD	1
27		GB/T70.1	SCREW M6X16	1
28		GB/T93	WASHER M6	1
29		GB/T70.1	SCREW M6X20	1
30		CG411.4	PIPE COMP	1
31		CG415D.4-2	RUBBER COVER	1
32		BG-328.9.4-4	OIL-BEARING	1
32		1534MM	DRIVE SHAFT	1
34		CG415D.4.1A	DRIVE SHAFT PIPE	1
35		CG411.1	CLUTCH COMP	1
36	01055004	CG415D.1.1	CLUTCH DRUM COMP	1
37	01050017	CG411.1.1	CLUTCH CASE	1
38		GB/T9074.13	BOLT M6X20	2
39	01088004	GB / T893.2	STOP RING 37	1
40	01088017	CG411.5	HANG RING	1
41		CG411.1-1	HAANG HANDLE	1
42		GB/T9074.12	BOLT M6X16	1

NO.	ERP NO.	PART NO.	PART NAME	QTY.
44	01075022	CG260.4	HARNESS ASS'Y	1
45		CG411.3.1	LEVER ASS'Y	1
46		GB/T846	SCREW ST2.9X9.5	1
47		BL750.3-9	BUTTON	1
48		BL750.3-7	SPRING	1
49		BL750.3-8	LOCKPIN	1
50		BL750.3-4	HANDGRIP	1
51		BL750.3-1	SPRING	1
52		BL750.3-5	BOX RIGHT	1
53		GB/T845	SCREW ST2.9X18	2
54	01102003	GB/T70.1	SCREW M5X30	1
55	CG411.3.1.1	CG411.3.1.1	CABLE COMP	1
56	CG411.3.1.1.1	TUBE	TUBE	1
57	CG411.3.1.1.1	BG411.3.1.1.1	STOP BUTTON COMP	1
58		BL750.3-3	HANDGRIP	1
59		BL750.3-2	SPRING	1
60		BL750.3-6	BOX LEFT	1
61		GB/T889.1	NUT M5	1
62		CG415D.6	SAFETY GUARD ASS'Y	1
63		CG415D.5.1.1	SAFETY GUARD	1
64		CG415D.5.1.1.1	SAFETY GUARD BRACKET	1
65	01999018	CG328.3	CUSHION	1
66	01986019	CG411.2	RING FOR LIMIT ASS'Y	1
67	01108007	GB/T6170	NUT M6	1
68		GB/T97.1	WASHER 6	1
69		CG411.2-1	RING FOR LIMIT	1
70	01990055	CG411.2-2	SPRING	1
71		GB/T5781	BOLT M6X45	1
72		CG411.6	BLADE HOLDER ASS'Y	1
73		GB/T29.2	BOLT M6X12	6
74		CG411.6-1	BLADE HOLDER	1
75		CG411.6-2	BLADE	1
76		GB/T93	WASHER 6	6
77		GB/T6170	NUT M6	6
78	01060003	CG411.3	HANDGRIP	1
79		CG415D.3-1	GRIP	1
80		GB/T9074.13	BOLT M6X25	4
81	01053020	CG415D.1	CAP UPPER	1
82	01053021	CG415D.1-1	BRACKET	1
83	01053019	CG415D.2	CAP LOWER	1
84		GB/T9074.13	BOLT M6X25	2
85	01060002	CG415D.2-2	HANDLE	1

SHAFT TOOLS SHOWING



THE PARTS LIST OF BG-328 BRUSH CUTTER

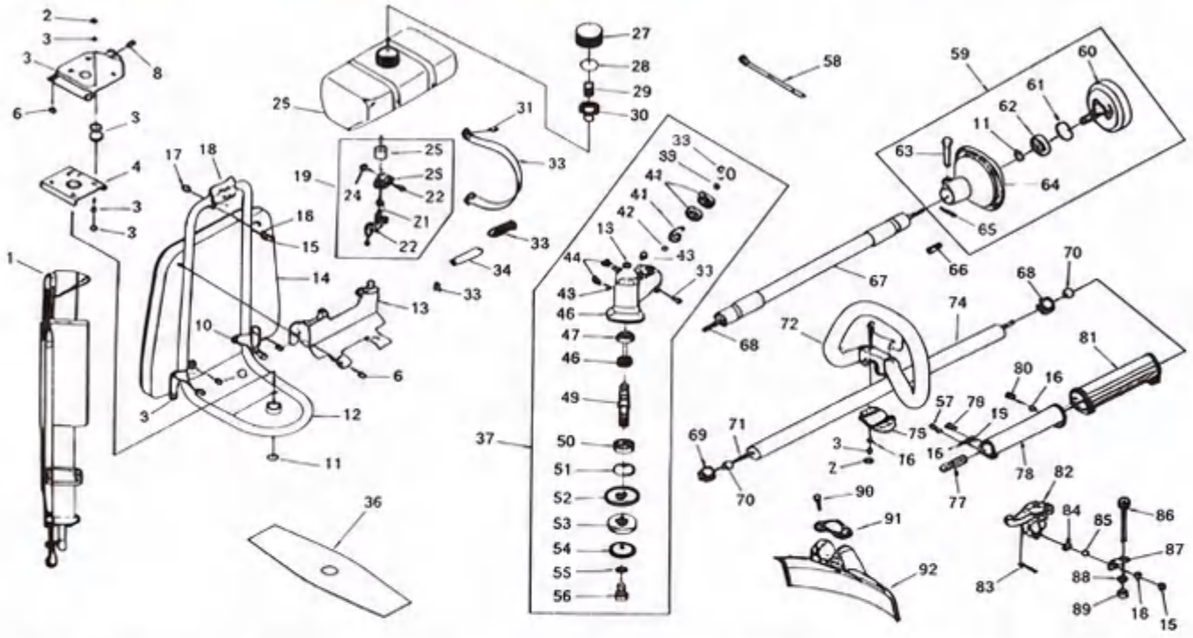

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01125002	BG305.8	SHOULDER BELT ASSY	1
2	01108005	GB/T167-10	NUT M6	10
3	01107002	GB/T90.3	WASHER 6	10
4	01103005	BG-328.2-2	ENGINE BASE COMP	1
5	01030016	BG415.4	CUSHION RUBBER COMP.	1
6	01104006	GB/T9074.4	SCREW M5X12	8
7	01104815	BG-328.2-1	ENGINE BASE	1
8	01125003	BG-328.1	SHOULDER PLATE HOLDER A	1
9	01125004	BG-328.2	SHOULDER PLATE HOLDER B	1
10	01108011	GB/T883.1	STOP RING 15	1
11	01030001	BG-328.3	SHOULDER FRAME COMP	1
12	01103002	BG-328.5	TANK HOLDING METAL COMP.	1
13	01103018	BG-328.6	SHOULDER PLATE COMP	1
14	01108004	GB/T167.10	NUT M5	6
15	01107002	GB/T90.3	WASHER 5	2
16	01104007	GB/T82.2	BOLT M5X16	1
17	01125005	BG-328.6-0	LIFTING METAL	1
18	01125005	BG-328.4	PETCOCK ASS'Y	1
20		BG-328.4-1	PETCOCK	1
21	01104001	GB/T85	FILTER BACK 12	1
22		CLIP	CLIP	1
22		CLIP	NUT	1
24	01123006	GB/T39.2	FLEXIBLE TUBE	1
25	01121005	BG-328.7-1	FUEL TANK	1
26	01123007	BG-328.7-2	TANK LID	1
28	01123009	BG-328.7-3	SPACER	1
28	01123009	BG-328.7-4	FILTER CORE	1
29	01123010	BG-328.7-5	INNER LID	1
30	01104009	GB/T9074.4	SCREW M5X20	2
31	01103028	BG-328.6	FUEL TANK BAND	2
32	01125011	BG-328.27	FUEL PIPE PROTECTION COIL	1
33	01123012	BG-328.8	FUEL PIPE	1
34	01123013	BG-328.3	FUEL PIPE CLIP	2
35	01080001	BG-328.10	BLADE	1
36	01080001	BG-328.9	GEAR CASE ASS'Y	1
37	01080001	GB/T 789.3	STOP RING 25	1
38	01080010	GB/T 789.4	STOP RING 10	1
39	01113017	GB/T1276	BALL BEARING 6000-2RS/P5/P6	1
40	01081004	CG10SF.1-2	PINION	1
41	01106004	CG415.3-1	STEEL PLATE CAP	1
42	01104015	CG416.9-5.1	GEAR CASE WASHER	1
43	01104015	GB/T782.2	BOLT M6X12	2
44	01104012	BG-328.9-5-1	OILING GASKET	2
45	01048002	BG-328.9-5-6	GEAR CASE ASS'Y	1

NO.	ERP NO.	PART NO.	PART NAME	QTY.
46	01113003	GB/T276	BOLT	2
47	01604003	BG-328.9-5-2	GEAR EARING 6000/P5	1
48	01603003	BG-328.9-5-3	GEAR SHAFT	1
49	01113018	GB/T276	BALL BEARING 6002-2RS/P5	1
50	01088002	GB/T883.2	STOP RING 32	1
51	01088001	BG-328.9-5-7	CUTTER HOLDER	1
52	01503002	BG-328.9-5-8	CUTTER HOLDER CAP	1
53	01088018	BG-328.9-5-9	BOLT PROTECTION COVER	1
54	01088001	GB/T882.1	S.WASHER 8	1
55	01108002	BG-328.9-5-10	BOLT	1
56	01102001	GB/T70.1	SCREW M5X20	2
57	01105001	BG415-1	WIRE CLAMP BAND	1
58	01108009	BG-328.8	CLUTCH COMP.	1
59	01108001	BG-328.8-1	CLUTCH DRUM COMP.	1
60	01108003	GB/T893.2	STOP RING 35	1
61	01085001	BG/T276	BALL BEARING 6202-2RS/P5	1
62	01088013	BG-328.8-2	PIN	1
63	01085006	BG-328.8-1	CUTTER CASE	1
64	01047022	JGW2.6A-2	CLICK	1
65	01102010	JGW Z 64.13	BOLT M6X20	4
66	01108003	BG-328.11	FLEXIBLE LINER COMP	1
67	01104002	BG-328.1-1-1	FLEXIBLE SHAFT COMP	1
68	01107004	BG-328.9-4-1/S	BUSHING COMP	5
69	01107004	BG-328.9-4-4	SHIELD GUARD .3	5
70	01107722	1220MM	HANDLE 10-1	1
71	01086001	BG-328.10-1	BOLT M6X45	2
72	01110011	GB/T5783	ALUMINIUM PIPE	1
73	01108001	2V25*15*190	HANDLE BRACKET A	1
74	01108020	GB/T97.1	S.WASHER 6	1
76	01088020	BG-328.9-1-02	ADAPTOR COMP	1
77	01084001	GB-328.9-2-2	JOINT PIPE	2
78	01103001	GB/T70.1	SCREW M5X10	2
79	01102002	GB/T70.1	SCREW M5X25	1
80	01107006	BG-328.9-2-1/2	GRIP	1
81	01103012	BG-328.9-3	THROTTLE LEVER ASS'Y	1
82	01108004	GB/T818	SCREW M5X25	1
83	01108003	GB/T167.10	NUT M8	1
84	01108002	BG-328.6-1	BUSHING	1
85	01102001	BG-328.9-3	STOP BUTTON COMP	1
86	01108004	GB/T67.1/GB/T7724	STOP BUTTON BRACKET	1
87	01108006	GB/T167/GB/T276	WASHER 8	1
88	01108003	GB/T9074.13	NUT M8	1
89	01108004	BG-328.9-1	BOLT M6X25	2
90	01108005	BG-305.13.1	SAFETY GUARD BRACKET	1
92	01080001	BG-305.13.1	SAFETY GUARD	1

HYAGRO

BG328
BRUSH CUTTER



Note: engine on page**



12 FRAME ASSY



12 SHOULDER FRAME COMP.



14 SHOULDER PLATE COMP



67 FLEXIBLE LINER COMP



1 SHOULDER BELT ASSY



26 FUEL TANK



36 BLADE



27 TANK LID



34 FUEL PIPE



5 CUSHION RUBBER COMP.



72 HANDLE



86 STOP BUTTON COMP.




82 THROTTLE LEVER ASSY



86 BLADE PROTECTOR



33 FUEL PIPE PROTECTION COIL



7 ENGINE BASE



64 CLUTCH CASE



60 CLUTCH DRUM COMP.



29 FILTER CORE



29 PIN



65 CLICK



54 BOLT PROTECTION COVER



53 CUTTER HOLDERCAP



52 CUTTER HOLDER




37 GEAR CASE ASS'Y



46 GEAR CASE



49 GEAR SHAFT



48 GEAR



41 PINION



56 BOLT



DOWN BASE COMP.



ENGINE



ALLOY BLADE



BOT BLADE



NYLON HEAD CUTTER







EARTH AUGER

DZ63

ENGINE:1E48F



DZ52

ENGINE:1E44F-2A





REDUCTION BOX ASSEMBLY



GEAR BOTTOM PLATE



DAMPING RUBBER PAD



DRIVEN DISK



LEFT HANDLE



CONTROL BOX



FRAME



01 HANDLE ASSEMBLY



02 HANDLE ASSEMBLY



CONNECTING PLATE



M8 HEXAGON SCREW SHAFT



FRAME



ASSEMBLY



POWER HEAD



Φ80mm



Φ100mm



Φ150mm



Φ200mm



Φ250mm



Φ300mm

WHEELED BRUSH CUTTER PARTS



GM300



FRAME



SUPPORTING WHEEL



SHAFT



PIPE2



PIPE1



STOP BUTTON ASS'Y



LEVER ASS'Y



CABLE COMP.



LEVER ASS'Y




CLUTCH COMP.



AIR-FILLED WHEEL



REAL WHEEL

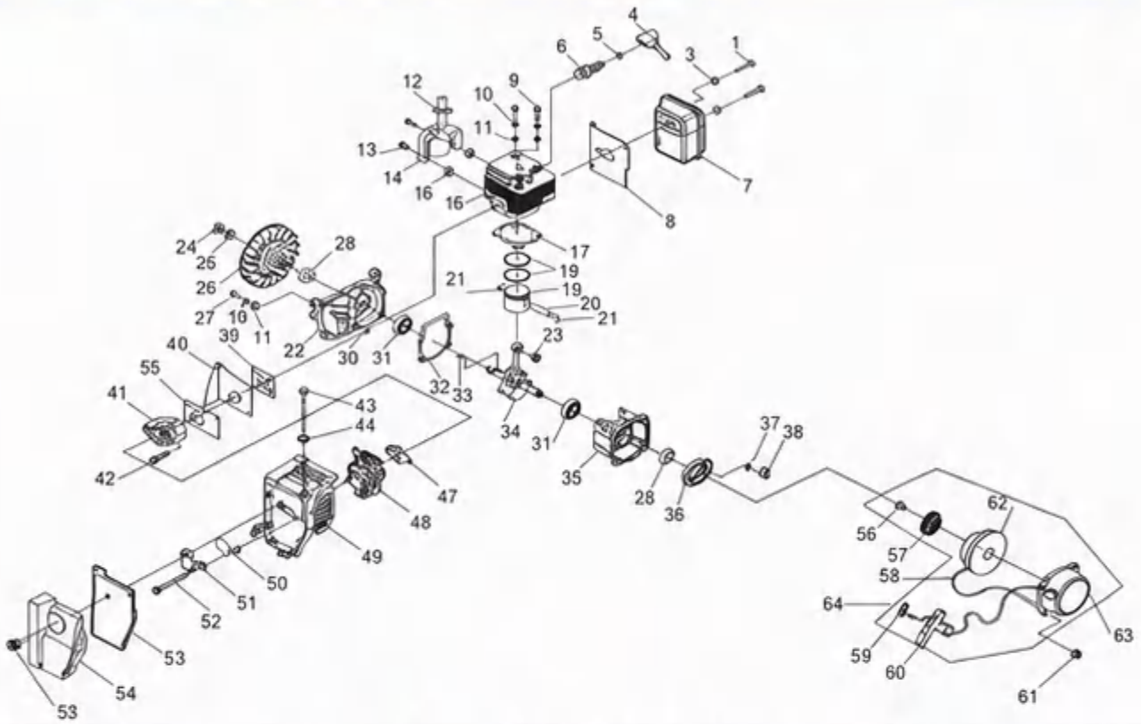

NO.	ERP NO.	PART NO.	PART NAME	QTY	NO.	ERP NO.	PART NO.	PART NAME	QTY
1	01103049	GB/T70.1 M5X55	SCREW	2	34	01007014	1E34F-6-1	CRANK SHAFT COMP	1
2		GB/T93 5	WASHER	2	35	01001014	1E34F-7-3	FRONT HALE CRANK CASE	1
3		GB/T96 5	WASHER	1	36	01002015	1E34F-8.1	STARTER PULLEY	1
4	01008064	1E34F-5-2	PLUG CAP	1	37	01009025	1E34F-8-2	STARTER PAWL SPRING	1
5	01006049	1E40F-3A-8-2	CLICK SPRING	1	38	01009026	1E34F-8-1	STARTER PAWL	1
6	01016017	L91	PLUG	1	39	01024031	1E34F-2	CYLINDER WASHER	2
7	01032022	1E34FB-5	MUFFLER	1	40	01027003	1E34F-4	SLAD	1
8	01027015	1E34FB-4	SLAD	1	41	01025015	1E34FB-2	INLET MANIFOLD	1
9		GB/T70.1 M5X20	SCREW	2	42	01104011	GB/T9074.4 M5X55	SCREW	2
10	01103038	GB/T93 5	WASHER	2	43	01002067	1E34F-6.1	PULL ROD	1
11		GB/T848 5	WASHER	2	44	01002068	1E34FB-8	PULL ROD COOYER	1
12		1E34F-5-1	RUBBER PLUG	1	45	01024083	1E34FB-2	SEALING WASHER	1
13	01104003	GB/T9074.4 M4X20	SCREW	2	46	01025016	1E34FB-1	INLET MANIFOLD	1
14	01006015	UK-08922 (1E34F)	MAGNETO ROTOR	1	47	01102042	1E34F-1	SEALING WASHER	1
15	01026004	1E32F-6	HEAT INSULATION PAD	1	48	01015045	1E34F	CARBURETOR	1
16	01006009	1E34F-8	CYLINDER	1	49	01020069	1E34FB-6.2	CLEANER INSDE COVER	1
17	01024009	1E34F-9	CYLINDER WASHER	1	50	01020070	1E34FB-6	CHOKER	1
18	01011008	1E34F-6-5	PISTON RING	2	51	01020071	1E34FB-7	BAFFLE	1
19	01012009	1E34F-6-6	PISTON	1	52	01104011	GB/T9074.4 M5X55	SCREW	2
20	01103007	1E34F-6-3	PISTON PIN	1	53	01020072	1E34FB-6.1	CLEANER ELEMENT	1
21	01014005	1E34F-6-2	PISTON PIN CIRCLET	2	54	01020073	1E34FB-6-1	CLEANER OUTSIDE COYER	1
22	01035009	1E34F-6-4	NEEDLE BEARING	1	55	01199083	CG420.16.3	SCREW	1
23	01106001	GB/T6171	NUT	1	56		GB/T9074.6 M5X10	SCREW	1
24	01106004	GB/T977.1 8	WASHER	1	57	01022041	1E34F-11-1	RECOIL SPRING	1
25	01006016	UK-08922(1E34F)	MAGNETO ROTOR	1	58	01022044	1E34F-11-3	ROPE	1
26	01103004	GB/T70.1	SCREW	4	59	01022056	1E36F-1-5	GASKET	1
27	01017001	1E36F-2	OIL SEAL	1	60	01022055	1E36F-1-1	STARTER HANDLE	1
28	01001009	1E34F-7-1	FRONT HALE CRANK CASE	1	61	01100092	GB/T9074.4 M4X16	SCREW	4
29	01106006	GB119	ANNUL	2	62	01022056	1E34F-11-2	STARTER ROPE REEL	1
30	01113008	GB/T276	BALL BEARING	2	63	01022057	1E34F-11G.1	RECOIL STARTER BODY	1
31	01024028	1E34F-7-2	CRANK CASE GASKET	1	64	01022007	1E34F-11	STARTER	1
32	01001103	GB1099	KEY	1					

1E34FB GASOLINE ENGINE (BLOWER EB260&EBV260)



16	CYLINDER



29	FRONT HALE CRANK CASE



35	FRONT HALE CRANK CASE




19	PISTON



18	PISTON RING



20	PISTON PIN



21	PISTON PIN CIRCLET



64	STARTER



36	STARTER PULLEY



6	PLUG



14	MACNETO ROTOR



26	MACNETO ROTOR



7	MUFFLER



34	CRANK SHAFT COMP



41	INLET MANIFOLD



	FUEL TANK



	THROTTLE CABLE



	FUEL TANK LID




55	SCREW



53	CLEANER ELEMENT



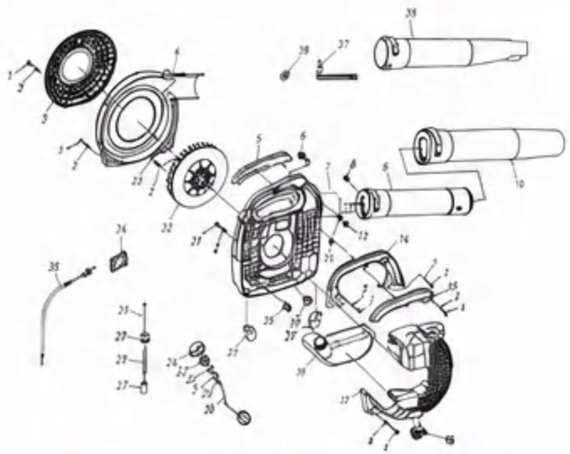



1E34FB ENGINE



17	01124011



4	01124002



7	01124004



32	01124015



9	01124006




5	01124003

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01111004	GB/T818 M5X16	SCREW	16
2		GB/T95 5	WASHER	24
3	01124001	EB-260.1-2	NET COVER	1
4	01124002	EB-260.1.2	VOLUTE CASE	1
5	01124003	EB-260.4	HANDLE COVER	1
6	01082034	EB-260.3	STOP SWITCH	1
7	01124004	EB-260.1.1	VOLUTE CASE	1
8	01104005	GB9707.4 M5X10	SCREW	1
9	01124005	EB-260-8	PIPE	1
10	01124005	EB-260-7	PIPE	1
11	01124007	EB-260.2	STOP LINE	1
12	01108005	1E36F 2	NUT	1
13		1E34F 5-1	RUBBER PLUG	1
14	01124008	EB-260-2	HANDLE COVER	1
15	01124009	EB-260-3	HANDLE COVER	1
16	01124010	EB-260-12	SUPPORT	1
17	01124011	EB-260-1	PROTECTION	1
18	01124012	EB-260.5-1	FUEL TANK	1
19		1E32FL.6.2-4	CHAIN	1

NO.	ERP NO.	PART NO.	PART NAME	QTY.
20	01021059	EB-415.4.1.1-1	AIRVALVE	1
21		1E32FL.6.2-3	END COVER	1
22		CG420.1.3.1-2	SEALING WASHER	1
23		1E32FL.6.2-2	LID	1
24		1E32FL.6.2-1	FUEL TANK LID	1
25	01124013	EB-260-10	SUPPORT	2
26	01124014	EB-260-14	SUPPORT	2
27	01021033	1E34F.9-2-3	FILTER	1
28	01021039	1E34F.9-2-2	FUEL TUBE	1
29	01021032	1E36FF.8.1-1	PLUG	1
30	01021040	1E34F.9-2-1	TUBE	1
31	01102003	GB/T70.1 M5X30	SCREW	1
32	01124015	EB-260.1-1	IMPELLER	1
33	01102001	GB/T70.1 M5X20	SCREW	1
34	01073006	EB-260-9	SWITCH	1
35	01081040	EB-260.4	FUEL THROTTLE	1
36	01124016	EB-260-7	PIPE	1
37	01124017	EBV260.4A	STOP SWITCH	1
38	01124018	EB-260-KG-1	SWITCH SEAT	1

HYAGRO

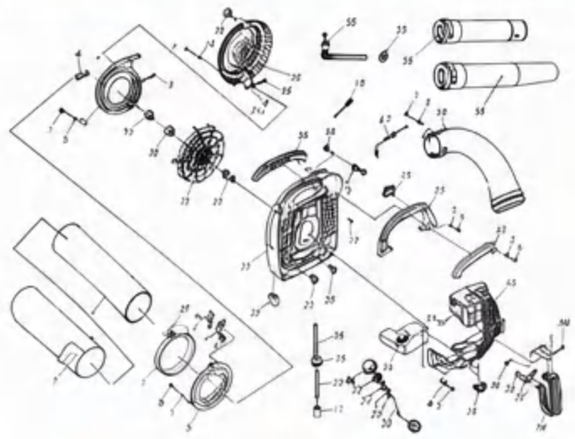



1E34FB ENGINE



21	01124004



11	01124026



40	01124037



42	01124008



19	01124032



14	01124028



38	01124035



48	01124040



53	01124020



18	01124031



20	01124033


NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01124019	EBV260-8	PIPE	1
2	01124020	EBV260-5	PIPE	1
3	01124021	NO(110-120)	HOOP	1
4	01111004	GB/T818 M5X16	SCREW	15
5		GB848 5	WASHER	22
6	01124022	EBV260.3.2-1	LINK BOARD	1
7		GB/T818 M5X10	SCREW	4
8	01124023	EBV260.2.3-2	SWITCH CARAPACE	1
9	01124024	EBV260.2.3.2	SWITCH	1
10	01124025	EBV260.2.3-1	SWITCH ANTENNA	1
11	01124026	EBV260.2-2	VOLUTE CASE	1
12		GB86 5	WASHER	1
13	01124027	EBV260.2 4	SCREW	1
14	01124028	EBV260.2-1	NET COVER	1
15	01124029	EBV260.2-2	SPRING SCREW	1
16	01124030	EBV260.2-3	SPRING	1
17		GB/T588.1 M3X16	NUT	1
18	01124031	EBV260.2-8	COMMNUTE BOARD	1
19	01124032	EBV260.2-1	IMPELLER	1
20	01124033	EBV260.6-1	LINK SHAFT	1
21	01124004	EB-260.1.1	VOLUTE CASE	1
22	01124013	EB-260-10	SUPPORT	2
23	01124014	EB-260-14	SUPPORT	2
24	01021040	1E34F.9.2.1	TUBE	1
25	01021032	1E36FF.8.1-1	PLUG	1
26	01021039	1E34F.9.2-2	FUEL TUBE	1

NO.	ERP NO.	PART NO.	PART NAME	QTY.
27	01021033	1E34F.9.2-3	FILTER	1
28		1E32FL.6.2-1	LID	1
29		1E32FL.6.2-2	FUEL TANK LID	1
30		CG420.1.3.1-2	SEALING WASHER	1
31		1E32FL.6.2-3	END COVER	1
32		1E32FL.6.2-4	AIRVALVE	1
33		1E32FL.6.2-4	CHAIN	1
34	01124012	EB-260-5	FUEL TANK	1
35	01124010	EB-260-12	FUEL TANK	1
36	01105006	GB8704.3 M5X12	SCREW	3
37	01124054	EBV260.1-2	DRAG BOARD	1
38	01124035	EBV260.1-1	HANGGRIP	1
39	01124056	EBV260.1-1	DRAG BOARD	1
40	01124037	EB-260-1	PROTECTION	1
41	01124009	EB-260-3	HANDLE COVER	1
42	01124008	EB-260-2	HANDLE	1
43	01073006	1E34F 5-1	SWITCH	1
44	01124003	EB-260-4	RUBBER PLUG	2
45	01124038	EBV260.4	HANDLE COVER	1
46	01082036	EB-260.3	STOP SWITCH	1
47	01081040	EB-260.4	FUEL THROTTLE	1
48	01124040	EBV260.6-1	COLLECT PLUG	1
49	01082035	EBV260.3.1	STOP WIRE	2
50	01124017	EBV260.4A	STOP SWITCH	1
51	01124018	EB-260-KG-1	SWITCH SEAT	1
52	01124019	EB-260-6	PIPE	1
53	01124020	EB-260-7	PIPE	1


THE PARTS LIST OF MODEL 1E48F



1E48F ENGINE FOR EB650

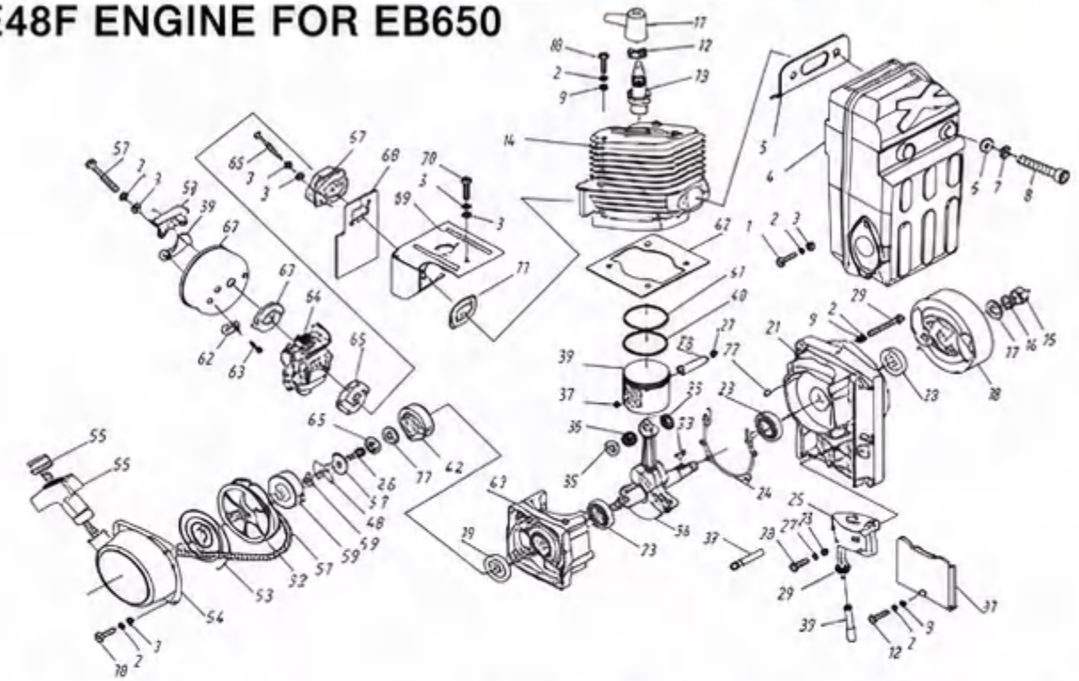

No.	ERP NO.	Part No.	Part Name	Qty	No.	ERP NO.	Part No.	Part Name	Qty
1	01010002	GB/T70.1 M5*16	BOLT	5	37	01011003	1E40F.05.02.01	RING	2
2	01107002	GB93 5	WASHER	6	38	01013013	1E48FP-5-2	PISTON PIN	1
3	01106002	GB97.1 5	WASHER	9	39	01012015	1E48FP-5-5	PISTON	1
4	01023014	1E48FP-1	MUFFLER	1	40	01011020	1E48FP-5-4	PISTON RING	1
5	01024050	1E48FP-1-1	MUFFLER GASKET	1	41	01011019	1E48FP-5-3	PISTON RING	1
6	01106003	GB93 7 6	WASHER	2	42	01024049	1E48FP-10	GASKET	1
7	01107003	GB93 6	WASHER	2	43	01001033	1E40FP-8-0	BACK CRANKCASE	1
8	01102012	GB/T70.1 M6*20-10.9	BOLT	2	44	01008016	1E40FP-32-19	RATCHET	1
9	01102001	GB848 5	WASHER	7	45	01008006	1E40FP-32-16	NUT	1
10	01102001	GB/T70.1 M5*20	BOLT	9	46	01005005	GB67 M5*12	SCREW	1
11	01106079	1E48FP-1-1	CAP	1	47		1E40FP-32-2/-4	WASHER	1
12	01112012	1E40F-3A-8-2	SPRING	1	48	01022081	1E40FP-32-4 *5	GUIDE SLICE	1
13	01106014	1E40F-C	PLUG	1	49		GB860 8	WASHER	1
14	01106013	1E48FP-2	CYLINDER	1	50	01022080	1E40FP-32-4-8	START WHEEL	1
15	01108034	GB6171 M10*1.25	NUT	1	51	01022079	1E40FP-32-4-9	ROPE	1
16	01107004	GB93 10	WASHER	1	52	01022078	1E40FP-32-4-6	PULLEY	1
17	01106005	GB97.1 10	WASHER	1	53	01022008	1E40FP-32-2-7	SPRING	1
18	01106032	1E40FP-32-11	CLUTCH	1	54	01022082	1E40FP-32-2-1	CASE	1
19	01107001	1E40FP-32-11	SEAL	1	55	01022081	1E40FP-32-4-2	HANDLE	1
20	01103003	GB/T70.1 M5*35	BOLT	4	56	01022082	1E40FP-32-4-10	PACK	1
21	01010032	1E48FP-6-1	FRONT CRANKCASE	1	57	01103006	GB/T70.1 M5*50	SCREW	1
22	01100002	GB119 6 6302/P4	PIN	2	58	01046003	1E48FP-8	BAFFLE	1
23	01112012	GB/T276 6302	BEARING	2	59	01046004	1E48FP-3-2	CHOKER	1
24	01103018	1E48FP-6-2	GASKET	1	60	01016001	1E48FP-3-1	COVER	1
25	01106033	1E48FP-1-1	ROTOR	1	61	01021052	1E48FP-7-3	SEALING GASKET	1
26	01106001	GB97.1 4	WASHER	1	62	01016002	1E48FP-	HANDLE	1
27	01107001	GB93 4	WASHER	1	63	01109001	GB845 ST2.9*8.5	SCREW	1
28	01104003	GB/T70.1 M4*20	BOLT	1	64	01015021	1E48FP-2	CARBURETOR	1
29		1E48FP-1-2	GROMMET	1	65	01015053	1E48FP-8	SEALING GASKET	1
30	01446005	1E46FP-1-2	TUBE	1	66	01015003	1E48FP-6	SCREW	1
31		1E46FP-2	RETAINER	1	66	01102003	GB/T70.1 M5*30	SCREW	2
32	01101001	1E48FP-4-1	STOP WIRE	1	67	01023008	1E48FP-5	PIPE	1
33	01107005	GB1099 3*13	KEY	1	68	01021052	1E48FP-4	GASKET	1
34	01007021	1E46FP-5-1	CRANKSHAFT	1	69	01007005	1E48FP-9	GUIDE AIR PLATE	1
35		1E48FP-5-1	WASHER	1	70	01103001	GB/T70.1 M5*10	SCREW	2
36	01010010	1E46FP-6-2	BEARING	1	71	01021051	1E48FP-3	GASKET	1

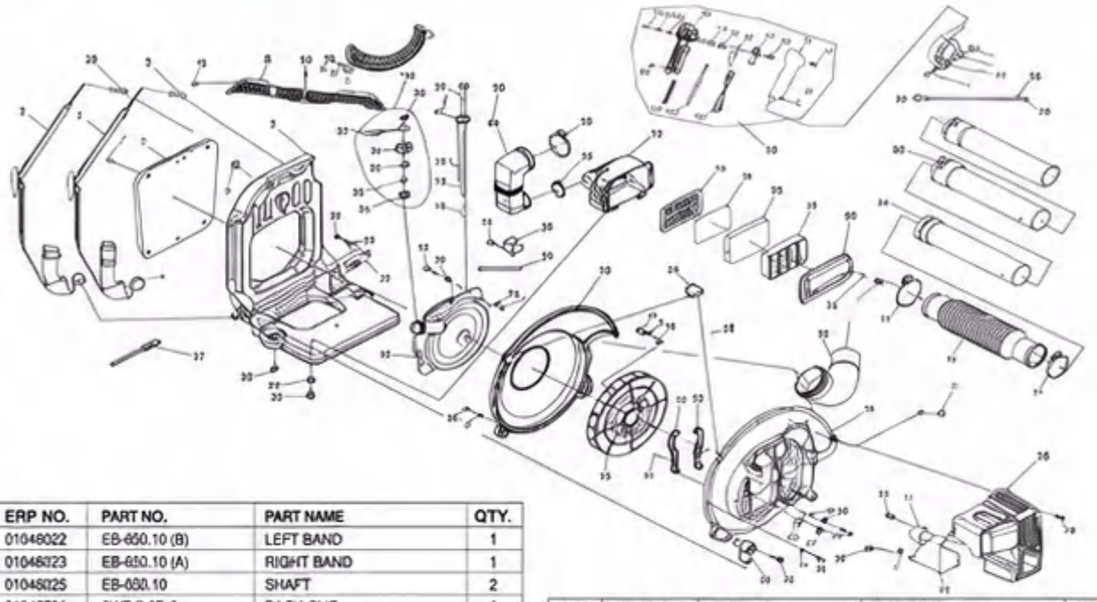


NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01046022	EB-650.10 (B)	LEFT BAND	1
2	01046023	EB-650.10 (A)	RIGHT BAND	1
3	01046025	EB-650.10	SHAFT	2
4	01046701	3WF-2.6B-2	BACK CLIP	1
5	01046705	3WF-2.6B-1	BACK MAT	1
6	01106046	GB6177 M6	NUT	3
7	01046012	EB-650.1-2	FRAME	1
8	01046024	EB-650.11	PROTECT NET	1
9	01106001	GB845 ST4.2X14	SCREW	1
10	01106006	GB818 M5X25	BOLT	9
11	01106002	GB97.1 5	WASHER	21
12	01046014	EB-650.1-2	PROTECT NET	1
13	01046026	EB-650.4	SPRING	1
14	01106004	GB/T70.1 M5X30	BOLT	2
15	01106003	GB859 5	WASHER	6
16	01046010	EB-650.1-1	LEFT LOOP	1
17	01106007	EB-650.1-1	CONTROLLER	1
18	01106007	GB6818 M6	NUT	1
19	01151002	EB415.22-2	CONTROLLER	1
20	01151003	EB415.22-1	FRAME ROD	1
21	01151004	EB-650.4.2	STOP SWITCH	1
22	01151005	EB-415.22-1	SWITCH	1
23	01046002	EB-650.3	FUEL	1
24	01046054	GB6074.4 MSX35	FINE THROTTLE	1
25	01065073	EB-650.4-1	SCREW	1
26	01046040	GB815 M6X16	TUBE	1
27	01151001	GB818 MSX16	WIRE CLAMP BAND	1
28	01107002	GB86 6	BOLT	16
29	01102001	GB/T70.1 MSX20	WASHER	20
30	01106001	GB-650.1-4	BOLT	2
31	01046011	EB-650.1-4	RIGHT LOOP	1
32	01139108	EB-650.3-1	FUEL TANK	1
33	01106004	GB6175 M6	NUT	1
34	01021056	EB-415.4.1-1	TANK LID WASHER	1
35	01021057	EB-415.4.1-1-3	BRACKET	1
36	01021059	EB-415.4.1-1-1	AIRVALVE	1
37	01021060	EB-415.4.1 1	FUEL TANK LID	1
38	01021061	EB-415.4.1	FUEL TANK LID	1
39	01021058	EB-650.3-2	VITTA CONJUNCTION	1
40	01021070	EB-415.3-2	VITTA FLUXES	1
41	01021040	EB-415.3-2 23	TUBE 5.3X3.1-2X80	1
42	01021030	GB/T1252-0.1.5-3-2	FITTER TUBE EB-2X1.5X800	1
43	01021033	GB/T14853.5-1	FILTER	1
44	01046016	EB-650.5-2	PIPE	1
45	01046018	NO. 1 46 70	CLIP	1
46	01046019	NO. 1 32 50	CLIP	1
47	01046026	EB-650.5-2	CLEANER INSIDE COVER	1
48	01046039	EB-650.5-1	PLATE	1
49	01046043	EB-650.5-4	ELEMENT	1
50	01046044	EB-650.5-3	ELEMENT	1

NO.	ERP NO.	PART NO.	PART NAME	QTY
51	01046041	EB-650.5-2	FRAME	1
52	01046042	EB-650.5-1	CLEANER OUTSIDE COVER	1
53	01046045	EB-650.5-3	SCREW	1
54	01164013	GB6074.4 MSX14	SCREW	2
55	01046016	EB-650.8	RUBBER PILLAR	1
56	01046017	EB-650.9	SAFTY BELT	1
57	01046043	EB-650.2-3	VOLUTE CASE	1
58	01046049	EB-650.1	BOLT	1
59	01102003	GB/T70.1 MSX35	PIPE	1
60	01046047	EB-650.2.1	IMPELLER	1
61	01180101	GB/T845 ST2.9X13	SCREW	1
62	01046700	3WF-16.3.2-1	TUBE	1
63	01046702	3WF-16.3.2-2	FUEL THROTTLE	1
64	01021018	3WF-16.3.2.1	STOP SWITCH	1
65	01106006	GB/T68.1 M5	NUT	1
66	01046027	EB-650.2-2	MANIPULATOR ASSEM	1
67	01104003	GB/T70.1 MSX35	BOLT	2
68	01104007	GB/T818 MSX25	SCREW BOLT	1
99	01104051	EB-650.7-3	PIPE	1
70	01104052	EB-650.7-4	PIPE	1
71	01104053	EB-650.7-4(A)	PIPE	1
72	01046009	3WF-16.3.2-1	HANDLE	1
73	01046009	EB-650.8.1-1	EARTH LINE	1
74	01021006	GB/T68.1 M5	SCREW	1
75	01106008	GB/T845 ST2.8X18	SCREW	1
76	01079012	BL750.5-5	RIGHT MANIPULATOR	1
77	01079007	BL750.5-4	LONG SPRING	1
78	01079015	BL750.5-3	HANDLE	1
78	01079014	BL750.5-3	HANDLE	1
80	01079006	BL750.5-2	SPRING	1
81	01079016	BL750.5-3	PIN	1
82	01079013	BL750.5-6	LEFT MANIPULATOR	1
83	01079018	BL750.5-7	SPRING	1
84	01079017	BL750.5-9	PUSH BUTTON	1
85	01106001	GB/T846 ST2.8X13	SCREW	1
86	01079019	3WF-16.3.2.2-1	TUBE	1
87	01061076	3WF-16.3.2.2	FUEL THROTTLE	1
88	01021013	3WF-16.3.2.1	STOP SWITCH	1
89	01106002	GB/T68.1 M5	NUT	1
90	01046027	3WF-16.3.2.3	MANIPULATOR ASSEM	1
91	01046040	EB-650.5-3A	ELEMENT	1
93	01107001	BL750.5-2-4	PIN	1
93	01079001	BL750.5-1	HANDLE	1
95	01079005	BL750.5-9	SPRING UTION	1
99	01079005	BL750.5-9	SPRING	1
100	01106001	GB/T846 ST2.8X13	NUT	1
101	01079022	3WF-16.3.2.2-1	SCREW	1
102	01079078	3WF-16.3.2.2	TUBE	1
103	01061076	3WF-16.3.2.2	FUEL THROTTLE	1
104	01021013	3WF-16.3.2.1	STOP SWITCH	1
105	01106002	GB/T68.1 M5	NUT	1
106	01046027	3WF-16.3.2.3	MANIPULATOR ASSEM	1
107	01046040	EB-650.5-3A	ELEMENT	1

EB650 BLOWER





75 PROTECTION | 14 CYLINDER | 34 CHANK SHAFT | 39 PISTON | PISTON ASSY | 43 CRANK CASE | 21 CRANK CASE

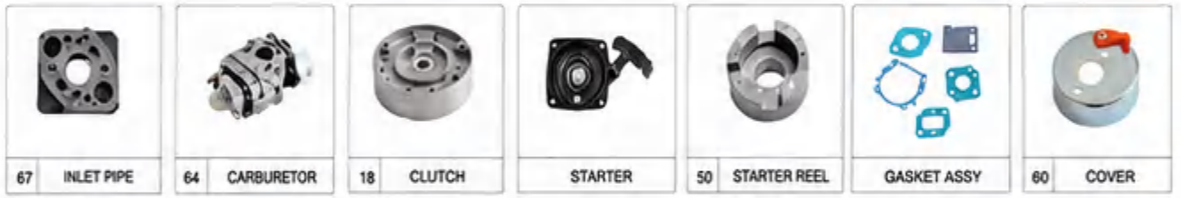
67 INLET PIPE | 64 CARBURETOR | 18 CLUTCH | STARTER | 50 STARTER REEL | GASKET ASSY | 60 COVER


1 LEFT BAND RIGHT BAND | 2 BACK MAT | 5 BACK MAT | 7 FRAME | 8 PROTECT NET | 12 PROTECT NET | 32 FUEL TANK | 57 VOLUTE CASE


IMPELLER | 64 VOLUTE CASE | 65 SUPPORT | PLATE | 73 PLATE | 31 RIGHT LOOP | 55 RUBBER PILLAR


78 CLIP | 77 PAN JOINT | 79 HOSE | 83 HANDLE | 81 PIPE | 86 PIPE | 44 PIPE

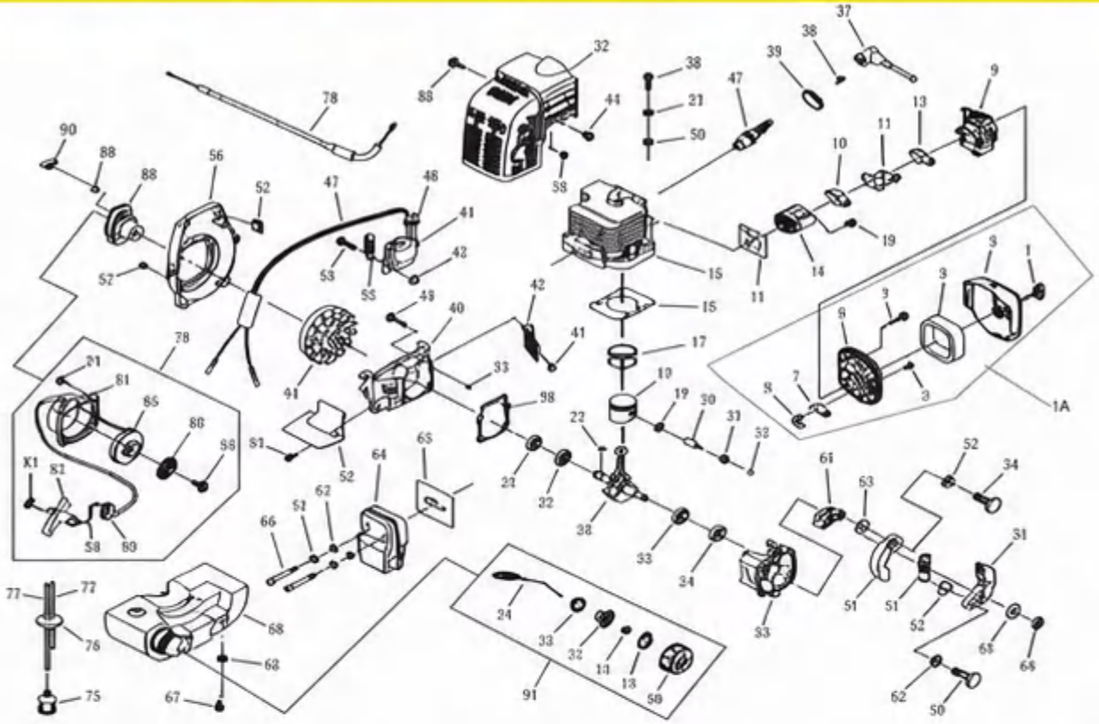

Ser.No.	Erp no.	Part No.	Part Name	Qty
1	01020075	1E34F-1-2	AIR FILTER COMP.	1
2	01020048	1E34F-1-4	SCREW	1
3	01020036	1E34F-1-1	OUTSIDE COVER	1
4	01100049	GB8074.4	FILTER NET	2
5	01100012	GB6346-6×4*12*2-F.H.	SCREW M5*55	2
6	01020051	1E34F-1-1	INSIDE COVER	1
7	01020076	1E34F-1-3	CHOKE	1
8	01120024	1E34F-1-2	CHOKE HANDLE	1
9	01020054	1E34F-1-7	CARBURETOR	1
10	01104032	GB8547.7	GASKET	2
11		1E32FL-1	STAND	2
12	01100036	GB8074.4	SCREW M5*20	1
13	01020081	1E34F-4	admitting pipe ass'y	1
14	01204031	1E34F-2	GASKET	1
15	01100011	1E32FL-5	CYLINDER	1
16	01206W2	1E34F-9	GASKET	1
17	01101017	1E32YL-3-1	PISTON RING	1
18	01121013	1E32Y-5-2	PISTON	1
19	01170052	1E34F-8-1	WASHER	1
20	01101011	1E32Y-5-3	PISTON PIN	2
21	01104029	GB8074.4	RING	2
25	01104F09	1E34F-6-2	BEARING	2
23	01121014	1E32Y-4-1	CRANK CASE	1
24	01107001	1E32F-2	SEAL	2
25	01113001	GB276-6	BEARING 6001/P5	1
26	01101022	1E32YL-3-1	CRANK SHAFT	1
27	01101003	1E60YP-32.3-1	KEY	1
28	01124026	1E34F-7-2	GASKET	1
29		GB/T119.2	PIN 3*10	2
30	01107002	GB848	WASHER 5	2
31	01170008	GB93	WASHER 5	4
32	01107011	GB/T701	SCREW M5*25	3
33	01104002	GB8074.4	WASHER 4	6
34	01108137	1E32YL-4	SCREW M4*16	6
35	01100110	GB3452	GUIDE COVER	1
36	01108054	GB845	SCREW ST4.2*8-F	1
37	01108064	CAP		1
38	01108048	1E60F-3A-8-2	SPRING	1
39	01108006	1E34F-5-3	PLUG CAP	1
40	01100001	RCJ6Y	SPARK PLUG	1
41	01100011	GB8074.4	SCREW M5*10	1
42	01104006	1E32FB-8-5-0	GASKET	3
43	01107003	1E32Y-5-5	CENTLOOP	1
44	01104014	GB8074.4	SCREW M8*30	1
46	01108028	1E32F-16.1	FLY WHEEL	1
45	01100027	1E32FL-6.2	COIL	1
46	01120060	1E32FL-6	GASKET	1

Ser.No.	Erp no.	Part No.	Part Name	Qty
47	01008058	1E34F-5-1	RUBBER PLUG	1
48	01108050	GB8171	CORD COMP	1
49	01106000	GB8074.1	NUT M8*1	1
50	01108006	GB8074.1	WASHER	1
51	01104030	1E34F-12	SCREW PIN	2
52	01123010	1E34F	EXPANDER ASS'Y	2
53	01104036	1E34F-11	WASHER	2
54	01104008	1E34F-11-1	WASHER	1
55	01103010	1E34F-11-0	SPRING	1
56	01106001	1E34F-10-1	RUBBER PLUG	1
57	01104030	GB8074.4	GUIDE COVER	1
58	01104030	GB8074.4	SCREW M6*10	4
59	01106011	1E40F-34.0	CLIP	1
60	01101026	1E32FL-4-2	CRANK CASE	1
61	01107006	1E32FL-3	STAND	1
62	01107006	1E32FL-3	GASKET	1
63	01104030	1E34F-3	GASKET	1
64	01108000	GB8177.1	MUFFLER ASS'Y	1
65	01103036	GB93	WASHER 5	2
66	01106001	GB/T701	SCREW M5*20	3
67	01104030	GB8074.4	SCREW M5*16	3
68	01101015	1E32FL-11-2	FUEL TANK LID	1
69	01121002	1E34F-11-18	FUEL TANK	1
70	01106062	GB2601.3-1-2	GASKET	1
71	01121062	1E34FL-3.2-1	INLET	1
72	01101029	1E32FL-5.3	INSIDE LID	1
73	01101032	1E32FL-6.2-3	INSIDE LID	1
74	01108003	1E34F-2B-4	CHAIN	1
75	01103002	1E34F-8-1-1	CLEANER COVER	1
76	01121002	1E34F-8-1	PLUG	1
77	01121040	1E34F-8-2-1	FUEL PIPE	1
78	01121061	1E34F-8-2	FUEL PIPE	1
79	01102018	1E34F-11G	STARTER	1
80	01102026	1E34F-11-3	PIPE	1
81	01102024	1E34F-11-1	COVER	1
82	01102056	1E34F-16	START HANDLE	1
83	01102054	1E34F-1	CROWN	1
84	01102036	1E34F-11G-1	START COVER ASS'Y	1
85	01102056	1E34F-11G	START ROPE REEL	1
86	01102044	1E34F-11-1	RECOIL SPRING	1
87	01104006	GB8074.4	SCREW M5*10	1
88	01102026	1E34F-8-2	START REEL	1
89	01102002	1E34F-8-1	START CLAW	1
90	01102055	1E34F-9-2	START SPRING	1
91	01121076	1E32FL-6.2	FUEL TANK LID ASS'Y	1
92		1B0-001-1.2	CABLE COMP	1

1E32FL ENGINE
(HEDGE TRIMMER SL750B)



35 GUIDE COVER



15 CYLINDER



17/18/20/22 PISTON ASS'Y



26 CRANK SHAFT



23 CRANK CASE



60 CRANK CASE



61 STAND



51 EXPANDER ASS'Y



50/52/53 SCREW & WASHERS



44A COIL



44 FLY WHEEL



56 FAN COVER



88 START REEL



79 STARTER



13 ADMITTING PIPE ASS'Y



9 CARBURETOR



6 AIR FILTER ASS'Y



1 INSIDE COVER



2 OUTSIDE COVER



3 FILTER NET



64 MUFFLER ASS'Y



68 FUEL TANK



91 FUEL TANK LID ASS'Y




62 GASKET



10/16/28/63 GASKET ASS'Y



40 SPARK PLUG

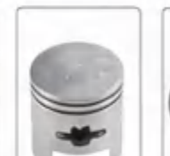

18 PISTON




17 PISTON RING





THE PARTS LIST OF MODEL SLP600

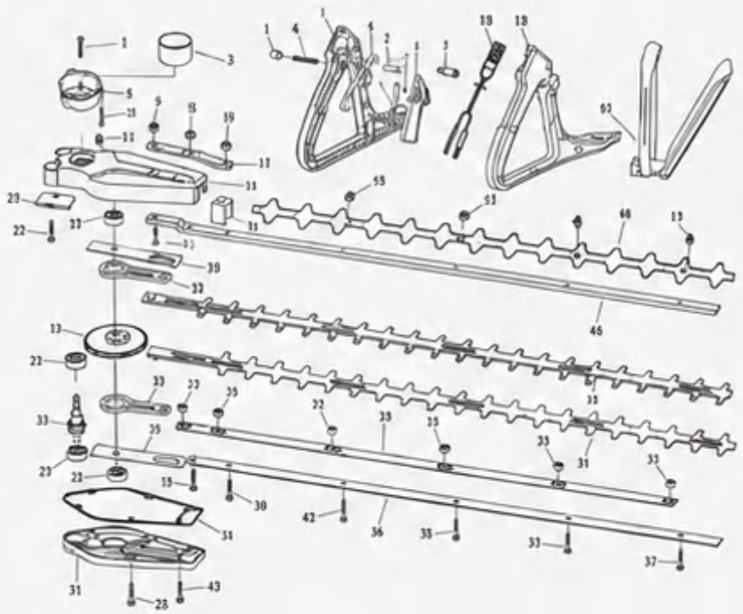

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01002005	SLP600.1.7.3	Sponge	1
2	01002006	SLP600.1.8.2	Screw M5	1
3	01002026	SLP600.1.6.1	Hand Cap	1
4	01002068	SLP600.1.8.4	Lock Spring	1
5	01001020	SLP600.1.8.2	Spring	1
6	01002060	SLP600.1.8.3	Hand Grip	1
7	01002027	SLP600.1.5.1	Hand Cap	1
8	01002067	SLP600.1.1.1	Handle	1
9	01002087	SLP600.1.13	Right Handle	1
10	01002050	SLP600.1.5.1	Clutch Drum Comp.	1
11	01002011	GB6674.4	Screw M5×12	4
12	01104006	GB6177.2-4	Screw M6×16	1
13	01104009	GB6177.2-4	Screw M6×16	1
14	01002048	GB1167	Fuel Cap M6	1
15	01102013	GB6177.2-4	Nut M5	9
16	01102014	GB6177.2-4	Nut M5	1
17	01002064	SLP600.1.16	Clutch Case	1
18	01002061	SLP600.1.18	Fan	1
20	01002068	BJ25A-2-6	Carburetor	1
21	01104016	GB6177.2-4	Screw M6×25	2
21	01104011	GB6177.2-4	Screw M6×26	2
22	01002008	1BM100.4.2-2	Back Plate	1
23	01002067	6/T50.4.2-6	Bearing 6201-2RS/P5	1
24	01002022	6/T50.4.2-3	Crankshaft	2
25	01002001	6/T50.4.2-2	Crankshaft Bearing	1
26	01102018	GB/T276	Bearing 6001-2RS/P5	1
27	01002008	6/T50.4.2-1	Gear Seat	1
28	01002008	6/T50.4.2-4	Bolt M8×20	4
29	01001047	6/T50.4.2-2	Eccentric	4
30	01001060	6/T50.4.2-6	Shaft Block	2
31	01104007	GB6674.4	Screw M5×20	2
32	01104010	GB6674.4	Screw M5×16	2
33	01104008	GB6674.4	Screw M5×25	2
34	01002004	6/T50.4.2-5-4	Blade Fix Seat	1
35	01002003	6/T50.4.2-5-3	Blade Lower	1
36	01004068	6/T50.4.2-5-6	Blade Upper	1
37	01002065	6/T50.4.2-7	Blade Guard	1
38	01104012	GB6674.4	Screw M6×38	6
39	01002058	6/T50.4.2-5-5	Blade Guard Cushion	1
40	01002031	SLP600.1.6.2	Clutch Drum	1
41	01102012	GB6177.2-4	Screw M5×20	4
42	01002028	SLP600.1.4.2	Hand Grip	1
43		SLP600.1.11	Stop Button (COM)	1

SLP600
HEDGE TRIMMER





CYLINDER COVER



CRANK CASE



AIR FILTER



FILTER INNER COVER



FILTER PARTS



FILTER OUTER COVER



MUFFLER



STARTER



FAN COVER



CLUTCH CASE




HANDLE LEVER ASSY



TRIMMER BLADE

THE PARTS LIST OF MODEL SL750B

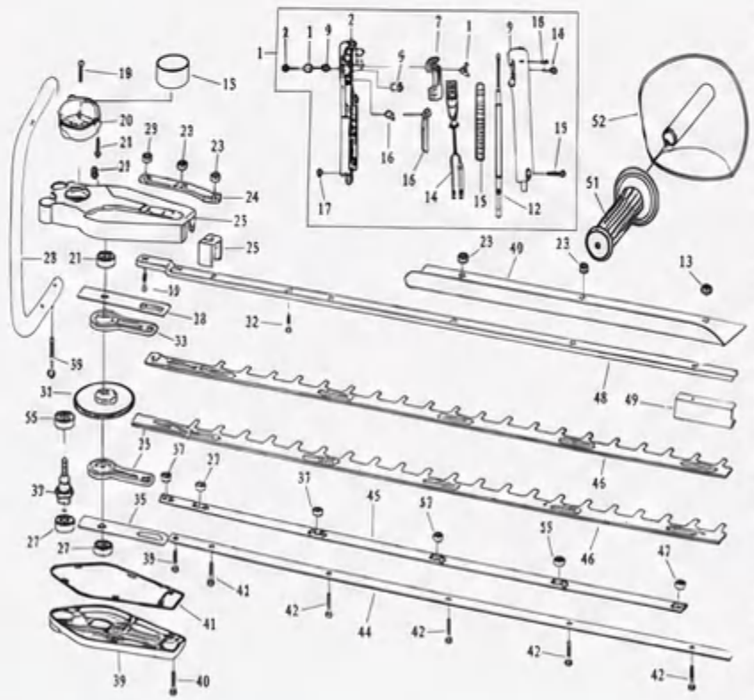

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01002003	SL750.1A	Screw M5	1
2	01002004	SL750.1B	Screw S=29×Φ5.5	1
3	01002010	6/T50.3.6-2	Spring	1
4	01002011	6/T50.3.6-3	Spring	1
5	01002018	6/T50.3.6-4	Lock Pin	1
6	01002019	6/T50.3.6-5	Spring Cap	1
7	01002012	6/T50.3.6-1	Spring	1
8	01002008	6/T50.3.2-1	Screw M5	1
9	01002013	SL750.1C	Screw S=12×16	1
10	01104013	GB6177.2-4	Screw M6×20	1
11	01002007	6/T50.3.6-2	Cable COMP	1
12	01102014	6/T50.3.6-2	Tube	1
13	01102001	SL750.1D	Stop Button Coil Dia	1
14	01002016	6/T50.3.3	Hand Grip	1
15	01002017	6/T50.3.3-2	Spring	1
16	01102002	GB/T6170-86	Nut M8	1
17	01002016	6/T50.3.3-1	Clutch Drum Comp.	1
18	01104006	GB6177.2-4	Screw M6×12	1
19	01104007	GB6177.2-4	Screw M6×16	4
20	01104005	GB6177.2-4	Screw M6×16	1
21	01002009	6/T50.3.6-1	Clutch Case	1
22	01102004	GB6182	Fuel Cap M6	6
23	01102014	GB6177.2-4	Nut M8	1
24	01104004	GB/T96.1-4	Washer	1
25	01002008	6/T50.3.6-2	Clutch Drum Comp.	1
26	01102002	GB/T276	Bearing 6201-2RS/P5	1
27	01102001	6/T50.3.6-3	Gear Seat	1
28	01002002	6/T50.3.4-2	Bolt M8×20	4
29	01001060	6/T50.3.6-3	Eccentric	4
30	01001062	6/T50.3.6-6	Shaft Block	2
31	01104008	GB6674.4	Screw M5×20	2
32	01104010	GB6674.4	Screw M5×16	2
33	01104008	GB6674.4	Screw M5×25	2
34	01002001	6/T50.3.6-4	Blade Fix Seat	1
35	01002012	6/T50.3.6-3	Blade Lower	1
36	01002056	6/T50.3.2-6	Blade Upper	1
37	01002011	6/T50.3.2-7	Blade Guard	1
38	01104012	GB6674.4	Screw M6×38	6
39	01002058	6/T50.3.6-5	Blade Guard Cushion	1
40	01002005	6/T50.3.6	Clutch Drum	1
41	01102003	GB6177.2-4	Screw M5×20	4
42	01002016	6/T50.4.2	Plate Receive	1
43	01002038	6/T50.4.2-8	Handle Assy	1
44	01002026	6/T50.4.2-2	Blade Bracket	1
45	01002042	6/T50.4.2-3	Stand	1
46	01002039	6/T50.4.2-9	Lever Assy	1
47	01002009	6/T50.4.2-5	Gear end Brace Assy	1
48	01002021	6/T50.4.2-4	Crank Shaft	1
49	01002022	6/T50.4.2-1	Gear Shaft	1
50	01002023	6/T50.4.2-7	Blade Protector	1
51	01002024	6/T50.4.2-8	Plate Receive	1
52	01002026	6/T50.4.2-10	Handle Grip Cover	1

SL750B
HEDGE TRIMMER



Note: engine check on page 90



18 CLUTCH DRUM ASSY



25 WHEEL BOX



41 GASKET



39 CASE OVER



24 CUSHION



44 BLADE BRACKET



44/47 BLADE



BLADE PROTECTOR



50 PLATE RECEIVE



HANDLE ASSY



37 STAND



1 LEVER ASSY




34 GEAR AND BRACE ASSY



31 CRANK SHAFT



36 GEAR SHAFT

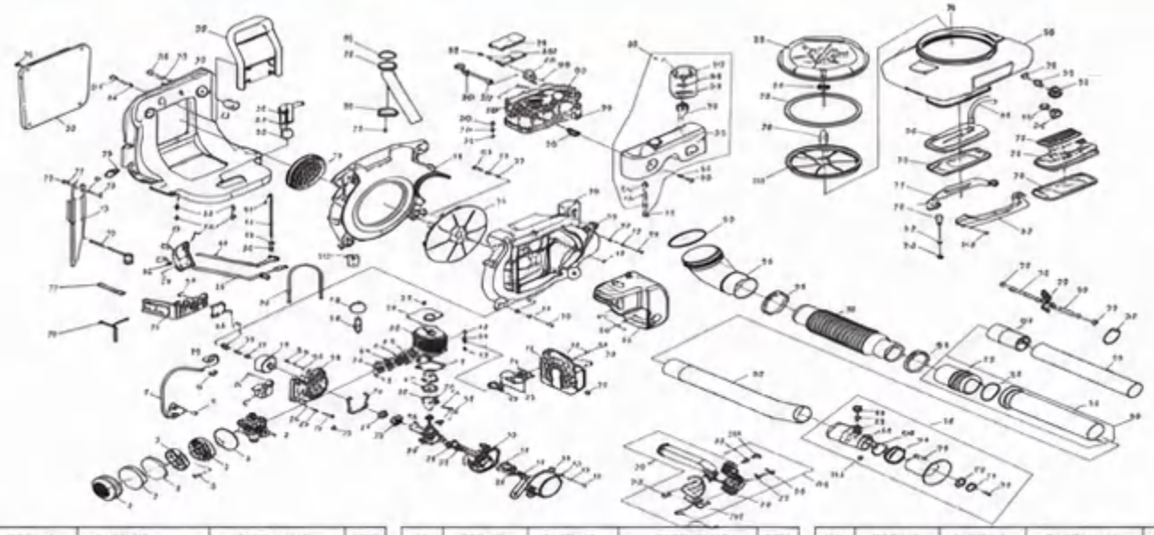

NO.	ERP NO.	PART NO.	PART NAME	QTY.
1	01050021	3WF-3-2.6-1	OUTSIDE COVER	1
2	0104T009	1E40FP-3Z-2.6-2	FILTER	1
3	01010009	1E40FP-3Z-2.6-5	RON NET	2
4	01010016	GB/T90T4.4 M6×16	SCREW ASSEM	6
5	01010017	GB/T90T4.4 MA×16	SCREW COVER	2
6	0104T001	1E40FP-3Z-7.6-3	CLIP SPRING	1
7	01015002	1E40FP-3Z-2.1	CARBURETTOR	1
8	01068006	GB/T845- ST4.2×16	SCREW	4
9	01068004	1E40FP-3Z-5.2	WINDING	1
10	01068005	1E40FP-3Z-5.5	WINDING	2
11	01010007	GB/T9074.4 MA×20	SCREW ASSEM	1
12	01010008	1E40FP-3Z-2.2	SPRING	1
13	01010015	1E40FP-3Z-1	CAP	1
14	01013000	GB/T95 1	NUP	1
15	01013000	GB/T95 8	WASHEE	1
16	01018009	3WF-3-2.5 EN8	WASHER	1
17	01068002	GB/T9074.4 M6×20	RUBBER/CRANKBE	1
18	01068003	GB/T93 6-5	WASHER	2
19	01018003	1E40FPC-3Z-1.6	FRONT CRANKCASE	1
20	01068013	GB/T93 5-5	WASHER	1
21	01068003	GB/T93 5-5	WASHER	1
22	01068003	GB/T8-00.60	SPANNG	1
23	01068003	GB/T95 5	BUIT	1
24	01068003	3WF-3-2.2-3	WASHEE	1
25	01068010	GB/T9074.4 M5×20	RUBBER	1
26	01068006	GB/T95 5-5	ROWER CRANCOOR	1
27	01068003	1E40FP-3-5.2-5-3	WASHEE	1
28	01068003	1E4T5-5-01-3	WASHER	1
29	01068005	1E43F-3.13-2	WASHW ROSEM	1
30	01068007	GB/T5-D G-1	WASHW COVER	1
31	01068001	GB/T8-5-3	ROWEW CRANKCASE	1
32	01068004	GB/T9074.4 M5×20	SCREW	2

NO.	ERP NO.	PART NO.	PART NAME	QTY.
33	0104T012	3WF-3-1.9	SWITCH	1
34	01108007	3WF-3-3	BELT ADJUSTER	1
35	0104T006	3WF-3-1.6	RUBBER PULLEY	1
36	0104T011	3WF-3-1.8	CLUTCH ASSY	1
37	01108011	3WF-3-11	BACK MAT	2
38	01020001	3WF-3-5.1	JOLT	2
39	01010003	GB/T5783	M6×16 SCREW ASSEM	2
40	0104T013	3WF-3-2.7	SUPPORT	1
41	01108009	3WF-3-18	LINK WASHER	2
42	01068003	GB/T93 M6	NUT	2
43	01108012	3WF-3-20	BELT COMPONENT	1
44	01068009	GB/T2582 M6	NUT	2
45	01068005	3WF-3-26-1	SPANNER	1
46	0104T020	3WF-3-26-3	DISASSEMBLY	1
47	0104T021	3WF-3-26-4	SPANNER	1
48	0104T019	3WF-3-26-2	SPANNER	1
49	01068021	GB/T195 8-5	SPANNER	1
50	0104T010	3WF-3-2.3	RUBBER CRANK CASE	1
51	01068020	GB/T93 8-5	WASHER	1
52	01068019	GB/T97.1 5.3	WASHER	2
53	01010004	1E40FP-3Z-1.6	FRONT CRANKCASE	1
54	01068005	GB/T93 6	WASHER	1
55	01068016	GB/T95 6	WASHER	1
56	0104T015	3WF-3-16	LEVER TILT ROPE	1
57	0104T016	3WF-3-34	THROTTLE ROD	1
58	0104T019	3WF-3-5	HANDLE	1
59	0104T007	3WF-3-6	CONNECTOR	1
60	0104T022	3WF-3-4	PLATE	1
61	01046002	3WF-3-12	GRADUATOR	1
62	01046015	DUST ROD		2
63	0104T002	3WF-3-1.1	CONNECTOR	1
64	01046003	3WF-3-1.2	NUT	2

NO.	ERP NO.	PART NO.	PART NAME	QTY.
65	0104T018	3WF-3-17	PLATE PIPE	1
66	0104T005	3WF-3-2.4	GASKET	2
67	0104T023	3WF-3-16-1	BELT COMPONENT	1
68	0104T024	3WF-3-19-1	NUT AMSM WASHER	2
69	0104T025	3WF-3-19-2	FILTER	2
70	0104T026	3WF-3-19-3	CHECKING TANK	1
71	0104T027	3WF-3-19-4	SEALING WASHER	6
72	0104T028	3WF-3-22	CONNECT LID	2
73	0104T029	3WF-3-20-1	CONNECTOR	1
74	0104T030	3WF-3-20-2	NUT	1
75	0104T014	3WF-3-17-1	AIR VALVE	1
76	0104T031	3WF-3-17-2	OUTSIDE WASHER	1
77	0104T032	3WF-3-17-3	FILTER	1
78	0104T033	3WF-3-17-4	SEALING TANK	1
79	0104T034	3WF-3-17-5	AIR PIPE	1
80	0104T035	3WF-3-17-6	CONNECT LID	1
81	0104T036	3WF-3-17-7	NUT	1
82	0104T037	3WF-3-12-1	MISTING PIPE	1
83	0104T038	3WF-3-12-2	SEALING WASHER	1
84	01010063	GB/T97.1 6.3	WASHER	2
85	01010071	GB/T65 M6	SCREW	2
86	0104T001	3WF-3-2	SCREW ASSEM	2
87	0104T039	3WF-3-23	PLUG	1
88	0104T040	3WF-3-23-2	ROCKET SHAFT	1
89	0104T041	3WF-3-23-4	PLUG	1
90	0104T042	3WF-3-23-4	SCREW	2
91	0104T043	3WF-3-23-5	NOZZLE	1
92	0104T044	3WF-3-23-6	NOZZLE PIECE	1
93	0104T045	3WF-3-23-7	NOZZLE PIECE	1
94	01108002	GB/T902.1 M5×16	SCREW ASSEM	2
95	0104T046	3WF-3-10	BRACKET	1
96	0104T047	3WF-3-10-1	CLAMP	1

HYAGRO

3WF-3/3A MIST DUSTER (1E40FP-3Z ENGINE)





49	CYLINDER



46	FLANGE



7	CARBURETOR



93	NET COVER




114	IMPELLER



2	FILTER



1	OUTSIDER COVER

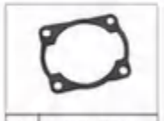

42	SEALING WASHER



41	PISTON RING



40	PISTON




33	STARTER



21	FRONT CRANK CASE



29	CRANK SHAFT

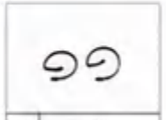

38	RING



39	PISTON PIN



26	SEALING WASHER



30	BACK CRANKCASE



17	ROTOR



9	WINDING



59	SPARK PLUG



50	COVER



56	MUFFLER



111	VOLUTE CASE



116	NUT



154	BEND PIPE



156	HOSE



157	CLIP ASSEM



160	PIPE



162	LONG BEND PIPE



166	SHOT PIPE



122	PROTECTION



31	RATCHET





175	HANDLE



177	CLAMP



178	BUTTON ASSEM



181	COCK ASSEM



152	DUSTING PIPE

112	RUBBER PILLER

185	FUELTANK

143	TANK LID/TANK FILTER

	MISTING PIPE

144	SEALING WASHER

150	LID

137	FILTER

133	LID

142	TUBE

180	TUBE


83	THROTTLE ROPE

91	PULLING ROD

65	RUBBER PILLER

63	FLAME

67	BACK MAT

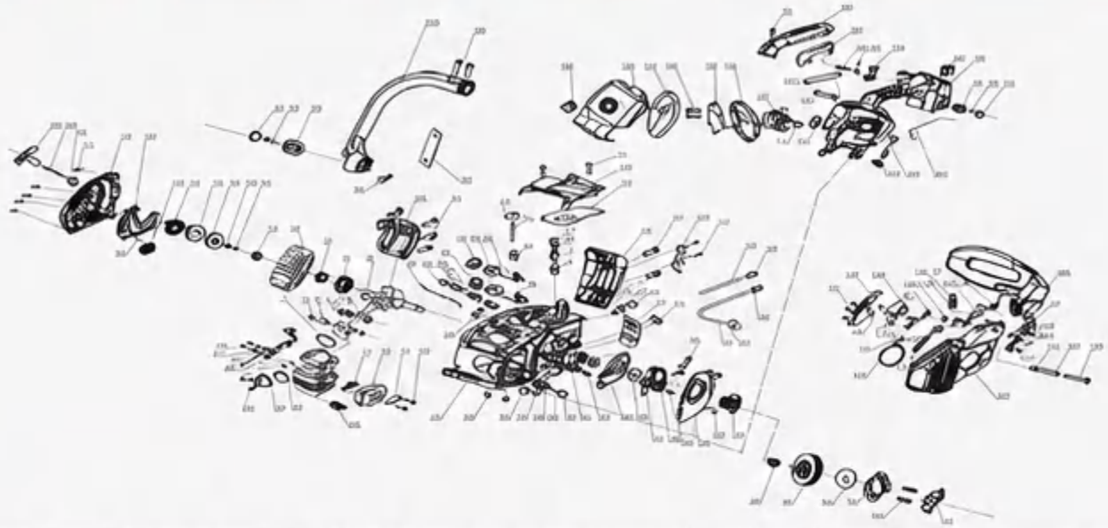

NO.	ENGLISH NAME	QTY	NO.	ENGLISH NAME	QTY	NO.	ENGLISH NAME	QTY
1	CRANK SHAFT ASS'Y	1	49	GEAR WORM	1	99	PAPER GASKET	1
2	NEEDLE BEARING-BALL	1	50	BEARING-NEEDLE	1	100	COVER-TOP	1
3	RING SNAP	2	51	COVER-DRUM CLUTCH	1	101	REAR HANDLE	1
4	PISTON	1	52	WASHER-DRUM CLUTCH	1	102	SWITCH STOP	1
5	PISTON PIN	1	53	CLUTCH SUPPORT	2	103	TRIGGER	1
6	SNAP RING	2	54	SPRING-DRUM CLUTCH	1	105	SPRING-TRIGGER	1
7	PINSTON RING	1	55	CLUTCH RETAINER	1	106	COTTER PIN 5*2S	1
8	DOWDOWEL FKS*3*10	2	56	OIL VACUOLE-CARBURETOR	1	107	LEVER-SAFETY TRIGGER	1
9	6001 BEARING-BALL	1	57	BOOT-INTAKE	1	108	COVER-REAR HANDLE	1
10	RIGHT OIL RING 12*22*4.5	1	58	TIE OI-HOSE OIL	2	109	HOSE OIL CARBURETOR	2
11	LEFT OIL RING 12*22*6	1	59	OIL TUBE-RETURN	1	110	HOSE PULSE-CARBURETOR	1
12	FLY-WHEEL	1	61	HOSE AIR GASKET	1	112	CARBURETOR	1
13	SCREW M6*1	1	62	PLATE-BAR	1	113	SPONG-CARBURETOR	1
14	CYLINDER	1	63	SCREW ST4.2*11	1	114	AIR FILTER-A	1
15	SUPPORT CYLINDER	1	64	VALVE VENT	1	115	COVER-AIR FILTER	1
16	SCREW M5*20	4	65	AERATE SPIGOT RING -SNAP	1	116	PLATE	1
17	WASHER MUFFLER	1	66	AERATE SPIGOT SPONGE	1	117	SCREW ST4.2*16	2
18	MUFFLER	1	67	SCREW ST6*13	2	118	SCREW M6*44	2
19	SHIELD-MUFFLER	1	68	WOOD CATCHER	1	119	AIR FILTER-B	1
20	SCREW M5*40	2	70	SUPPORT-BALANCE	1	120	COVER-AIR FILTER	1
21	SPARK PLUG	1	71	BALANCER UPPER	1	121	KNOB-AIR FILTER	1
22	HOSE-AIR	1	72	VALVE-VENT	1	122	GROMMET-CHOKE KNOB	1
23	SCREW M4*14	4	73	BALANCER LOWER	1	123	CHOKE KNOB	1
24	PAD-ELECTRIC IGNITION	2	74	FILTER	1	124	ROD THROTTLE	1
25	ELECTRIC IGNITION	1	75	CLUTCH SUPPORT	1	125	HANDLE	1
26	WIRE-STOP	1	76	HOSE OIL	1	126	LEVERAGE	1
27	WASHER 4	2	77	SUPPORT-HOSE OIL	1	127	PUSHER-SPRING(BRAKE)-B	1
28	GASKET 2	2	78	FUEL -CAP	1	128	STRAIGH PIN 3*14	1
29	SCREW M4*20	2	79	FUEL GASKET	1	129	STRAIGH PIN 3*9	2
30	SCREW M4*14	1	80	FUEL PAT	1	130	PIN-LEVERTL	1
31	SCREW ST4.8*13	1	81	OIL-CAP	1	132	HANDLE	1
32	SAFETY BELT	1	82	GASKET-OIL CAP	1	126	LEVERAGE	1
33	SCREW M5*20	1	83	SCREW ST4.8*16	1	132	PUSHER-SPRING(BRAKE)-B	1
34	CRANK CASE	1	84	OIL FILTER TOIL	1	128	STRAIGH PIN 3*14	1
35	HEXAGON RING SPANNER M5*14	1	85	OIL FILTER	1	129	STRAIGH PIN 3*9	2
36	ROD THRO	1	86	SUPPORT-HOSE CHAIN OIL	1	130	PUSHER-SPRING(BRAKE)-A	1
37	SCREW ST4.2*13	2	87	WIRE-GROUND	1	131	PIN-LEVERAGE	1
38	PAD RUBBER	3	88	HANDEL-SATARTER	1	132	PIN LEVERAGE	1
39	SCREW ST4.8*16	5	89	ROPE-STARTER	1	133	SCREW MS*10	1
40	PLUG-PAD	3	90	GUIDE BUSH-ROPE	1	134	BRAKE HOUSING ASS'Y	1
41	CHAIN CATCHER	1	91	SCREW ST4.2*16	8	135	COMPRESS SPRING-LEVERAGE	1
42	SCREW ST5.5*16	1	92	HOUSING-STARTER	1	136	LEVERAGE-BRAKE	1
43	SPONG-WASHER OIL PUMP	1	93	BAFFLER--FAN	1	137	SUPPORT SPRING	1
44	WASHER OIL PUMP	1	94	HOSE AIR SEAT	1	138	COMPRESS SPRING-LEVERAGE	1
45	OIL PUMP	1	95	SPRING-STARTER	1	139	SPRING-LEVERAGE	1
46	HOSE-CHAIN OIL OUTGONG	1	96	COVER-SPRING-STARTER	1	140	NYLON NUT MS	1
47	WASHER OIL PUMP	1	97	PULLEY-STARTER	1	141	SCREW CHAIN ADJUSTING	1
48	SHIELD-OIL PUMP	1	98	GBT760V4ASHERS(5*16)	1	142	TOOTH-CHAIN ADJUSTING	1
						143	SCREW CHAIN ADJUSTING	1
						148	BAND BRAKE	1

CS2500
CHAIN SAW




1 CRANK SHAFT ASS'Y


2 6201 BEARING-BALL


3 NEEDLE BEARING-BALL


4 41SX6I7


14 CYLINDER


21 SPARK PLUG


25 ELECTRIC IGNITION


12 FLY-WHEEL


15 SUPPORT CYLINDER


17 WASHER MUFFLER


18 MUFFLER


19 SHIELD-MUFFLER


45 OIL PUMP


48 HOSE-CHAIN OIL OUTGONG


95 SPRING-STARTER


51 COVER-DRUM CLUTCH


52 WASHER-DRUM CLUTCH


75 CLUTCH SUPPORT


34 CRANK CASE


144 PLATE BAR


62 PLATE-BAR


41 CHAIN CATCHER


56 OIL VAUOULE-CARBUR


86 HOSE CHAIN OIL


102 SWITCH STOP


81 OIL-CAP


127 PUSHER-SPRING


99 PAPER GASKET


100 COVER-TOP


101 REAR HANDLE


124 ROD THROTTLE


108 COVER-REAR HANDLE


107 LEVER-SAFETY TRIGGER


FRONT BAFFLE


112 CARBURETOR


114 AIR FILTER-A


115 COVER-AIR FILTER


130 COVER-AIR FILTER

120 KOVER-AIR FILTER

121 KNOB-AIR FILTER

STARTER ASS'Y

121 KNOB-AIR FILTER

89 ROPE-STARTER

97 PULLEY-STARTER

125 HANDLE

134 BRAKE HOUSING ASS'Y

148 BAND BRAKE


135 COMPRESS SPRING-LEVERAGE

SPRING-TRIGGER

136 LEVERAGE-BRAKE

139 SPRING-LEVERAGE

THE PARTS LIST OF MODEL CS5200/4600/4500

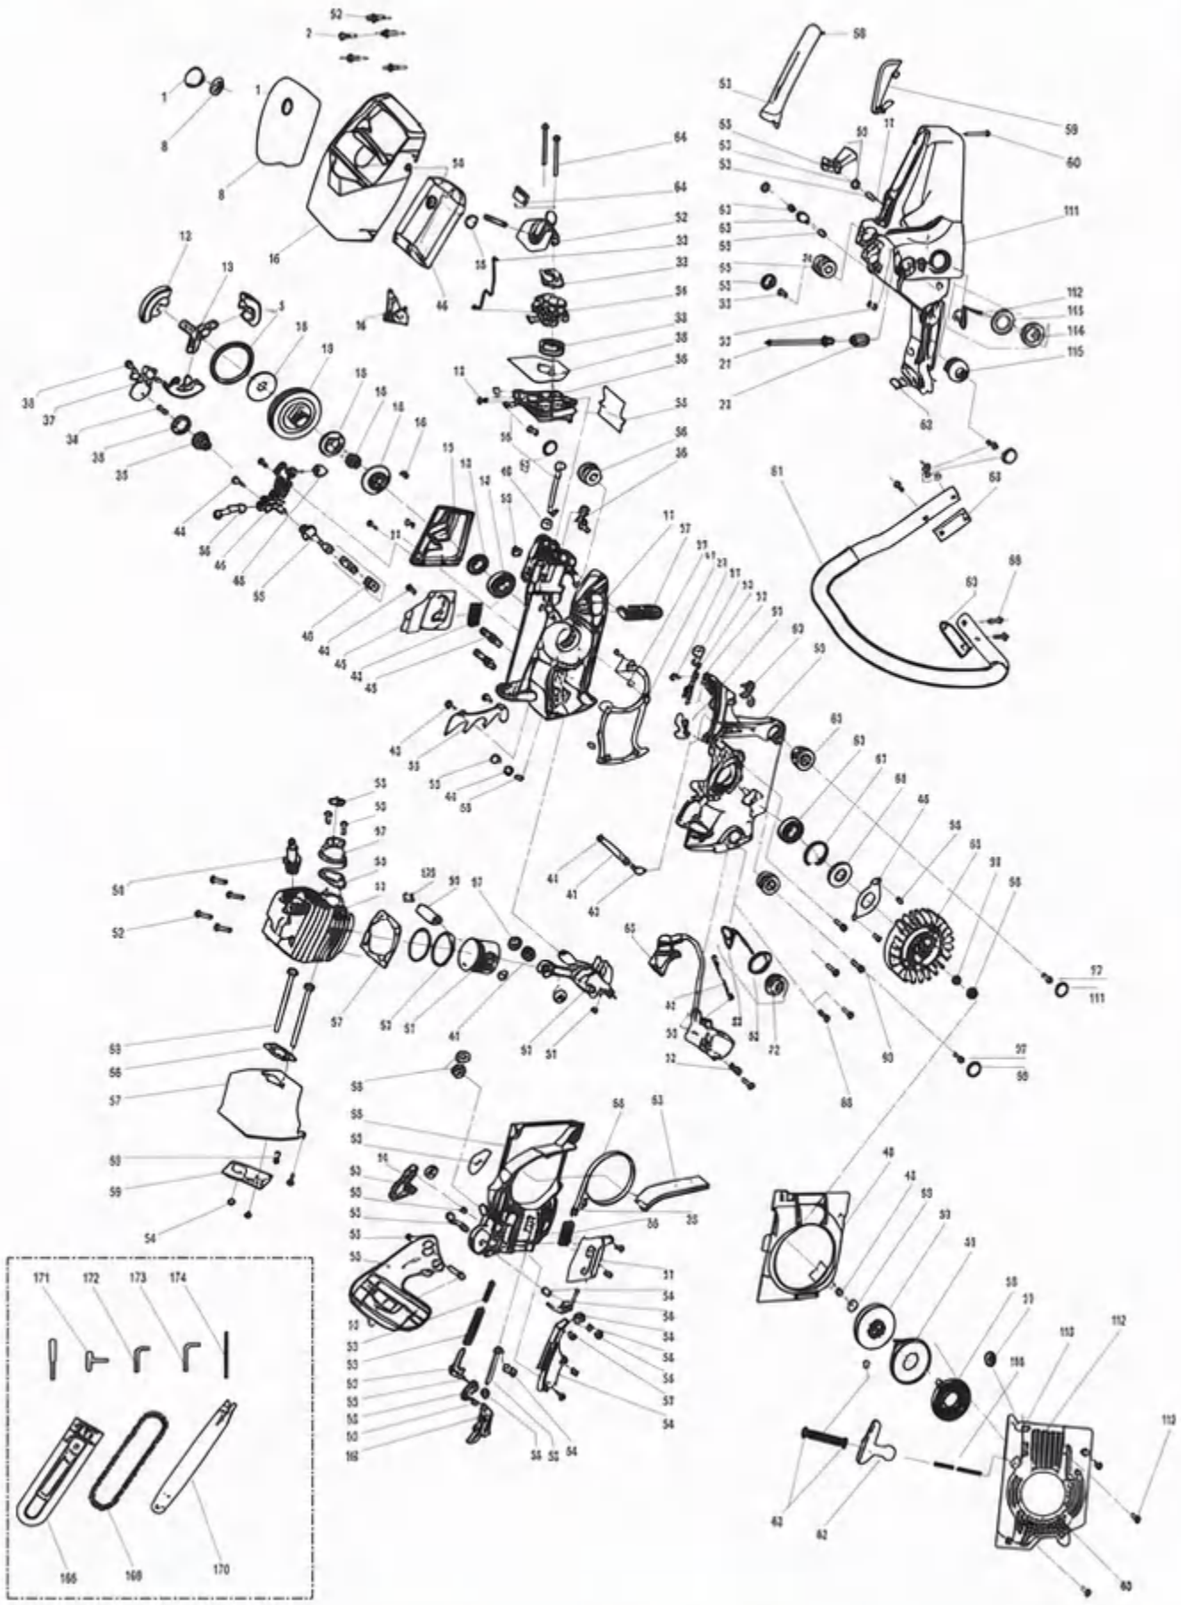

No.	ENGLISH NAME	QTY.
1	EYELET-CARBURETOR	1
2	SCREW T M5*14	15
3	BOOT-INTAKE	1
4	GASKET-INTAKE	1
5	CYLINDER	1
6	SPARK PLUG	1
7	SCREW T M6*20	7
8	BOLT M6*8-MUFFLER	2
9	GASKET-MUFFLER	1
10	MUFFLER	1
11	SCREW T M5*10	3
12	SHIELD-MUFFLER	1
13	NUT M6	2
14	GASKET-CYLINDER	1
15	RING-PISTON	2
16	PISTON	1
17	PIN-SNAP D11	1
18	PIN-PISTON D11*34	1
19	WASHER-SPACER PISTON	2
20	BEARING-NEEDLE CONROD	1
21	CRANK SHAFT-CONROD ASSY	1
22	KEY-FLYWHEEL	1
23	WIRE-SWITCH	1
24	ELECTRONIC IGNITION	1
25	OIL CAP-LINKER	1
26	GASKET-FUEL CAP	1
27	OIL CAP	1
28	SCREW T M5*25	2
29	SCREW T M5*30	3
30	NUT M8*1	1
31	WASHER 8	1
32	FLY-WHEEL-ASSY	1
33	SCREW T M6*16	2
34	PLATE	1
35	SEAL OIL 15* 35*4.5	1
36	SEAL OIL 15* 28*4.5	1
37	SNAP RING ø36	1
38	BEARING-BALL 35*15	2
39	PAD-RUBBER CUSHIONING(LOWER)	1
40	LEFT CRANK	1
41	BUMPER-RUBBER(REAR LEFT)	1
42	GROMMET-OUTER	1
43	SWITCH-STOP	1
44	RETAINER SWITCH	1
45	GROMMET-RUBBER(SWITCH)	1
46	GASKET-CRANK CASE	1
47	PIN D 6	3
48	GASKET-RUBBER	1
49	RIGHT CRANK	1
50	BUMPER-RUBBER(REAR RIGHT)	1
51	GASKET-SUPPORT CARB	1
52	SUPPORT CARBURETOR	1
53	GASKET-CARBURETOR	1
54	FLANGE-CARBURETOR	1
55	CARBURETOR	1
56	ROD-THROTTLE	1
57	GROMMET-INNER	1
58	CAP-RUBBER	1

No.	ENGLISH NAME	QTY.
59	SCREW M5*18	2
60	STUD-BAR	1
61	FILTER-AIR	1
62	CHOKE KNOB	1
63	CHOKE KNOB	1
64	COVER-AIR FILTER YWILLOW	1
65	COVER-OIL PUMP	1
66	SCREW M4*12	3
67	GEAR-WORM	1
68	BEARING-NEEDLE	1
69	SPROKET	1
70	PULLEY-CLUTCH	1
71	WASHER-CLUTCH	1
72	SPRING-CLUTCH	1
73	PRESSURE SUPPORT	1
74	CLUTCH ASSY	3
75	AERATE SPIGOT	1
76	AERATE SPIGOT RING-SNAP	1
77	AERATE SPIGOT SPONGE	1
78	SPIKE	1
79	STUD-BAR	1
80	PAD-RIGHT	1
81	PLATE-BAR	1
82	SCREW M4*10	1
83	FILTER-FUEL	1
84	FILTER OIL	1
85	HOSE-OIL	1
86	SEAL-FOAM	1
87	OIL PUMP	1
88	CONNECTOR-OIL OUTLET	1
89	SCREW M4*12	2
90	SPRING-DAMPING	1
91	RING-PLASTIC	1
92	SCREW ST4.8*16	3
93	CHAIN CATCHER	1
94	HOSE-PULSE RING-SNAP	1
95	HOSE-PULSE(ASSY)	1
96	HOSE-PULSE(CTEY)	1
97	KNOB-AIR FILTER	1
98	GASKET-KNOB	1
99	COVER-AIR FILTER YWILLOW	1
100	COVER-TOP YELLOW	1
101	IDLING ADJUSTMENT SHEATH	1
102	PLUG-BAD	5
103	SCREW ST4.8*12	6
104	BAR-FEEL	1
105	JACKET	1
106	WASHER D6.5*16	1
107	PULLEY-STARTER	1
108	COVER-SPRING-STARTER	1
109	HANDLE-STARTER	1
110	SPRING-STARTER	1
111	GROMMET-OUTER	1
112	ROPE-STARTER	1
113	HOUSING-STARTER	1
114	OIL FILTER	1
115	METAL PLATE	1
116	HOSE-FUEL	1

No.	ENGLISH NAME	QTY.
117	GASKET-FUEL CAP	2
118	BOLT	2
119	PAD-RUBBER CUSHIONING(LOWER)	2
120	BALANCER OIL HOSE	1
121	BALANCER UPPER	1
122	VALVE-VENT	1
123	BALANCER LOWER	1
124	PIN	1
125	SPRING-TRIGGER	1
126	TRIGGER	1
127	COVER-REAR HANDLE	1
128	LEVER-SAFETY TRIGGER	1
129	SCREW ST5*19	1
130	TANK ASSY	1
131	LATCH-TRIGGER	1
132	SPRING-THROTTLE ADVANCE	1
133	BUTTON-THROTTLE ADVANCE	1
134	FUEL LINKER	1
135	FUEL GASKET	1
136	OIL-CAP	1
137	HANDLE-FRONT	1
138	LEVERAGE-BRAKE(MAIN)	1
139	PIN 3*9	2
140	LEVERAGE-BRAKE(ASSISTANT)	1
141	PIN 3*8	1
142	PLATE-BRAKE	1
143	SPRING-ACTUATION	1
144	SPRING-ACTUATION	1
145	PIN	1
146	LEVER-CHAIN BRAKE	1
147	RING-SNAP 3	1
148	PIN-LEVER	2
149	RING-SNAP 4	1
150	PLATE-BRAKE	1
151	RHOMBUS-BUMPER-RUBBER	1
152	BRAKE HOUSING	1
153	NUT M8	2
154	BAND-BRAKE	1
155	STRAP-RUBBER	1
156	PLATE-BAR	1
157	BUSHING	1
158	SPRING-BRAKE LEVER	1
159	GASKET-SUPPORT CARB	2
160	WASHER-RUBBER	1
161	SCREW ST4.2*9.5	5
162	COVER BRAKE	1
163	SPROCKET-CHAIN ADJUSTING	1
165	SCREW CHAIN ADJUSTING	1
166	TOOTH-CHAIN ADJUSTING	1
167	BUMPER-RUBBER(FRONT)	1
167	GUIDE BAR	1
168	SAW CHAIN	1
169	BAR PROTECTOR	1
170	SCREWDRIVER FOR CARBURETOR ADJUSTMENT	1
171	HEXAGON RING SPANNER T4	1
172	HEXAGON RING SPANNER T3	1
173		



CS4500/ 4600/5200 CHAIN SAW


CS4500 / 4600 / 5200 CHAIN SAW PARTS

HYAGRO



CYLINDER (4500)	CYLINDER (4600)	CYLINDER (5200)	4 GASKET-IN TAKE	3 BOOT-IN TAKE	1 INTAKE BRACKET	53 GASKET-CARBURETOR
55 CARBURETOR	6 SPARK PLUG	10 GASKET-MUFFLER	10 MUFFLER	12 SHIELD-MUFFLER	1 151/161/171B PISTON ASSY	21 CRANK SHAFT
24 ELECTRONIC IGNITION	32 FLY-WHEEL ASSY	104 BAFFLER-FAN	107 PULLEY-STARTER	108 COVER-SPRING-STARTER	110 SPRING-STARTER	113 HOUSING-STARTER
(4600) 113 HOUSING-STARTER	(5200) 113 HOUSING-STARTER	109 HANDLE-ATARTER	159 GASKET-SUPPORT CARB	81 PLATE-BAR	93 CHAIN CATCHER	88 CONNECTOR-OIL OUTLET
87 OIL PUMP	88 CONNECTOR-OIL OUTLET	85 HOSE-OIL	84 FILTER OIL	65 COVER-OIL PUMP	73 PRESERVE SUPPORT	74 WASHER-CLUTCH
70 DRUM-CLUTCH	CHOKE KNOB 63 CHOKE KNOB	56 ROD-THROTTLE	69 SPROKET	116 HOSE-FUEL	114 OIL FILTER	127 COVER-REAR HAND
26 OIL-CAP	130 TANK ASSY	46 GASKET-CRANK CASE	154 BAND-BRAKE	125 SPRING-TRIGGER	142 PLATE-BRAKE	156 PLATE-BAR
152 BRAKE HOUSING	61 FILTER-AIR	98 COVER-AIR FILTER	98 COVER-AIR FILTER	98 COVER-AIR FILTER	97 KNOB-AIR FILTER	97 KNOB-AIR FILTER

142F GASOLINE ENGINE BODY PARTS

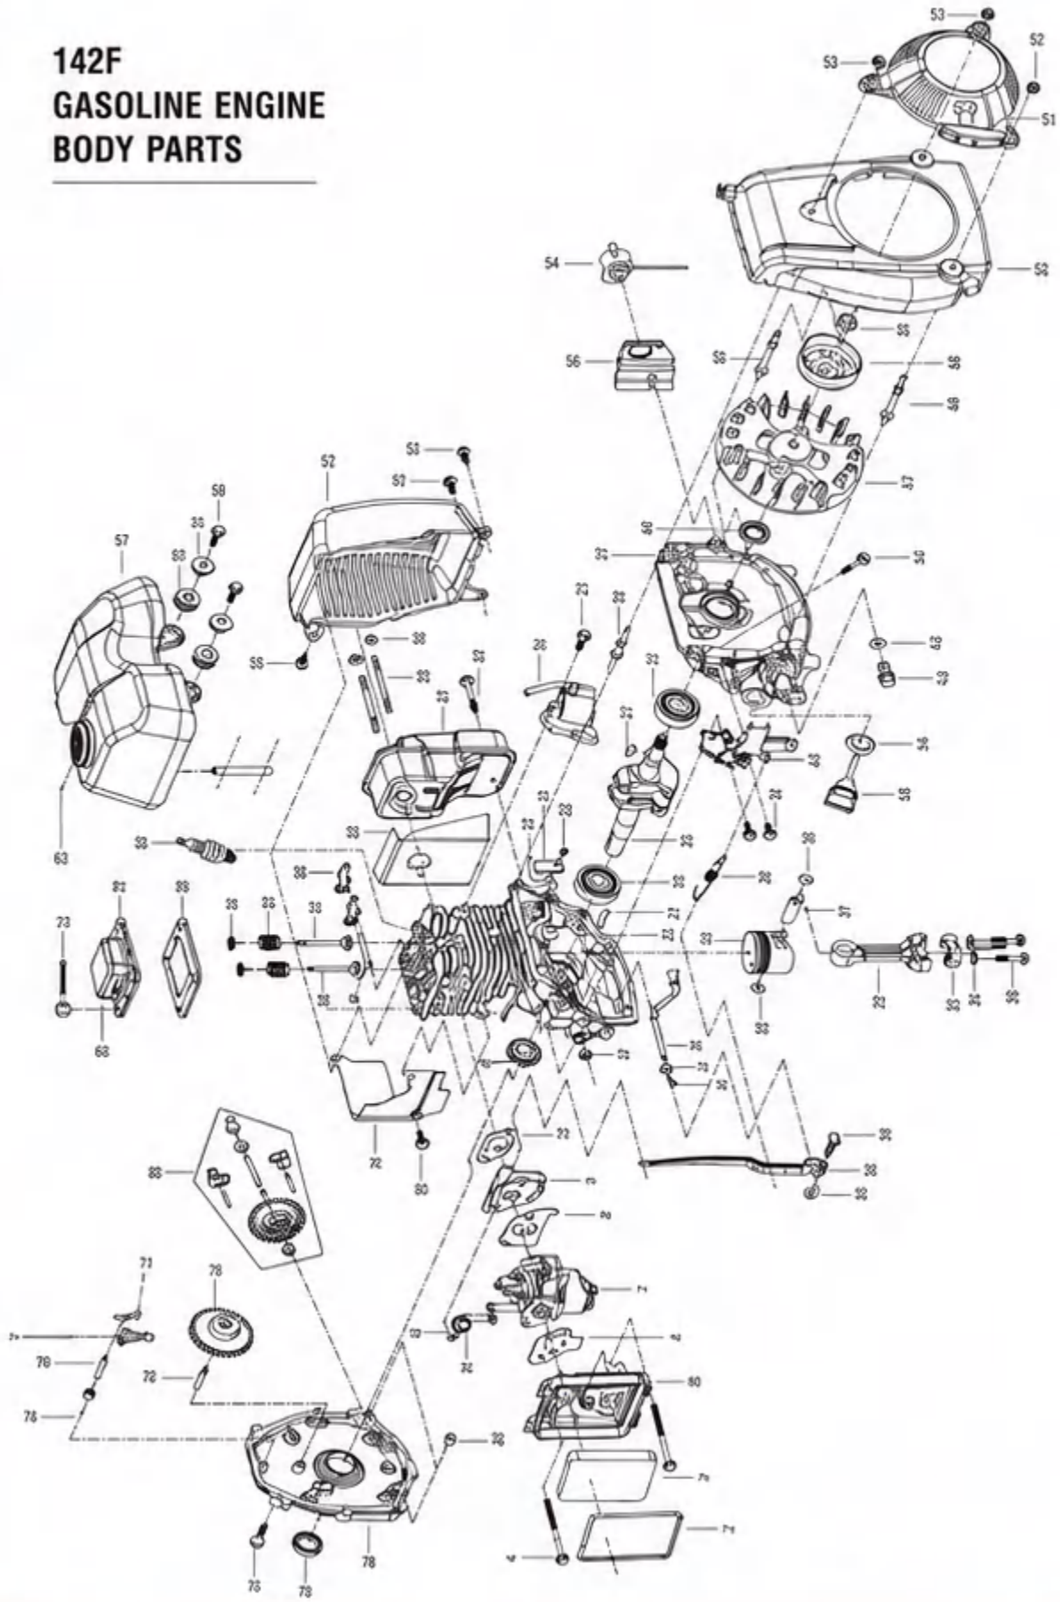


142F GASOLINE ENGINE SPARE PARTS

SER. NO.	PART NO.	PART NAME	QTY.
1	142F. 1	Cleaner Cover	1
2	GB862.1-1	O-Sealing Ring	1
3	142F.1-2	SCREW M5×15	2
4	GB5789	Piston	1
5	142F.3-1	Piston Pin	1
6	142F.3-2	Link Lever Cover	1
7	GB8798	SCREW M5×25	2
8	142F.4-1	Gasket	1
9	142F.4-2	Gasket	1
10	142F.5-1	Gasket	1
11	142F.6-1	Gasket	1
12	142F.6-2	Spring	1
13	GB8798	Screw M5×12	1
14	142F.7-1	Pipe	1
15	142F.7-2	SCREW M5×25	2
16	GB6177.2	Oil Scale	1
17	142F.8-1	Gasket	1
18	GB5789	Bolt	1
19	142F.12-1-5	Throttle Lever Ass'y	1
20	GB770.2-3	Spring	1
21	142F.12-2	Screw	1
22	GB6170.1	Screw M6×20	1
23	142F.12-3	Direction Button	1
24	142F.12-4	Spring	1
25	GB859	Button	1
26	142F.12-5	Nut M6	1
27	142F.12-6	SCREW M6×16	3
28	142F.12-7	Flywheel Cover	1
29	142F.12-8	Nut M6	1
30	GB/T267	Flywheel	1
31	142F.13-1	Crank Case	1
32	GB/T276	Oil Seal	1
33	142F.13-2	Stud	2
34	142F.13-3	Gasket	1
35	GB/T276	Oil Seal	1
36	142F.14-1	Connecting Pipe	1
37	142F.14-2	Gasket	1
38	142F.14-3	Gasket	1
39	142F.15	Spark Plug	1
40	142F.16	Gasket	1
41	142F.17-1	SCREW M6×12	1
42	GB/T95	Washer 6	5
43	GB93.1-10	Spring Washer 6	1
44	142F.17-2	Spring	1
45	142F.18	SCREW M5×16	2
46	142F.19-1	Reed Valve	1

SER. NO.	PART NO.	PART NAME	QTY.
47	142F.19-2	Gasket	1
48	GB/T802	Nut M5	2
49	142F.20	Cylinder Head	1
50	142F.21	Fuel Tank Bush	1
51	142F.22	Fuel Tank Cap	1
52	142F.23	Fuel Tank Lid	1
53	142F.23-1	Fuel Tank Support	1
54	142F.24	Fuel Tank Gasket	1
55	142F.25-1	Collar	1
56	142F.25-2	Fuel Tank Bush	1
57	GB/T9074.13	SCREW M5×20	2
58	142F.26	Valve Pole	1
59	142F.26-1	Valve Pole Collar	1
60	142F.27	Air Filter Pool	1
61	142F.27-1	Air Filter Pin	1
62	142F.27-2	Choke Lever	1
63	142F.28	Intake Pipe	1
64	142F.29	Gasket	1
65	142F.29-1	Stud	2
66	GB6177.1-6	Nut M6	2
67	142F.30	Muffler Cover	1
68	142F.31	Side Cover	1
69	142F.32	Nut M8	1
70	GB/T6171.1-6	Nut M6	2
71	142F.33	Recoil Starter	1
72	142F.34	Starter Gasket	1
73	142F.35	Starter Pin	1
74	142F.36	Spring	1
75	GB/T802	Nut M6	3
76	142F.37-1	Double-Ended Bolt	2
77	GB5789	Bolt M6 × 8	2
78	142F.37-2	Muffler	1
79	142F.38	Air Filter Case	1
80	142F.38-1	Air Filter Element	1
81	142F.38-2	Air Filter Cover	1
82	142F.39-1	Air Filter Cover	1
83	142F.40	Air Filter Seal	1
84	142F.41	Lock Bolt	1
85	142F.41-1	Steel Nut M6	1
86	142F.41-2	Spring Washer 6	1
87	142F.42	Oil Seal	1
88	142F.42-1	Stud	2
89	142F.42-2	Stud	2
90	GB/T91	Pin	1
91	142F.6-5	Muffler	1
92	142F.17-1	Gasket	1

168F/170F GASOLINE ENGINE SPARE PARTS

HYAGRO

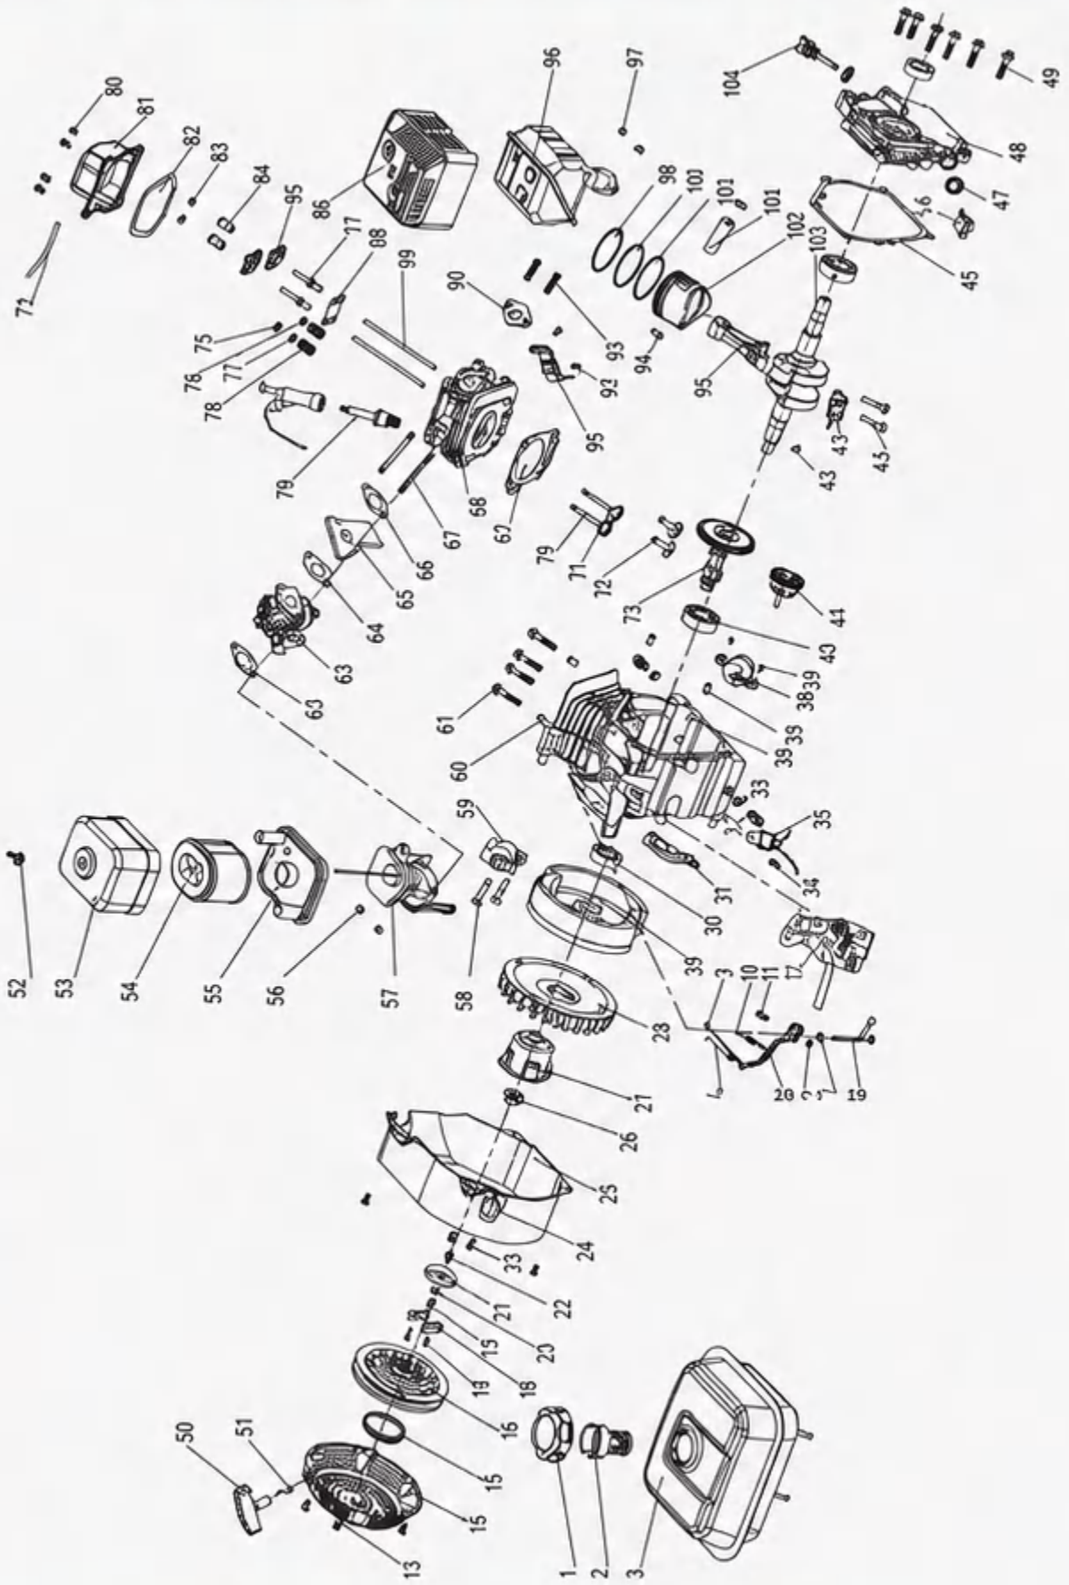

Type of equipment Machine Name	NO.	Chinese Name	English Name	Material	Type/Model		Designed by / Date	Remarks
					168F	170F		
Crankcase Cover Parts	1	气缸头罩	Cylinder Head Cover	Iron	1	1		
	2	气缸头罩垫片	Cylinder Head Cover Gasket	NBR	1	1		
	3	气缸头罩螺栓	Cylinder Head Cover Bolt	Steel	2	2		
	4	拉簧	Pulling Spring	Spring Steel	1	1		
	5	导风罩	Air Guide Cover	Iron	1	1		
	6	导风罩垫片	Air Guide Cover Gasket	NBR	1	1		
	7	调速板	Governor Lever	Steel	1	1		
	8	调速弹簧	Governor Spring	Spring Steel	1	1		
	9	调速拉杆	Governor Rod	Steel	1	1		
	10	调速杆组件	Governor Lever Assy	/	1	1		
	11	调速杆弹簧	Governor Lever Spring	Spring Steel	1	1		
	12	拉杆支架	Governor Lever Bracket	Iron	1	1		
Crankcase Body Parts	13	拉盘把手	Starter Grip	Plastic	1	1		
	14	拉盘	Starter Tray	Plastic	1	1		
	15	拉绳	Pulling Line	Nylon	1	1		
	16	拉绳弹簧	Pulling Spring	Spring Steel	1	1		
	17	起动器	Starting Pulley	Aluminum	1	1		
	18	棘爪	Pawl	Steel	2	2		
	19	飞轮	Flywheel	Iron	1	1		
	20	铁皮	Iron Sheet	Steel	2	2		
	21	火花塞	Spark Plug	/	1	1		
	22	火花塞垫圈	Spark Plug Gasket	Copper	1	1		
	23	点火线圈	Ignition Coil	/	1	1		
	24	点火线圈螺栓	Ignition Coil Bolt	Steel	2	2		
	25	油箱支架	Fuel Tank Bracket	Steel	1	1		
	26	燃油箱	Fuel Tank	Iron	1	1		
Cylinder Block Parts	27	油箱盖	Fuel Tank Cap	Plastic	1	1		
	28	燃油箱垫片	Fuel Tank Cap Gasket	NBR	1	1		
	29	燃油开关	Fuel Switch	Plastic	1	1		
	30	燃油管	Fuel Tube	Rubber	1	1		
	31	缸体组件	Cylinder Block Assy	Aluminum	1	1		
	32	缸体垫片	Cylinder Block Gasket	NBR	1	1		
	33	定位销	Pin	Steel	2	2		
	34	活塞	Piston	Aluminum	1	1		
	35	活塞环组件	Piston Ring Set	/	1	1		
	36	活塞销	Piston Pin	Steel	1	1		
	37	活塞销卡簧	Piston Pin Clip	Spring Steel	2	2		
	38	连杆	Connecting Rod	Steel	1	1		
	39	连杆螺栓	Connecting Rod Bolt	Steel	2	2		
	40	连杆螺母	Connecting Rod Nut	Steel	2	2		
	41	曲轴	Crankshaft	Steel	1	1		
	42	曲轴油封	Oil Seal	NBR	2	2		
	43	轴承	Bearing	/	2	2		
	44	键	Key	Steel	1	1		
	45	油封垫片	Oil Seal Gasket	NBR	1	1		
Ignition & Muffler Parts	46	凸轮轴	Camshaft	Steel	1	1		
	47	气门挺杆	Tappet	Steel	2	2		
	48	气门弹簧	Valve Spring	Spring Steel	2	2		
	49	气门弹簧锁片	Valve Spring Retainer	Steel	4	4		
	50	风门手柄	Choke Handle	Plastic	1	1		
	51	风门拉杆	Choke Rod	Steel	1	1		
	52	消音器	Muffler	Iron	1	1		
	53	消音器垫片	Muffler Gasket	NBR	1	1		
	54	排气管垫片	Exhaust Pipe Gasket	NBR	1	1		
	55	空气滤芯	Air Filter Element	Foam	1	1		
	56	空气滤器盖	Air Filter Cover	Plastic	1	1		
Carburetor Parts	57	化油器垫片	Carburetor Gasket	NBR	1	1		
	58	化油器	Carburetor	/	1	1		
	59~104	化油器组件	Carburetor Assy	/	1	1		